INSTALLATION INSTRUCTIONS





Warning:


- 1. Do not, drill, cut, weld or otherwise modify the towbar.
- 2. If you are using electric welding on a motor vehicle, <u>always</u> check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could <u>destroy</u> any onboard computers. If in doubt, check with the vehicle's manufacturer.

MAXIMUM TOW WEIGHT: 1200Kg MAXIMUM BALL WEIGHT: 120Kg

General:

- 1. Ensure all hardware items have been included
- 2. It is recommended that the instructions are read through and completely understood before making any attempt to fit this product.
- 3. Be wary of any changes to vehicle designs or other accessories that may conflict with the installation of this product.
- 4. Lift towbar into position, so that it aligns with the holes in the chassis & then fit four M14 bolts, washers & nuts.
- 5. Tighten all nuts & bolts to the specified torque listing.
- 6. The high tensile fasteners supplied with this product were used to achieve the specified rating. If replacement is required ensure that fasteners of the same rating & quality are used. Contact an authorised **Hayman Reese** dealer if further information is required.
- 7. Ensure that all hardware is fastened to torque list below check fasteners on regular basis.
- 8. Hayman Reese recommends that you check your tow ball to ensure that it complies with the Australian standards **AS 4177.2.**
- PLEASE NOTE: It is advised to remove your lug or TBM when not actually towing so as to produce a
 clear view of the vehicles registration plate if obscured, and to also provide maximum available
 departure angle.
- 10. Towbar load rating sticker provided with this product shall be conspicuously located on inside rear end of the driver's door. (See diagram below).

RECOMMENDED ASSEMBLY TORQUE LISTING	
Diameter	Grade 8.8 Bolt
M6	9.5 Nm
M8	21.7 Nm
M10	43.4 Nm
M12	77.3 Nm
M16	180 8 Nm

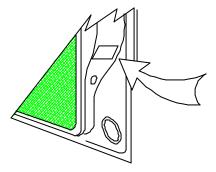

Place load rating sticker inside driver's door here

FOR TOWING PURPOSES ONLY


For towing capacity details please refer to vehicle owner's manual or to the manufacturer. Overloading can void your warranties.

INSTALLATION INSTRUCTIONS





RL2375 HITCH ASSEMBLY

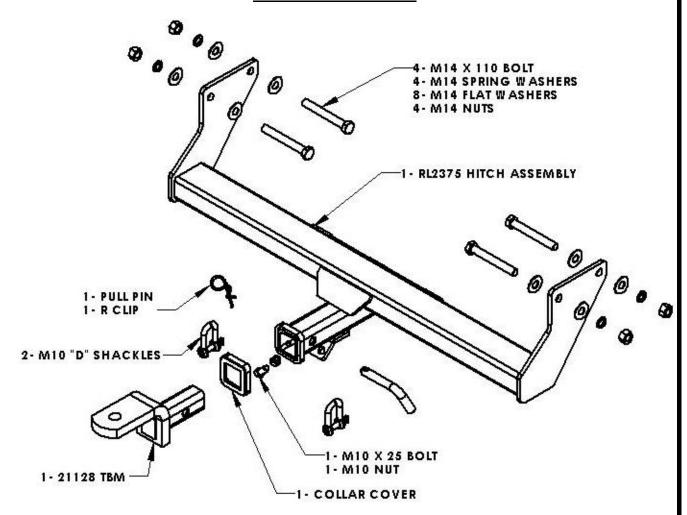

Tow bar Maintenance and Care.

Hayman Reese recommends that bolt torque's, as listed below, are routinely and regularly inspected and checked for correct tension. Replace any worn or defective parts.

We recommended to remove Tow Ball Mounts (TBM's, tongues or lugs) when not being used for any considerable length of time.

So as to avoid injury, when not towing it is suggested that the tongue, Pull Pin and R-clip are removed then stored in a safe, clean and dry place, away from excessive moisture.

Hitch Pull Pins and spring "R" clips are regularly checked for proper installation. Replace any worn or defective parts.