




ERICH JAEGER



# Installation instructions

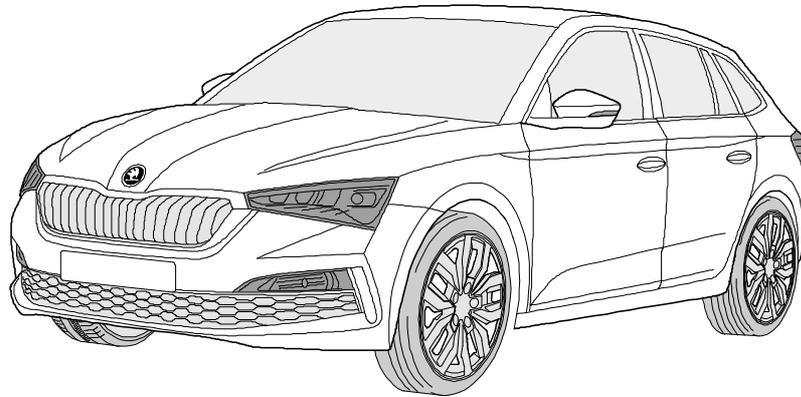

750071

SKODA Scala

05/19 >>

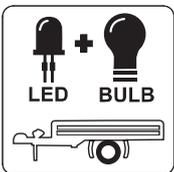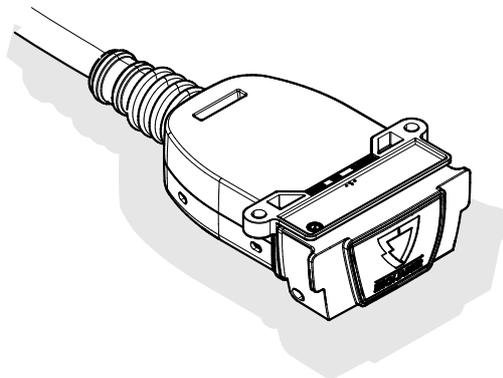

## Reference:

The following information must be reviewed before beginning the assembly:

The installation instructions are to be thoroughly read.


The installation should be carried out by qualified personnel with the relevant technical knowledge.

The vehicle manufacturers' current technical notices and information on retrofitting must be followed.






The removal and replacement instructions found in the current repair manuals must be followed.

It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.


# OVERVIEW

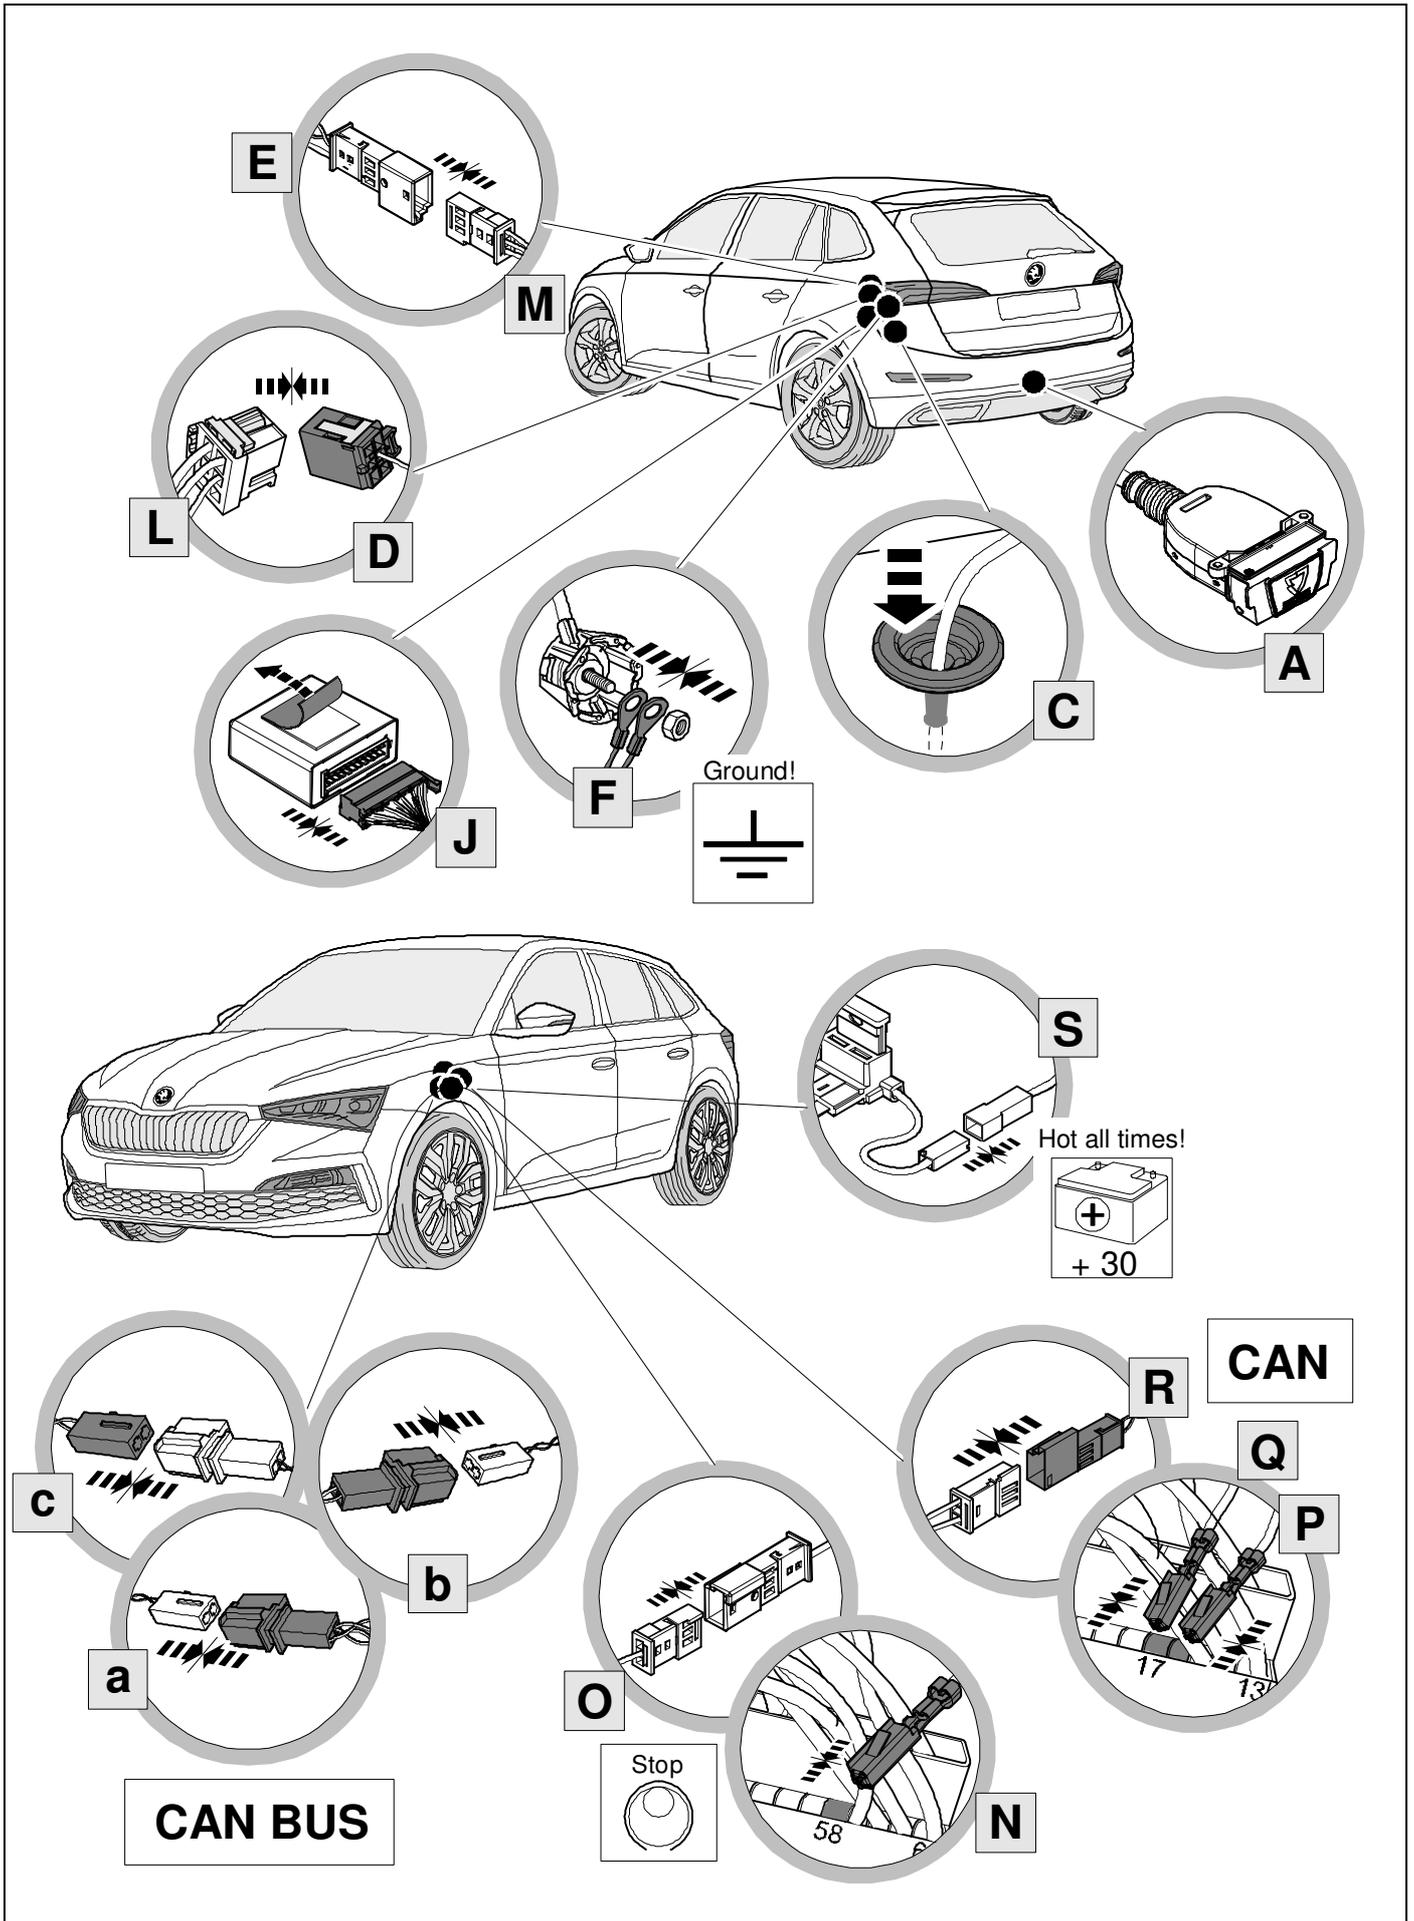


# KIT

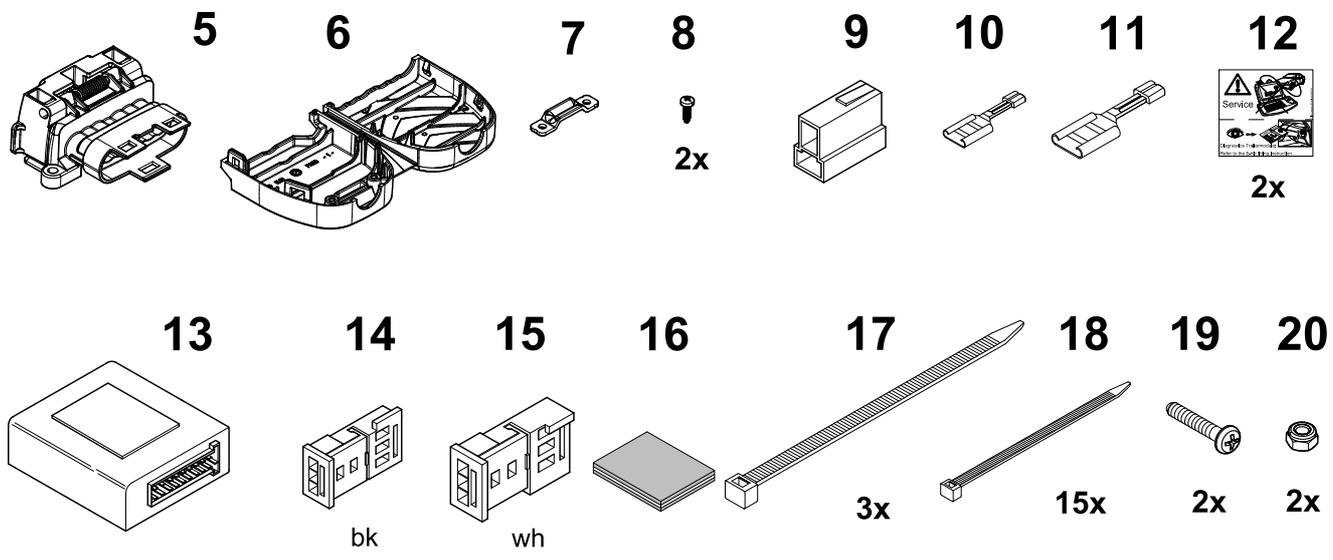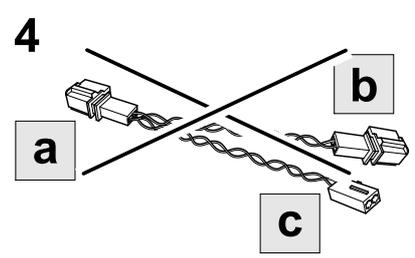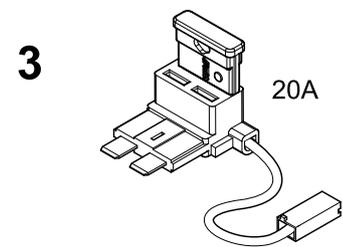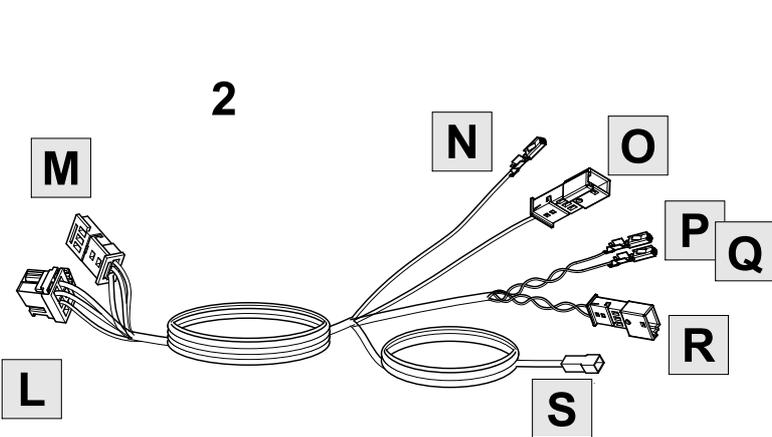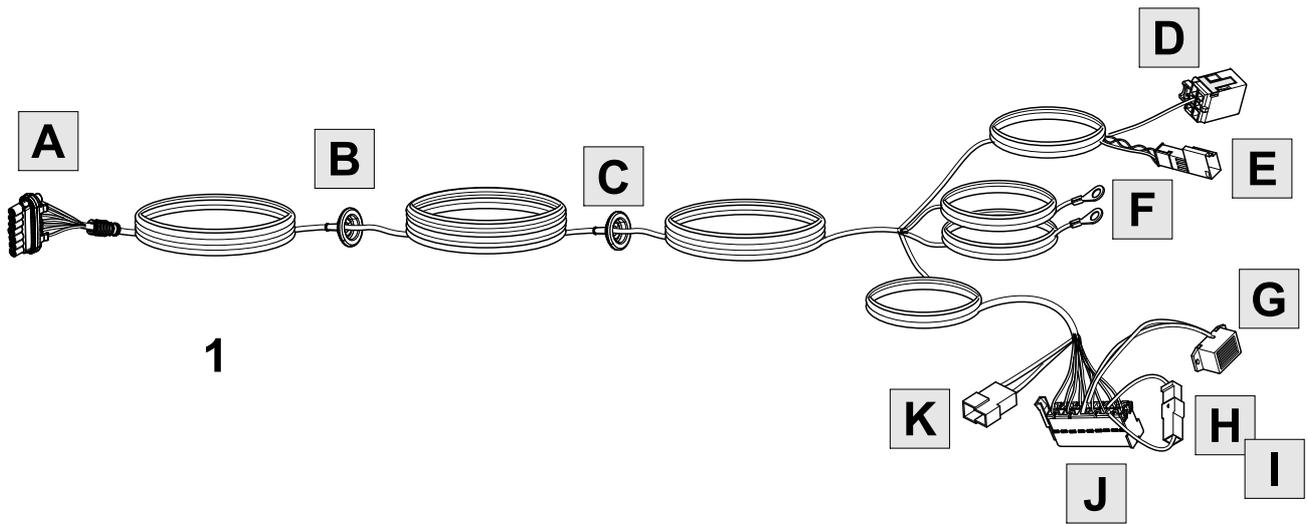










# TOOLS

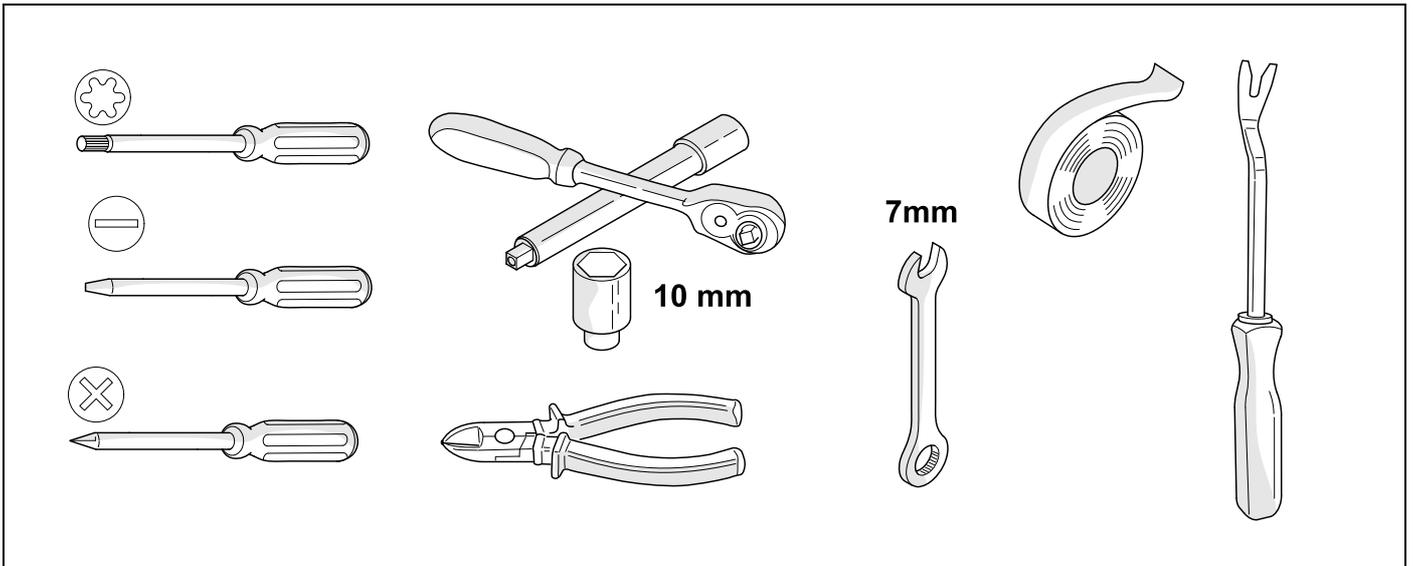


1

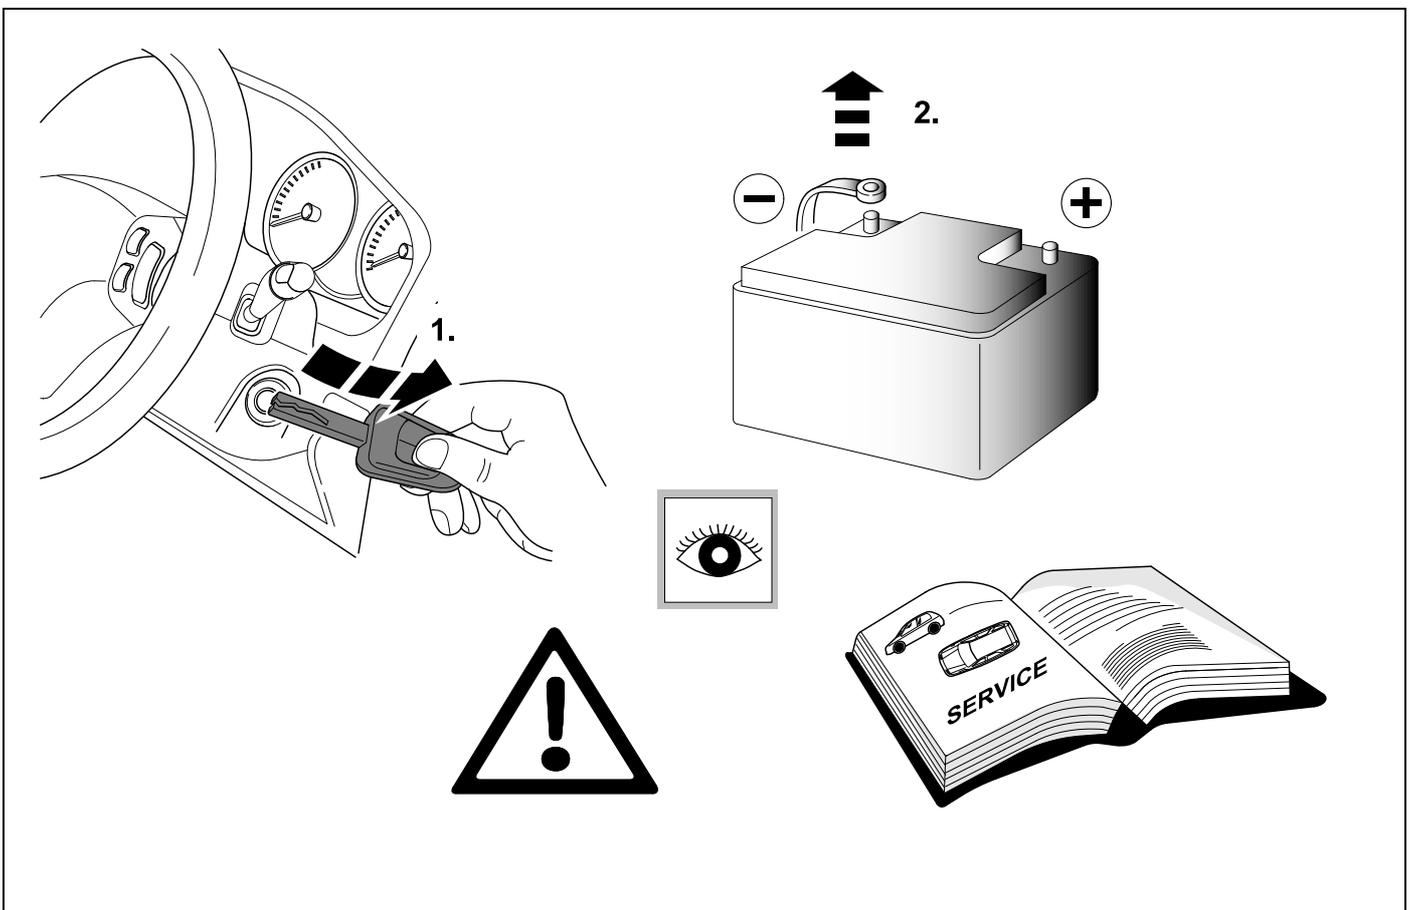


## 2 REMOVE

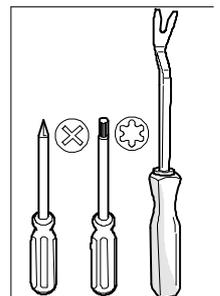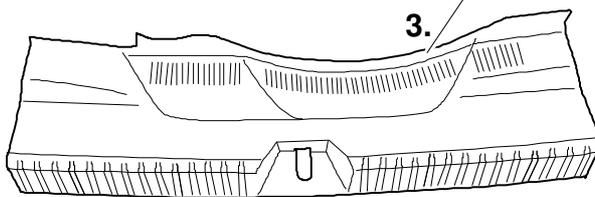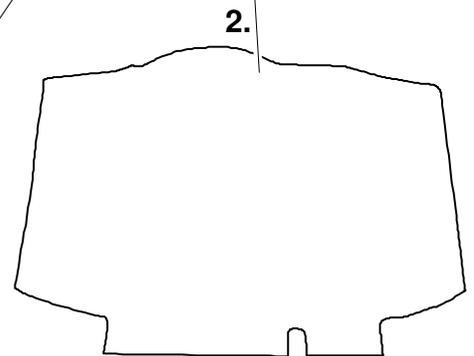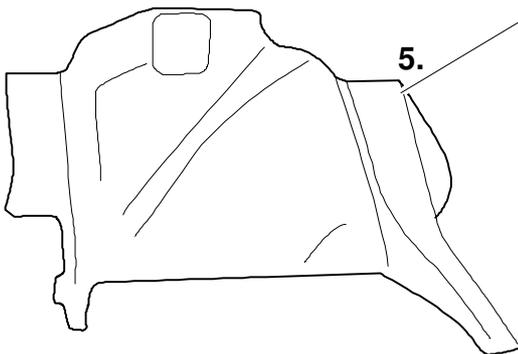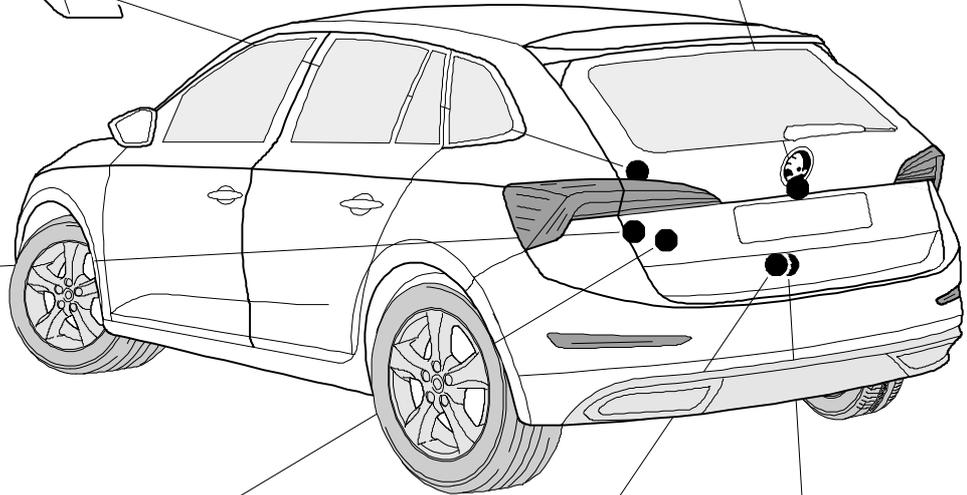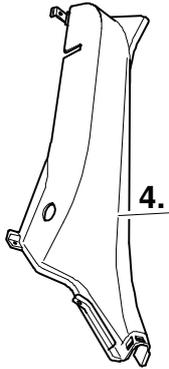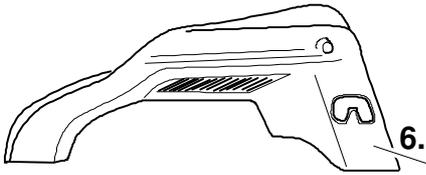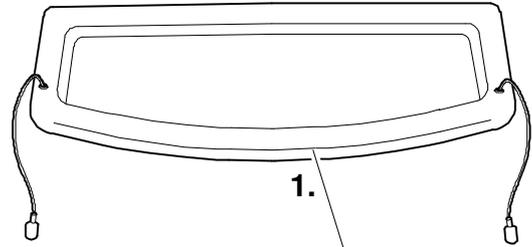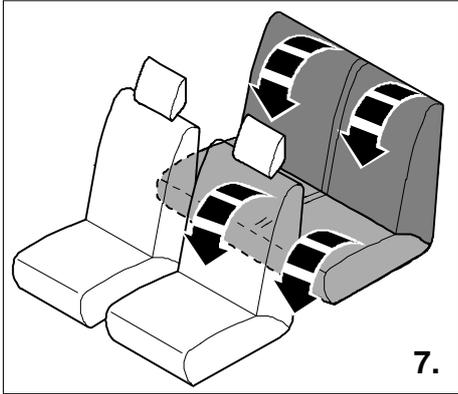

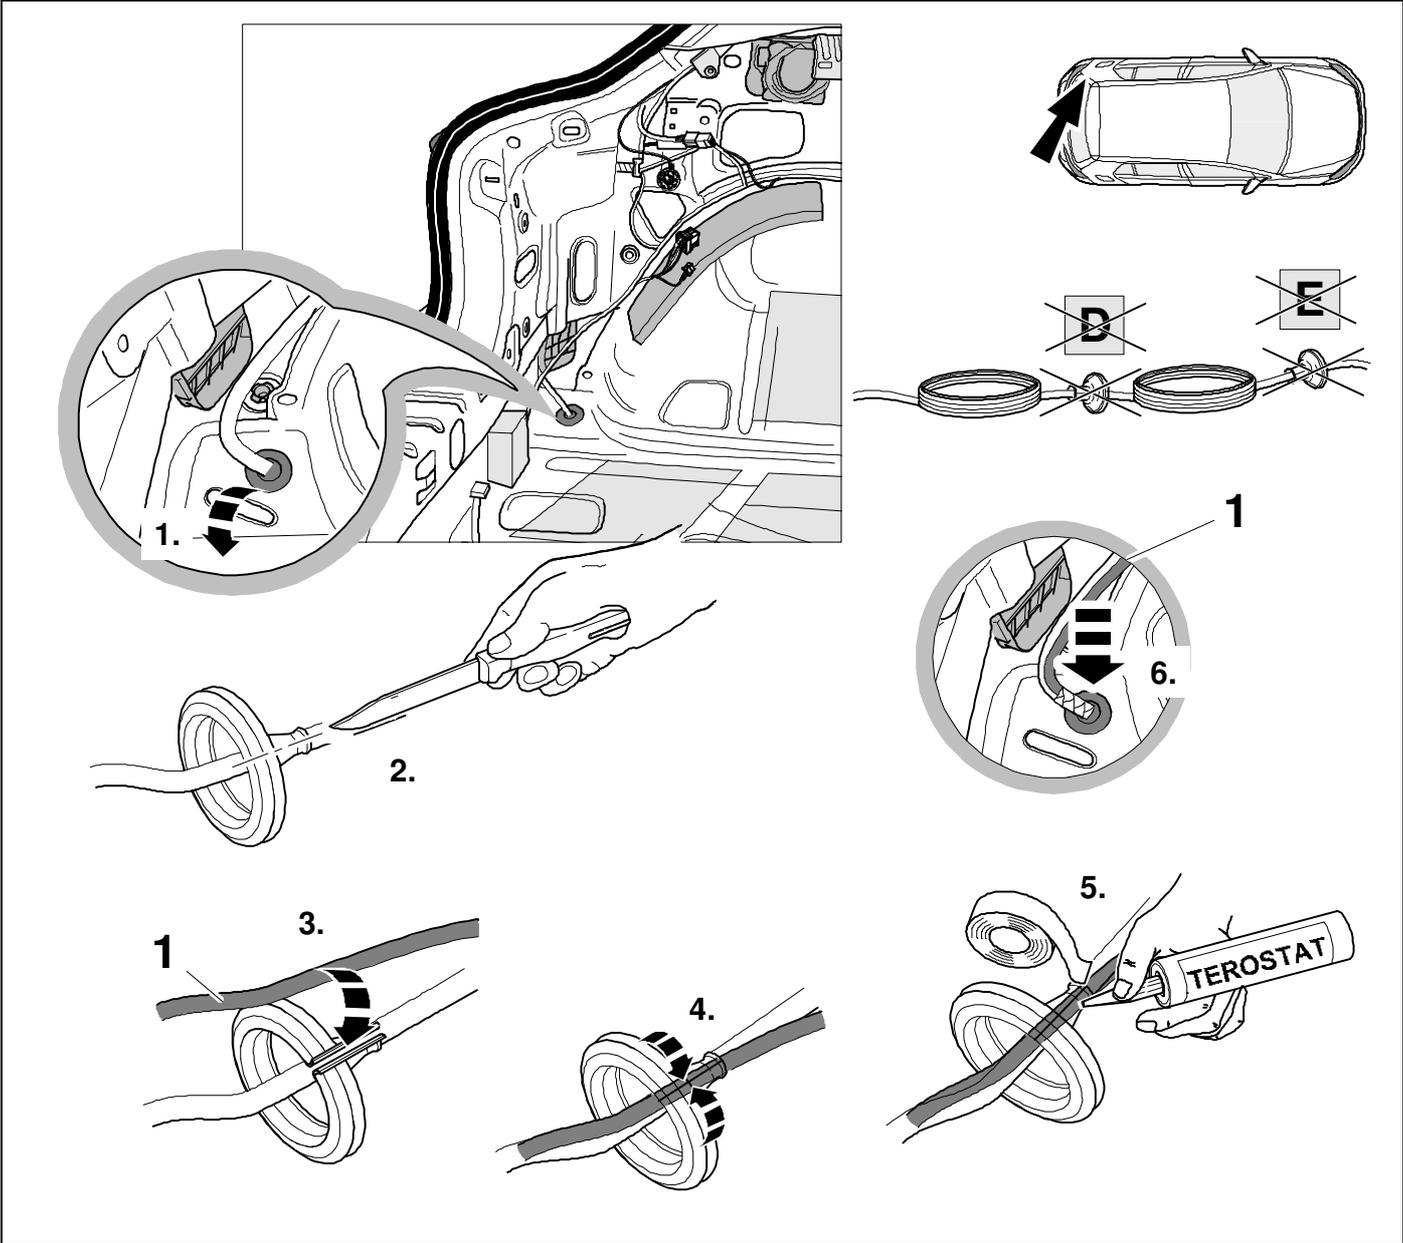







4

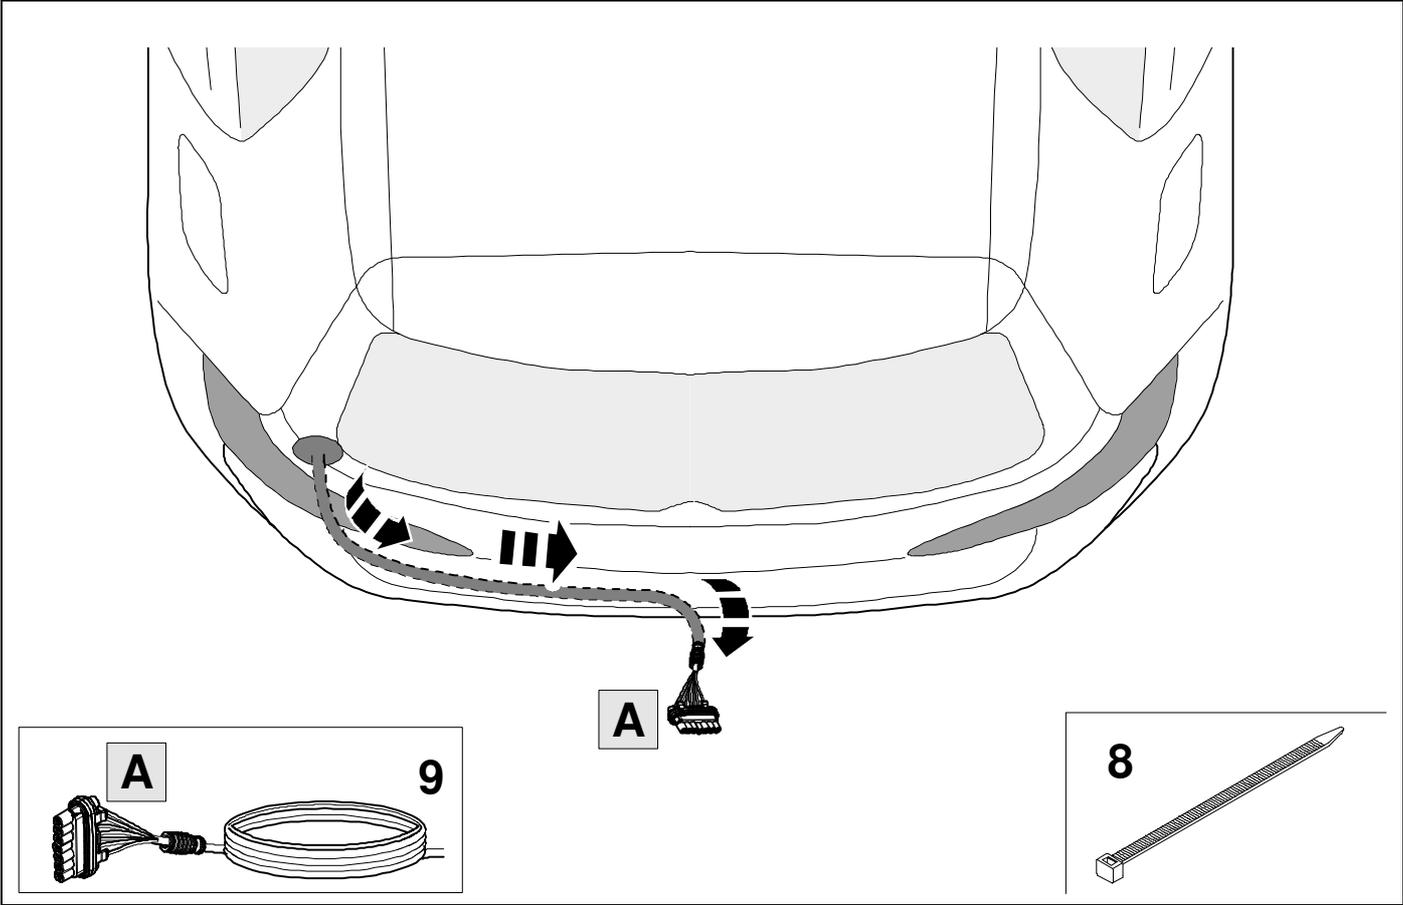



5



7

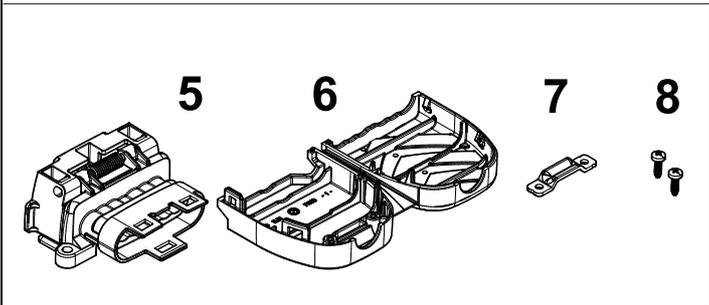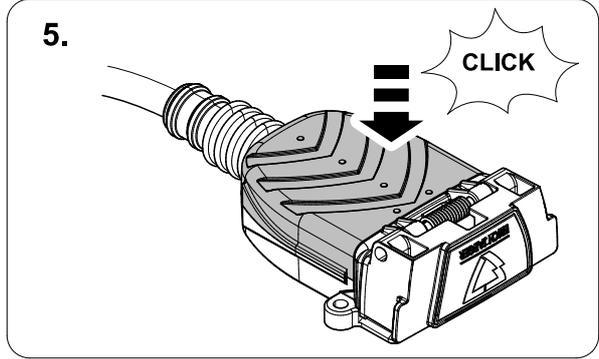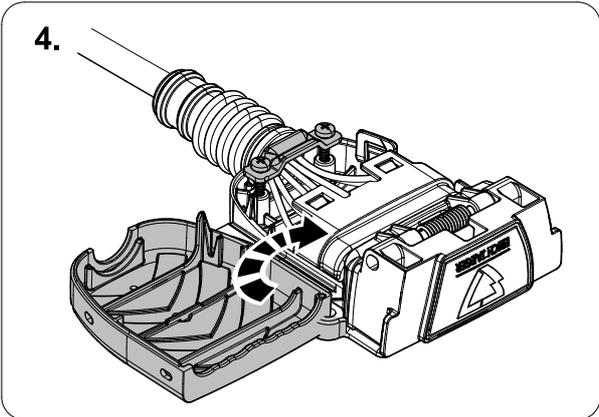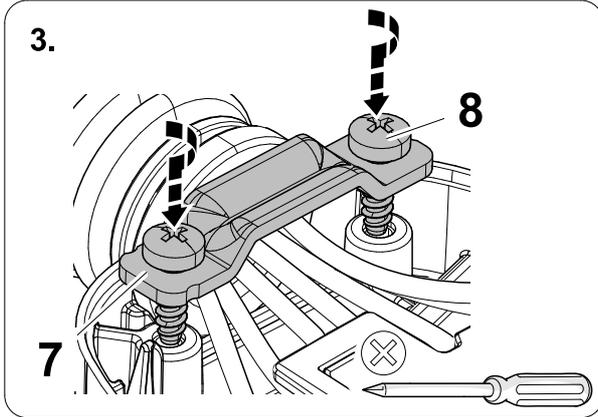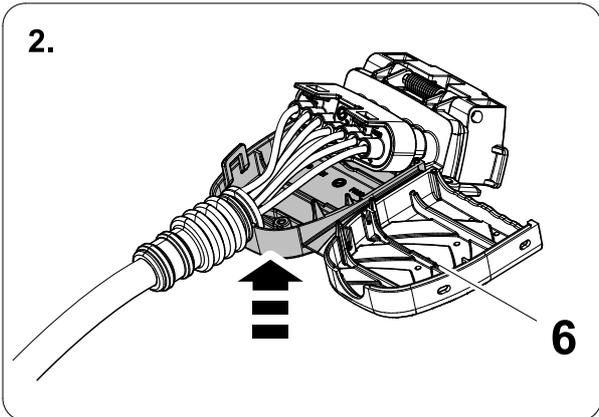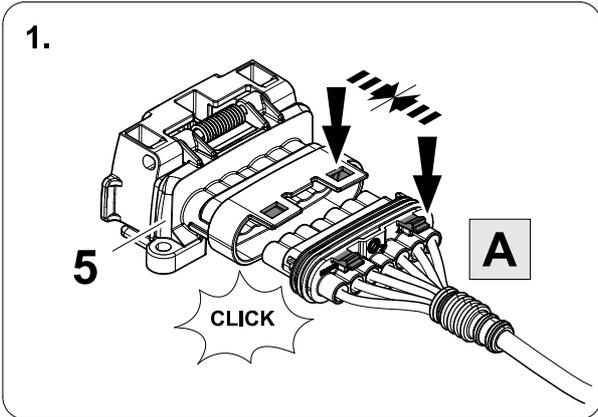

6

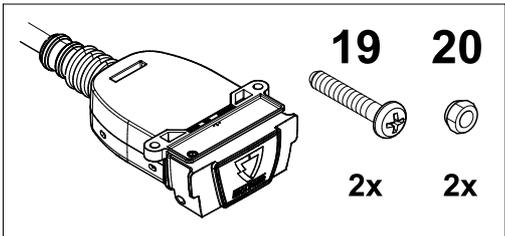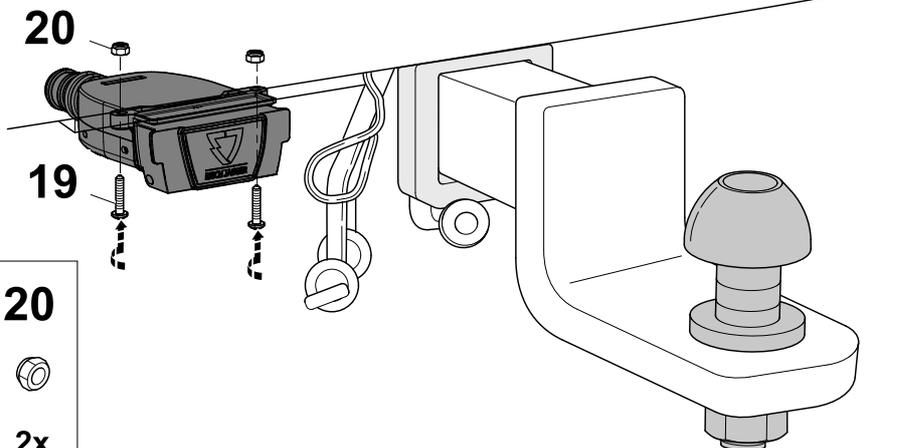

7




8

1	ye	
2	bk	
3	wh	
4	gn	
5	bu	
6	rd	
7	bn	

8	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
---	----	----	----	----	----	----	----	----	----	----	----

	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied
--	-------	-------	------	-------	-----	------	--------	-------	--------	--------	--------------



9

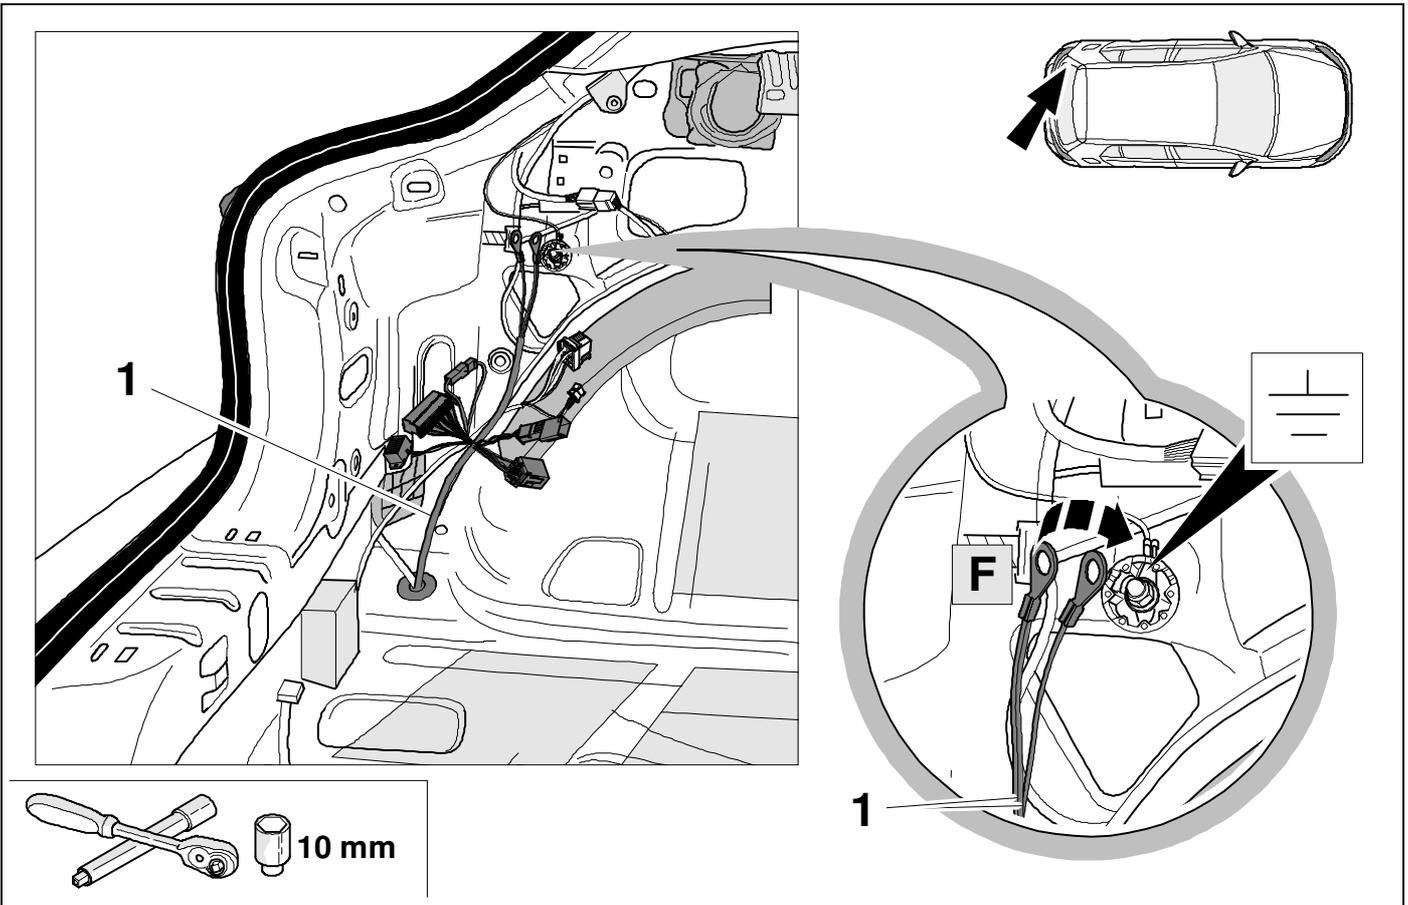

10

👁️ ⇒ 8

### Vehicles with trailer preparation

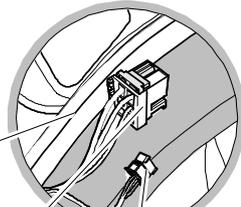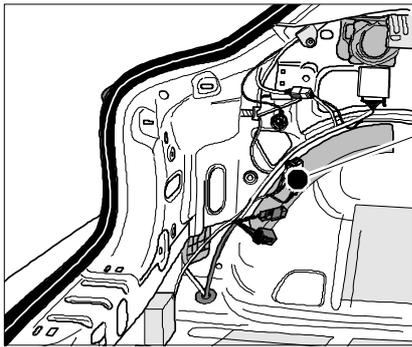

bk  
6 PIN      bk  
10 PIN





### OPTION 1

11 ⇒ 17

33 ⇒ 44

### Vehicles without trailer preparation

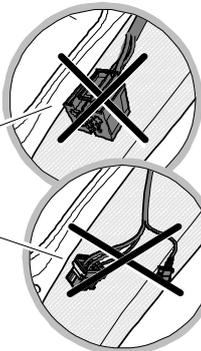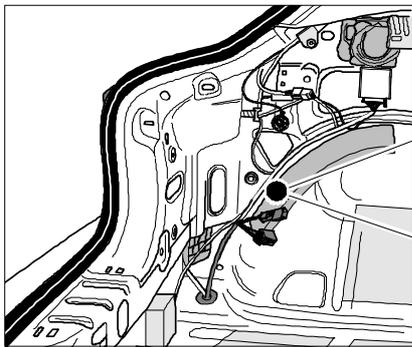





### OPTION 2

18 ⇒ 44

11


👁️ ⇒ 8

### OPTION 1

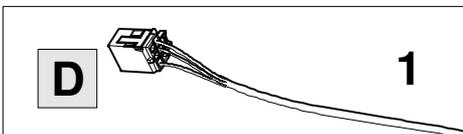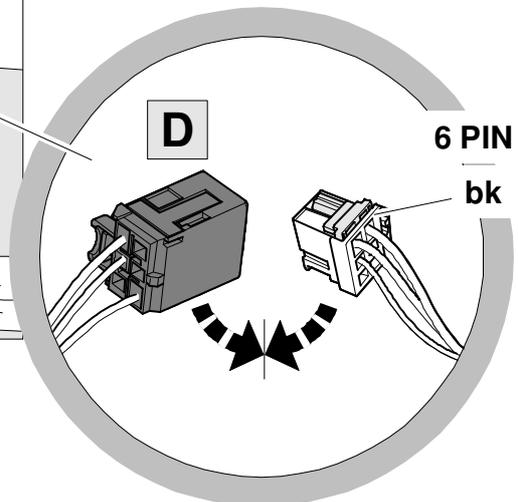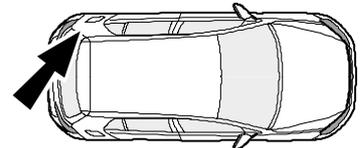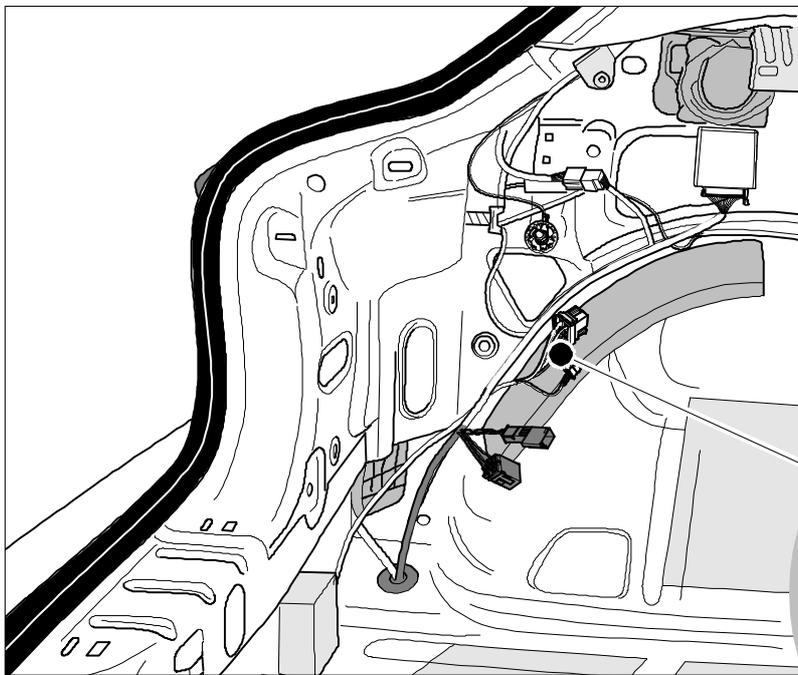

12


OPTION 1

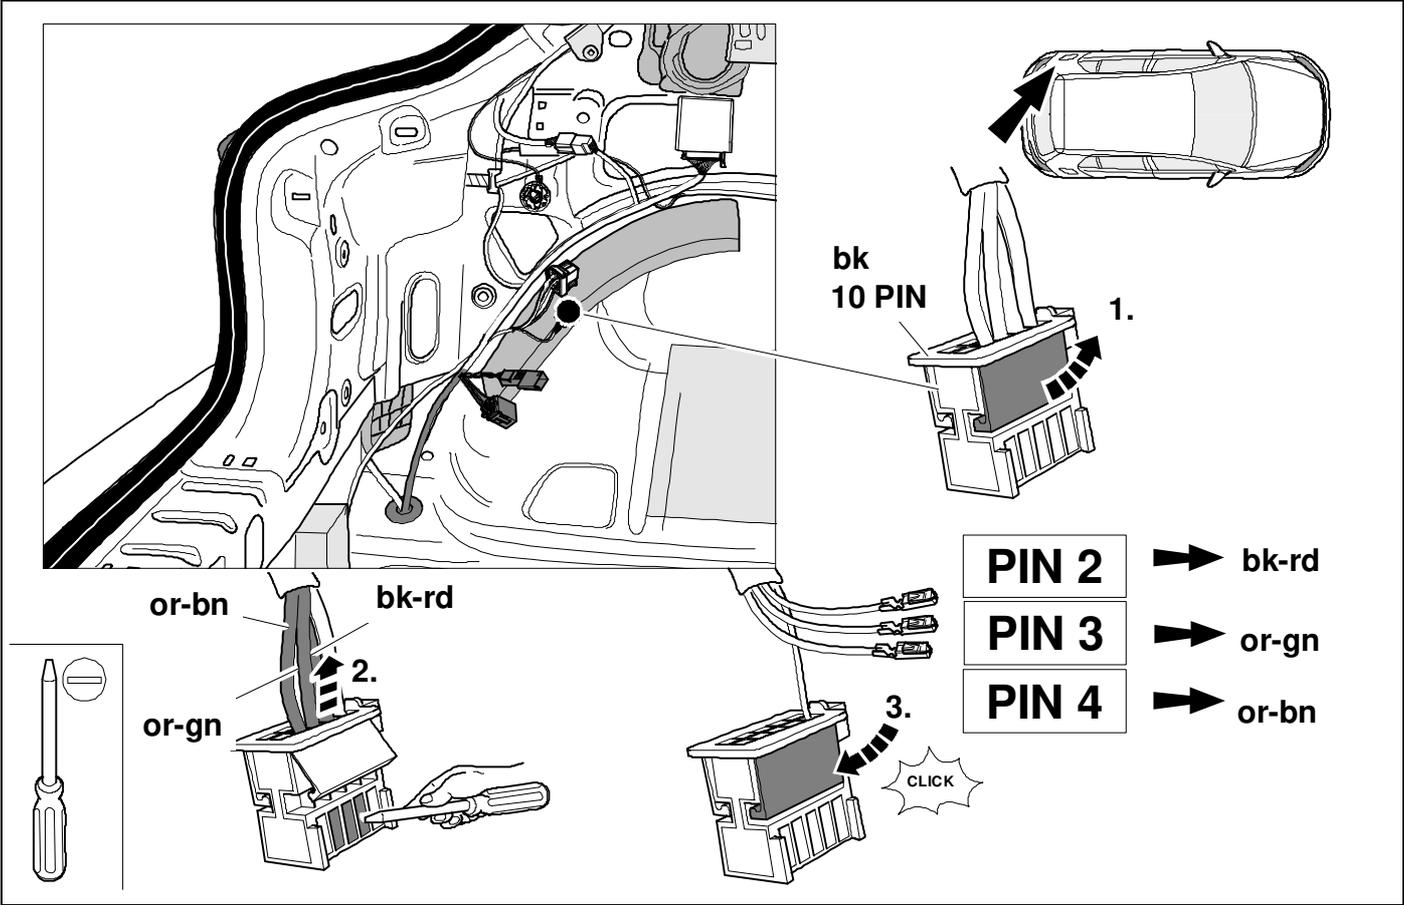

13

8

OPTION 1

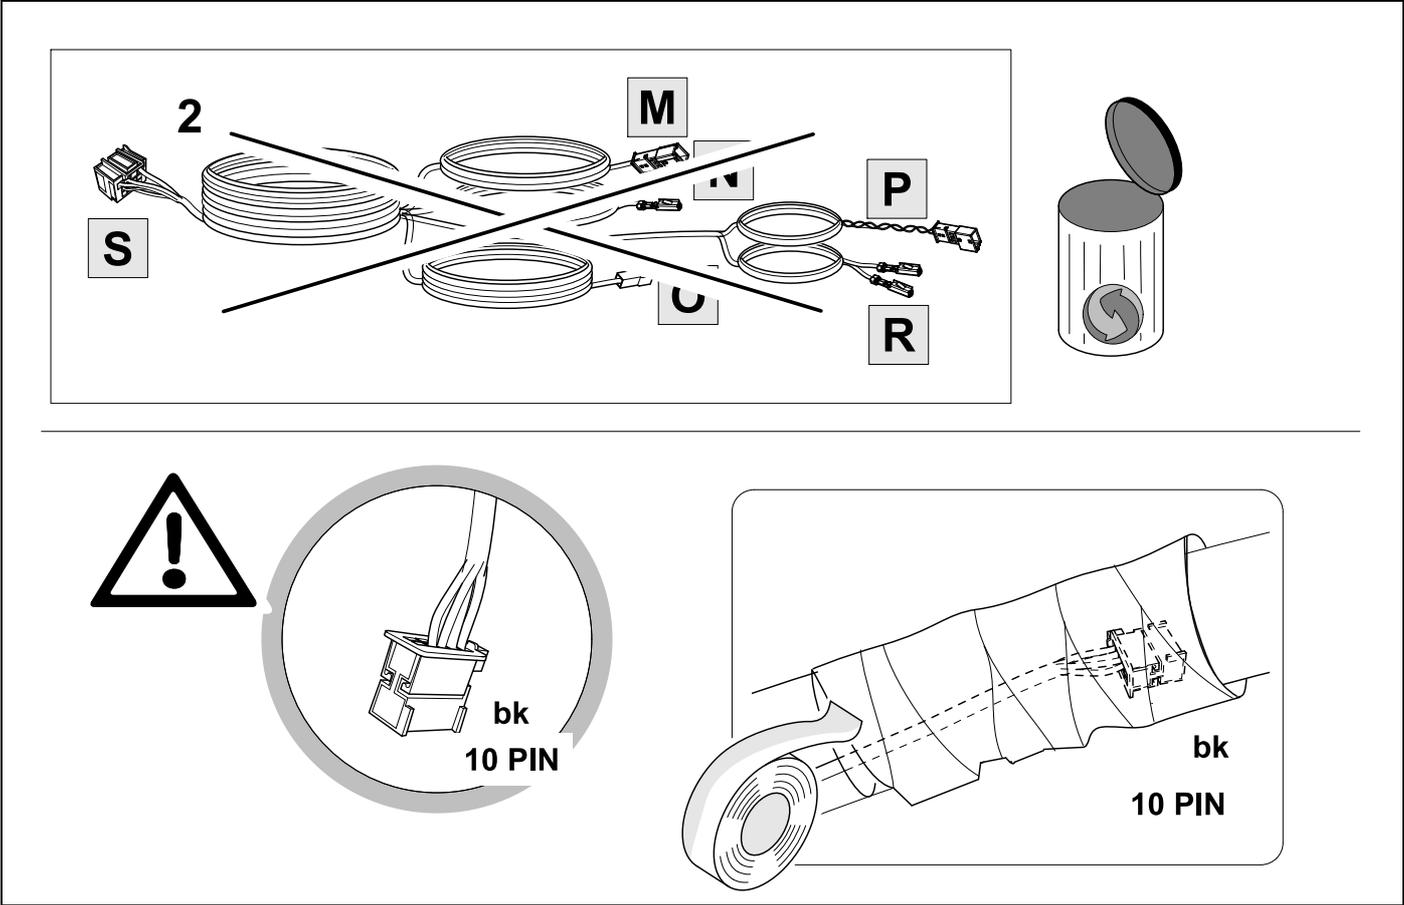


14




8

### OPTION 1

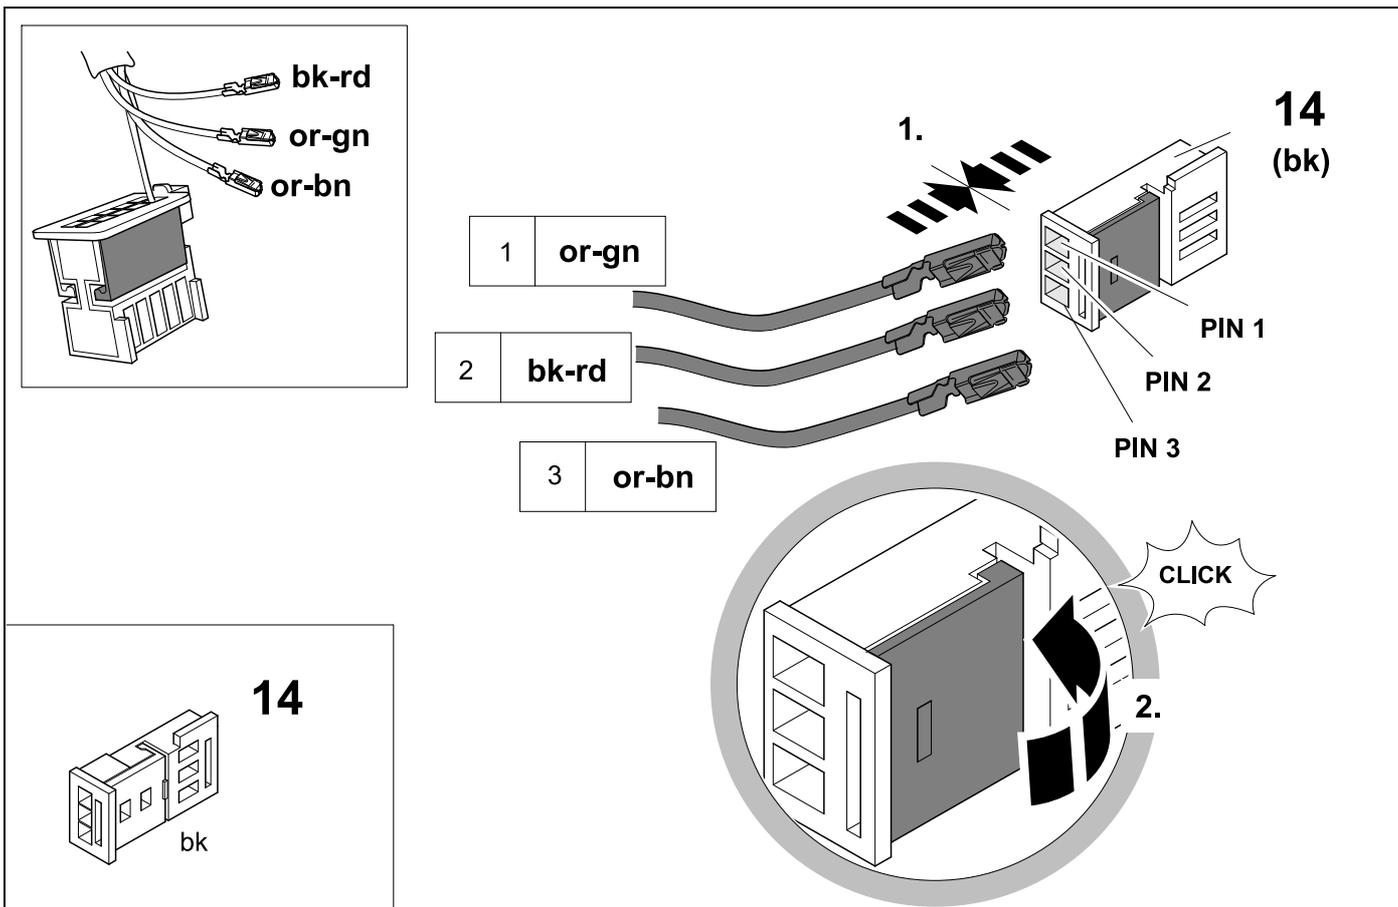

15

### OPTION 1

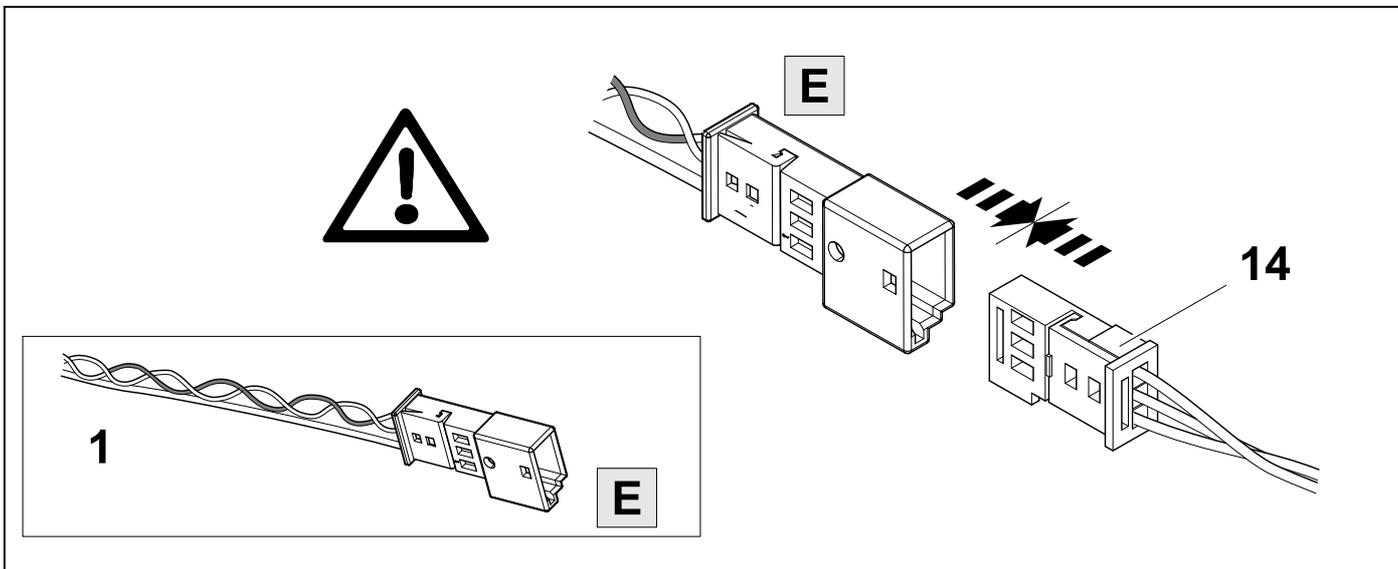


16






8



OPTION 1

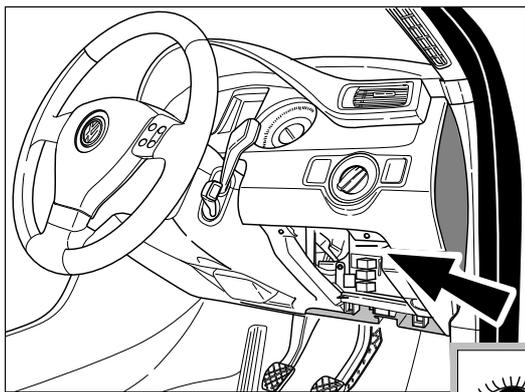

CAN BUS

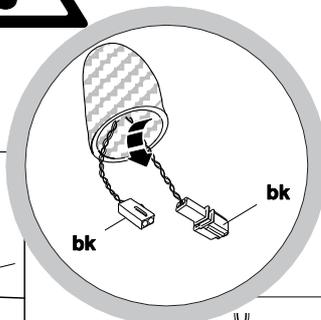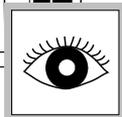
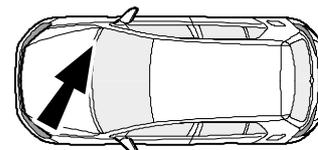


This can be tucked away between the cross member and firewall in the area shown.

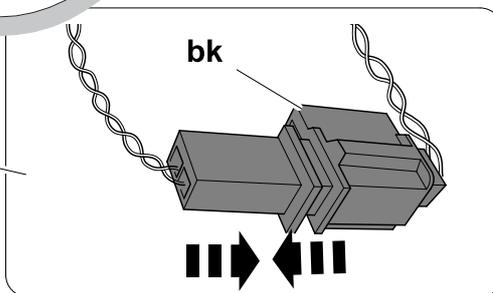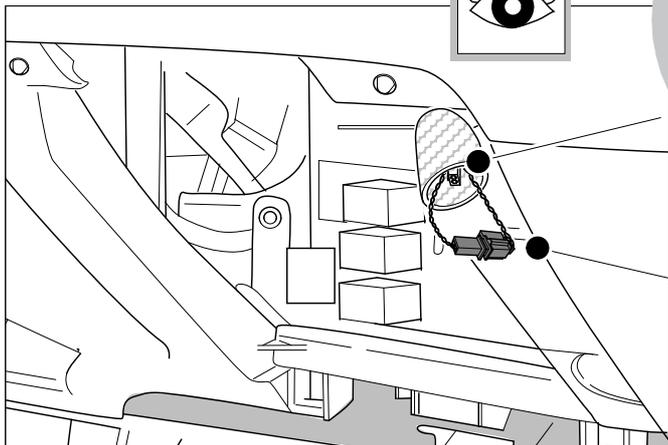


17

OPTION 1

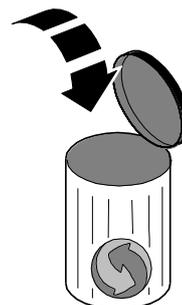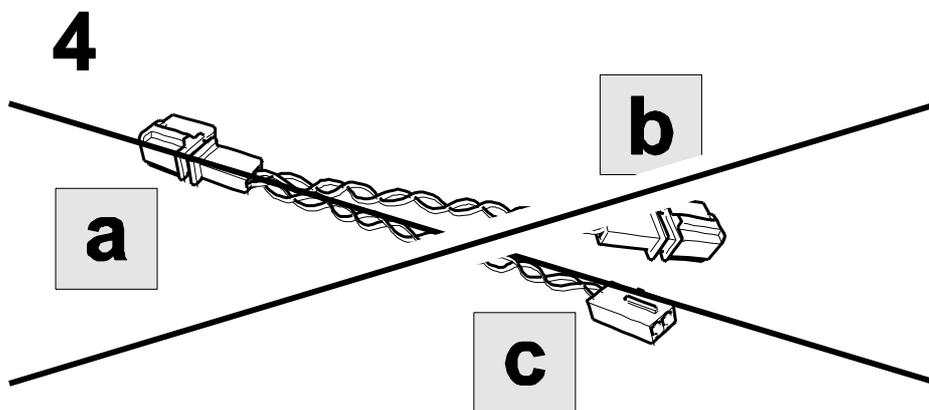


18

### OPTION 2

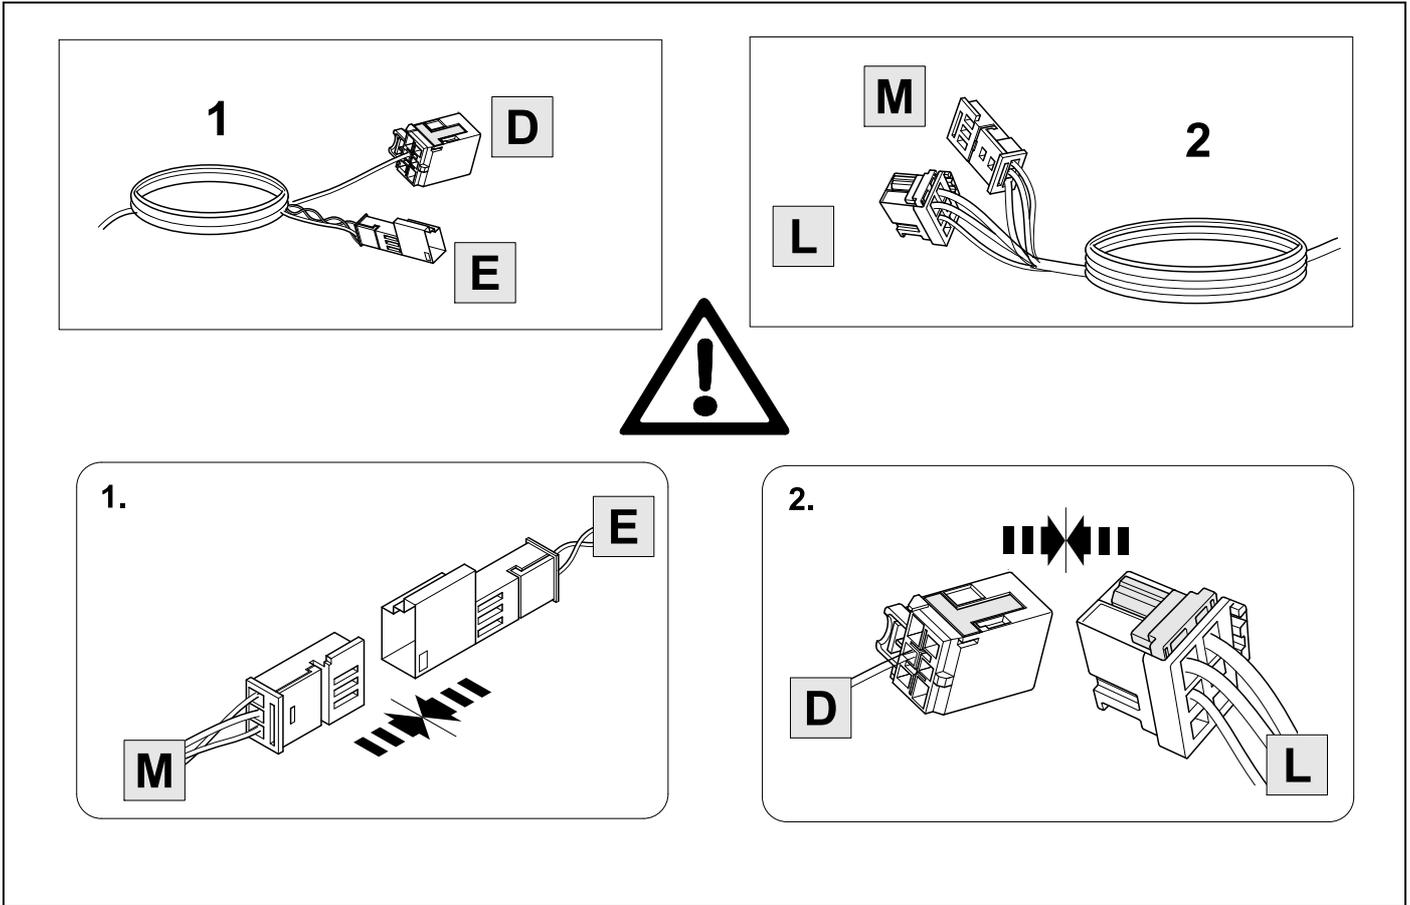


19

### OPTION 2

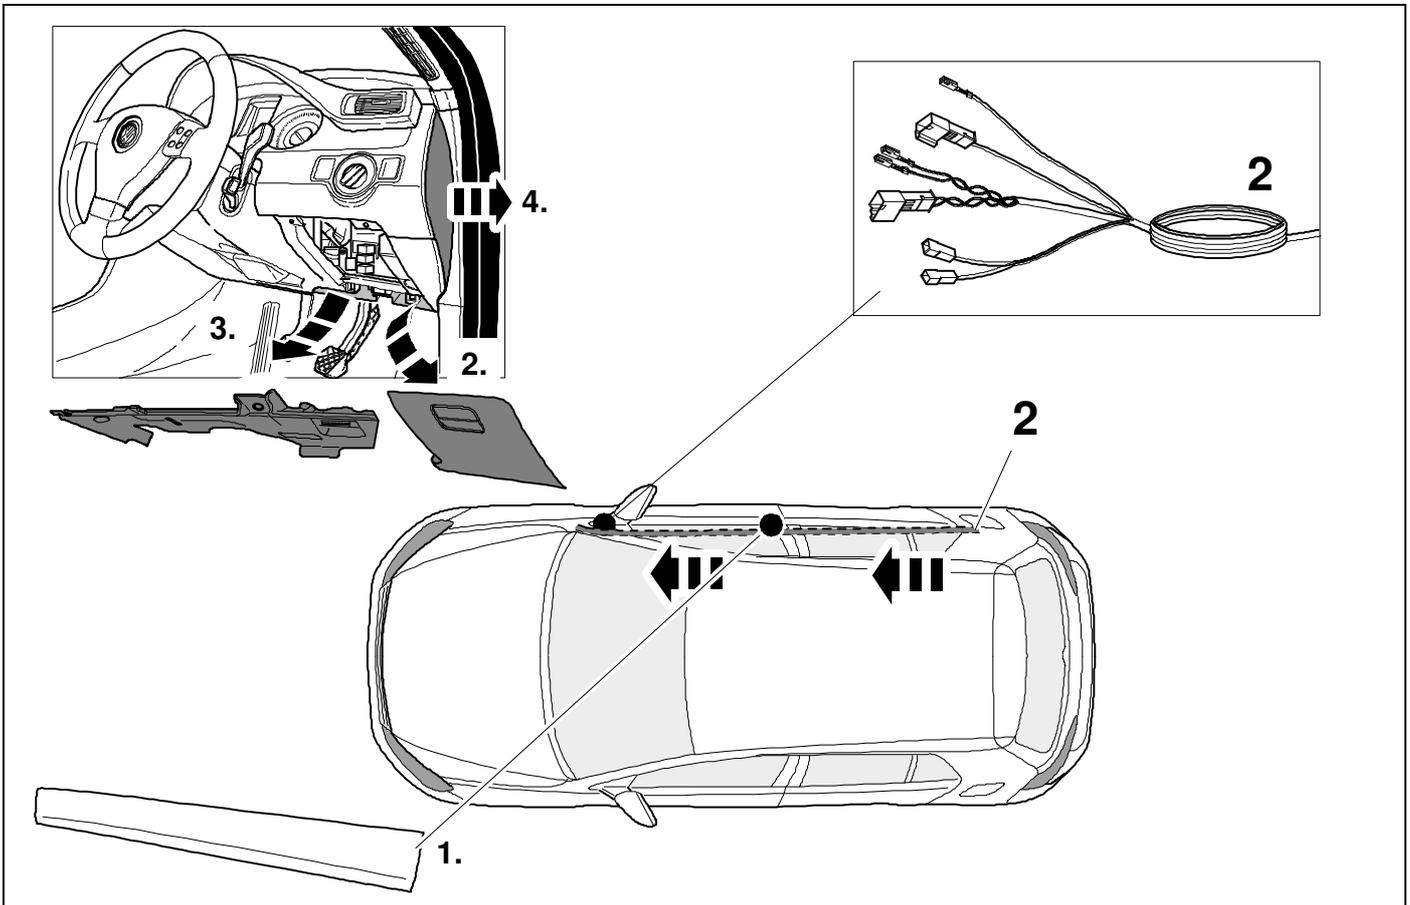

20

# OPTION 2

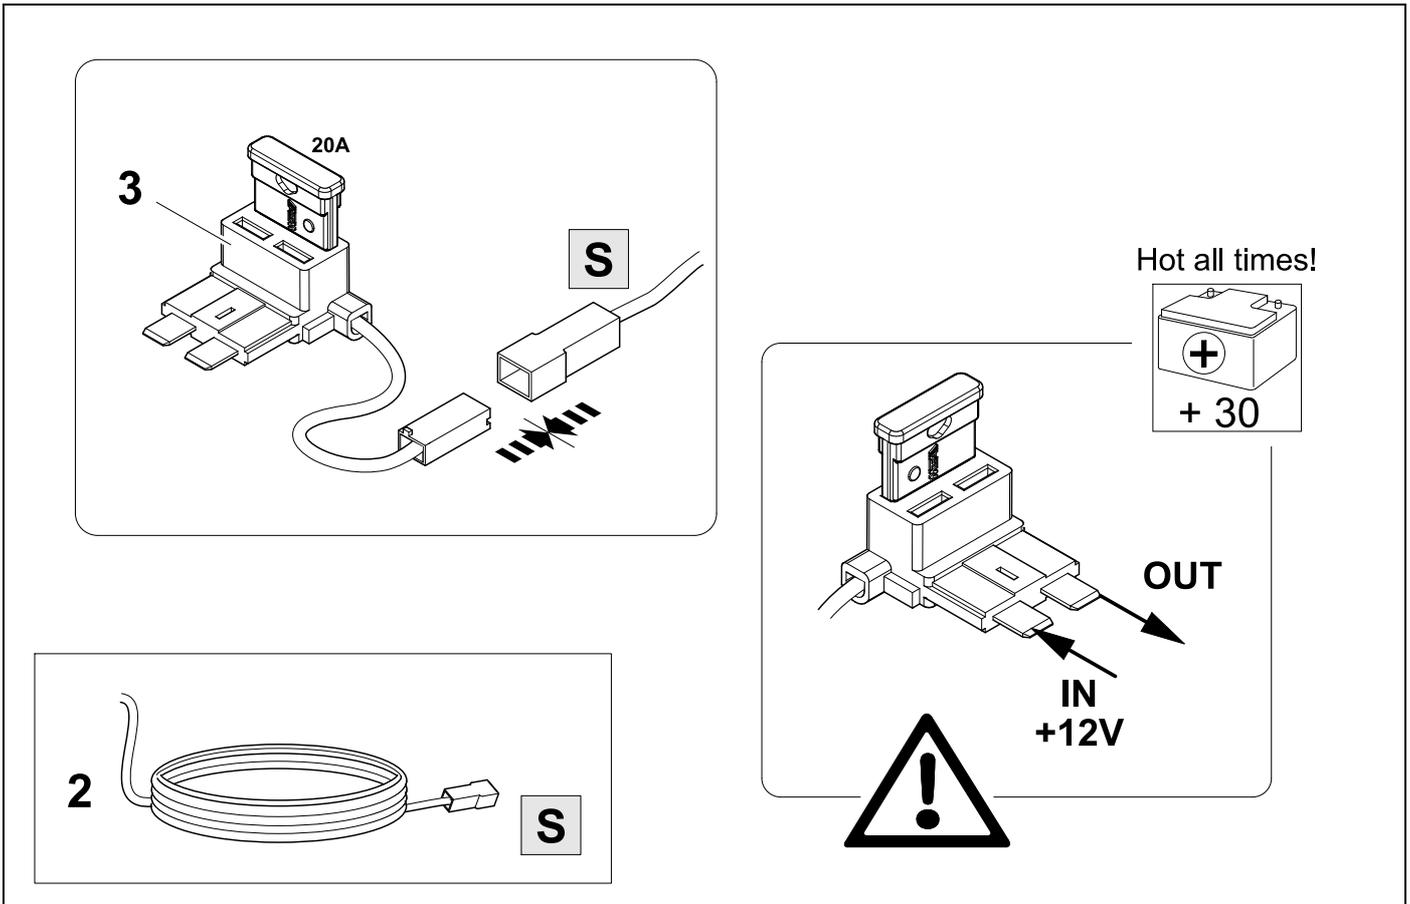


21




39

# OPTION 2

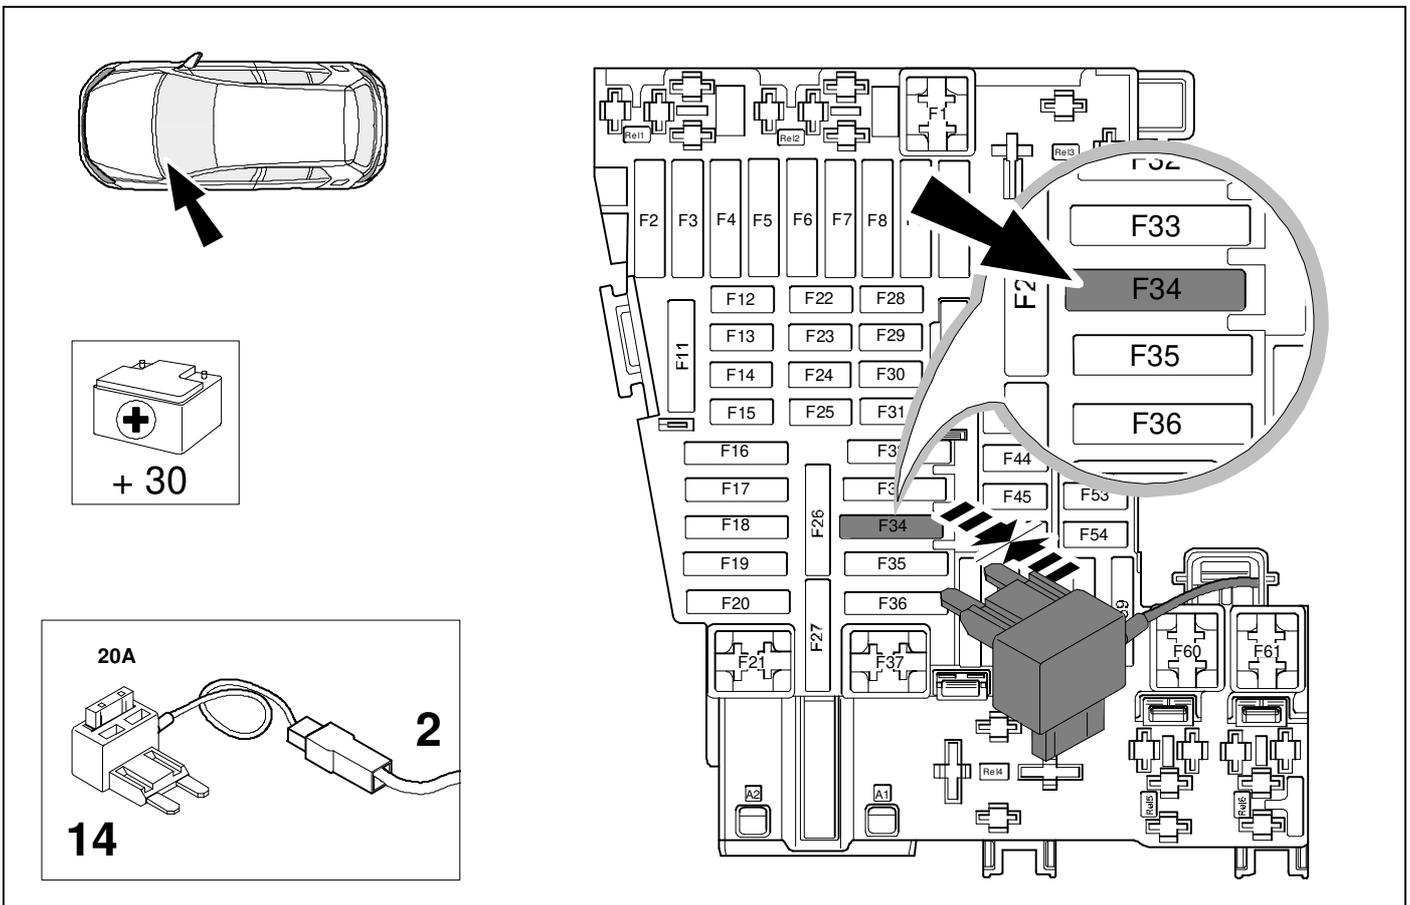

22

OPTION 2

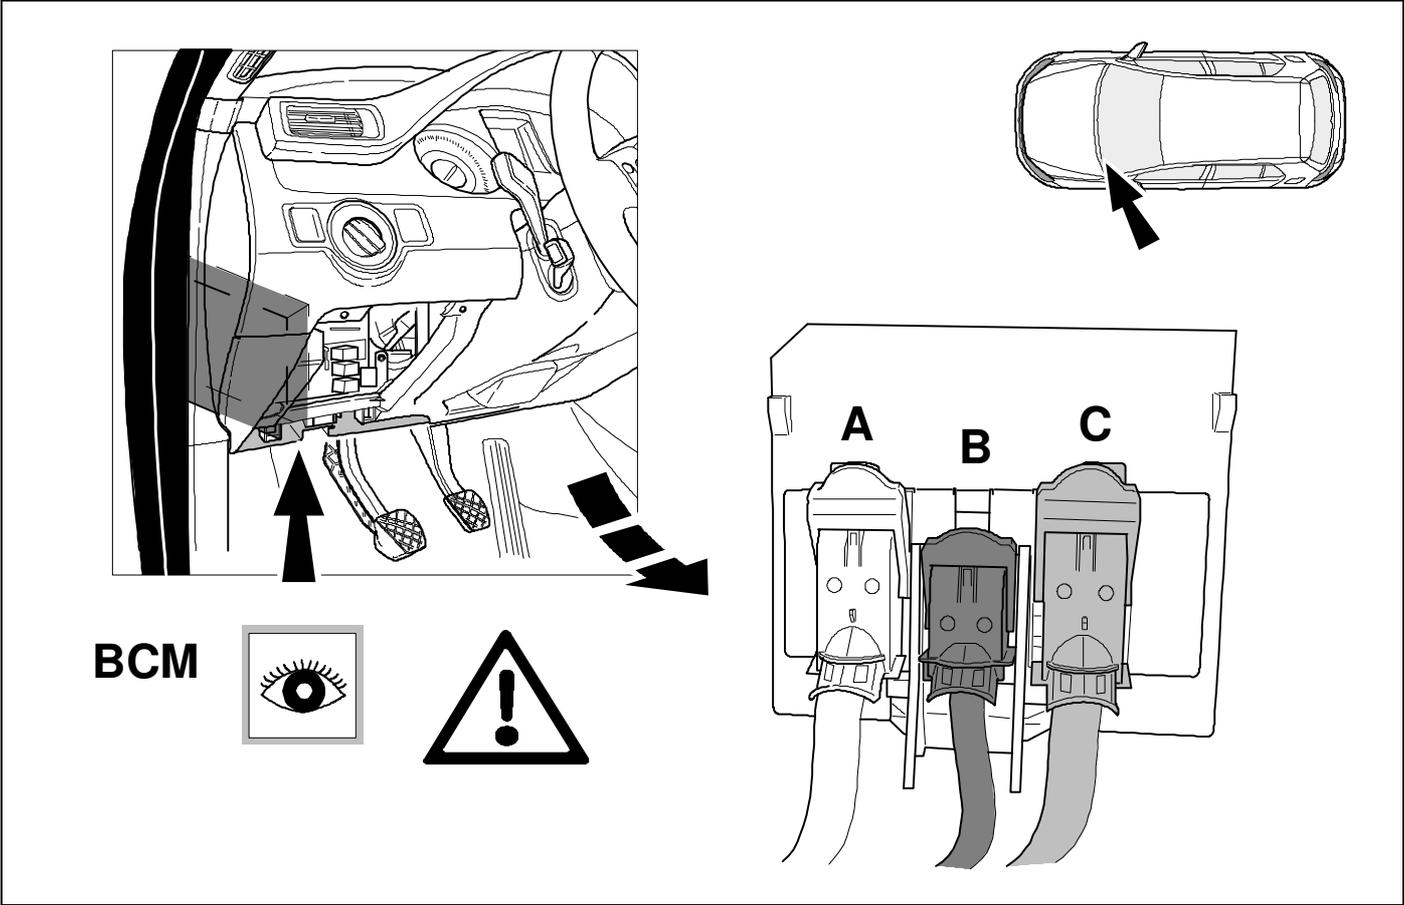


23



8


OPTION 2

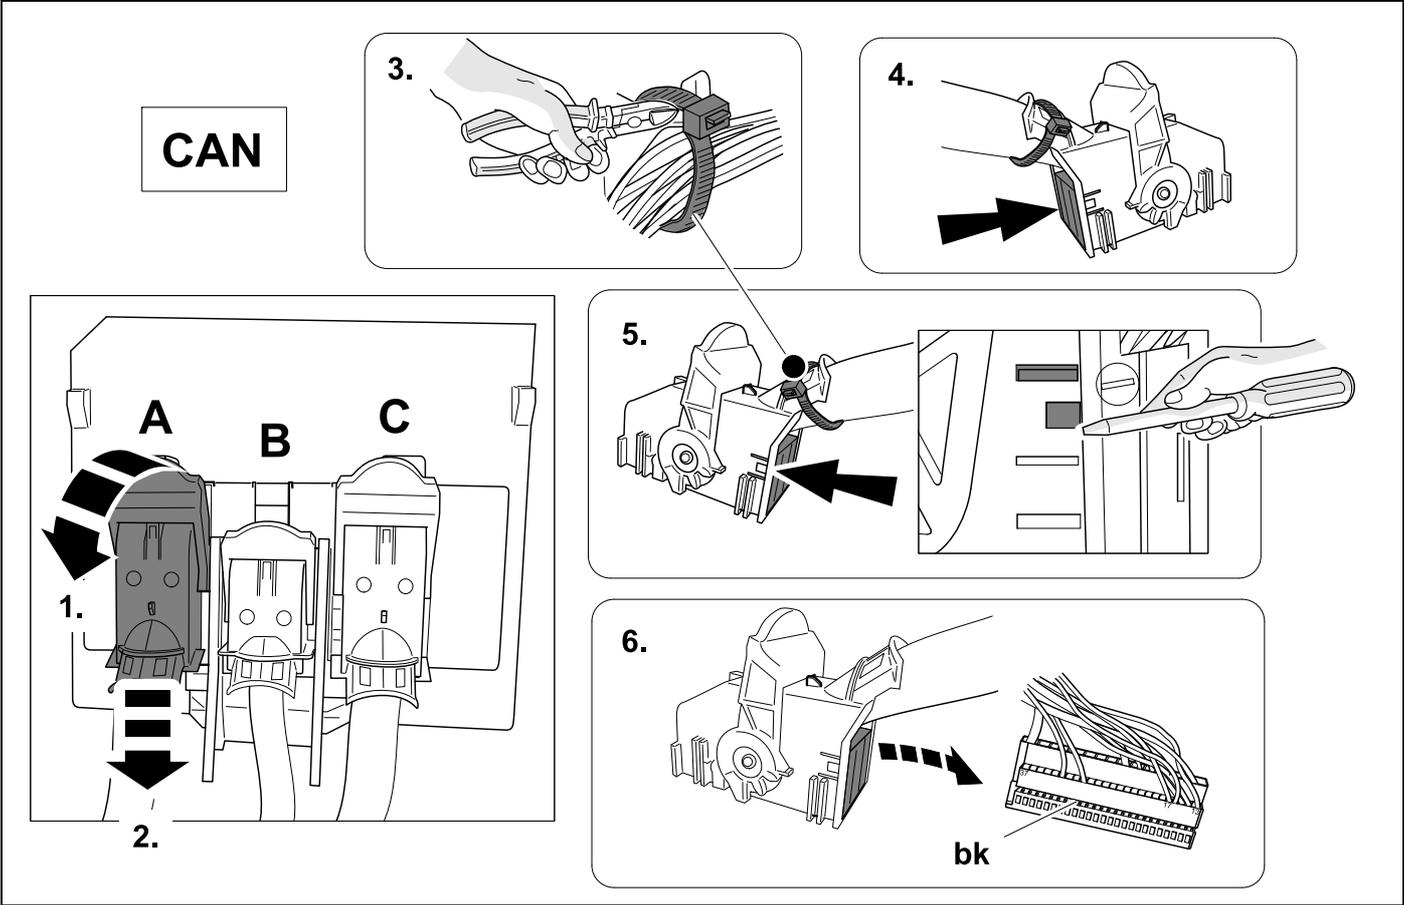

24

⇒ 8


OPTION 2

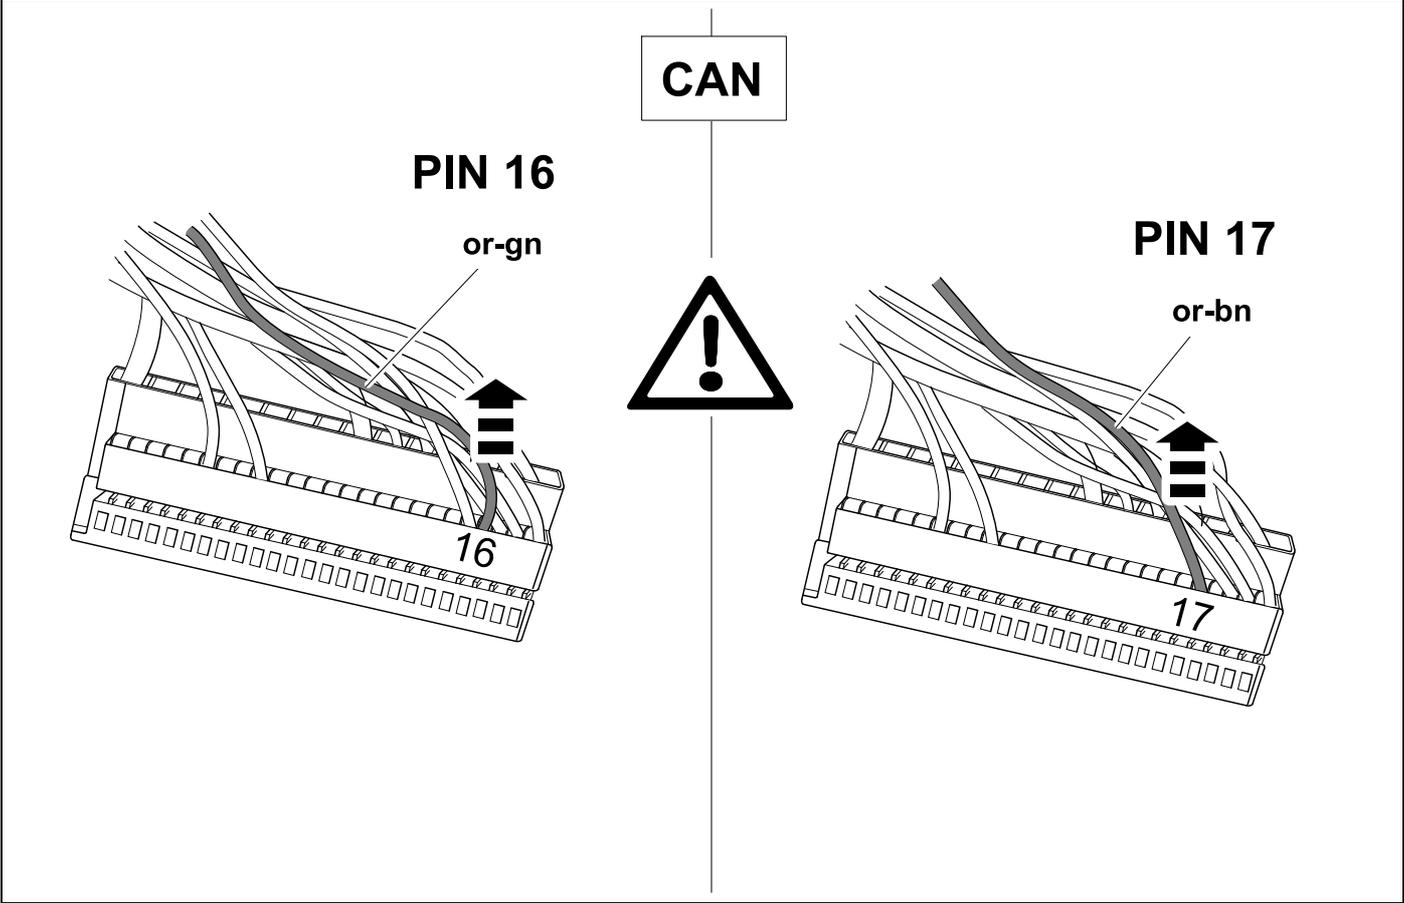

25



⇒ 8

OPTION 2




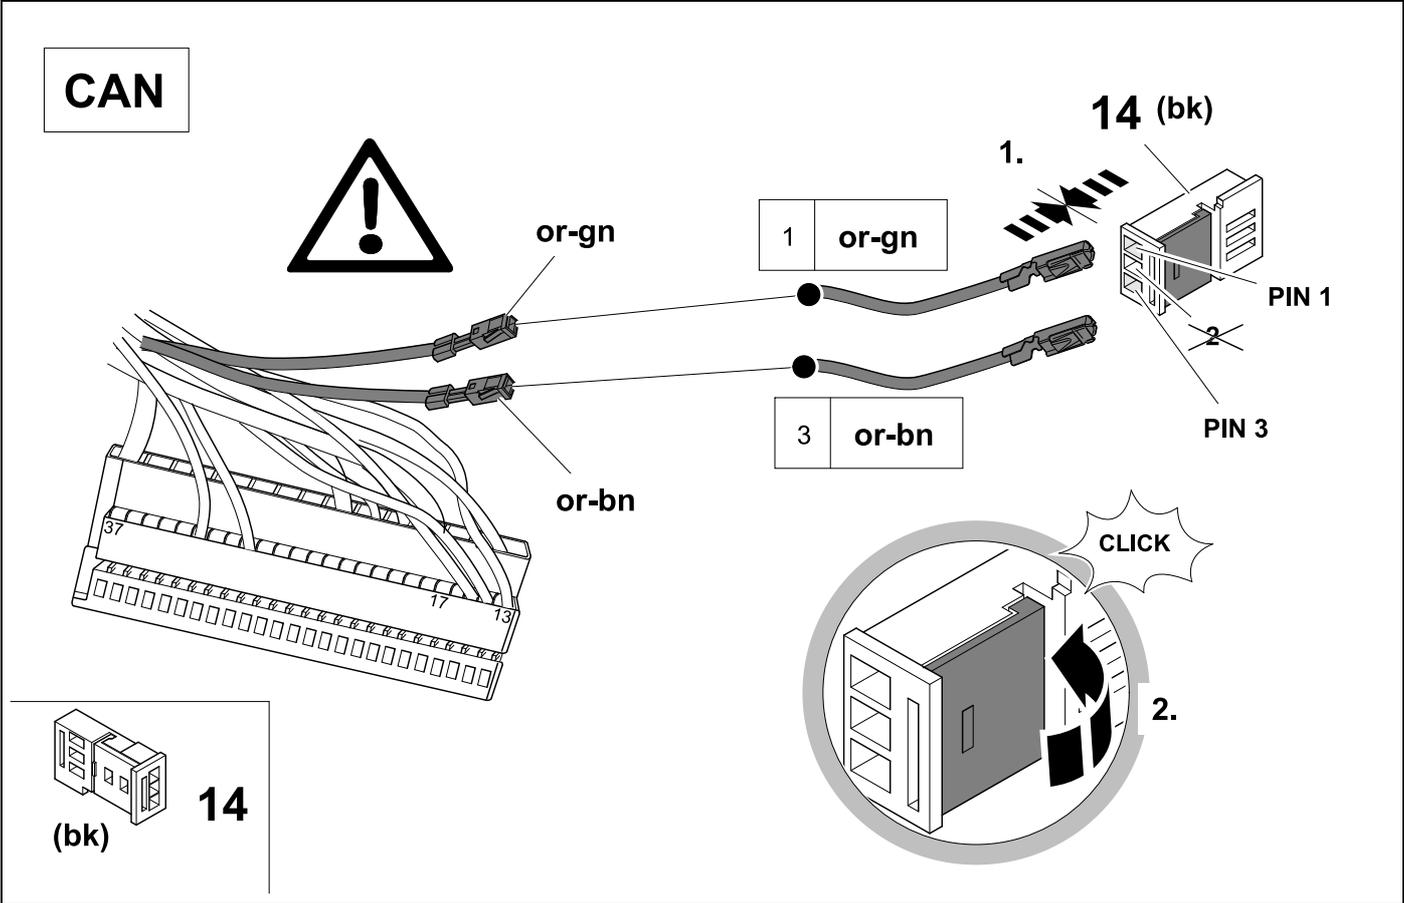












CAN

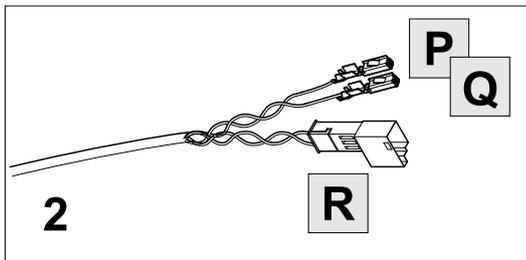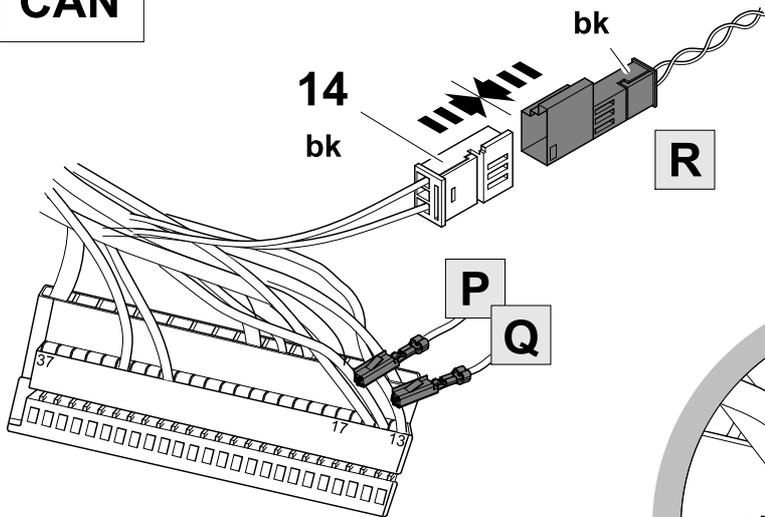

CAN

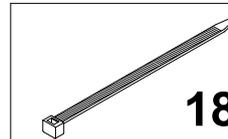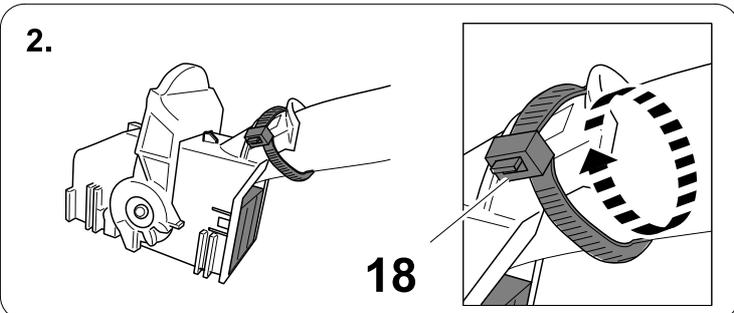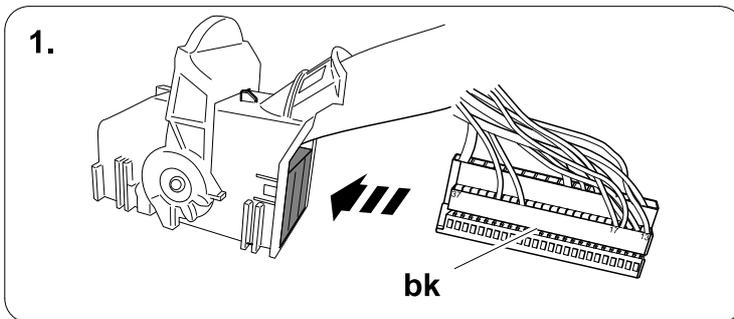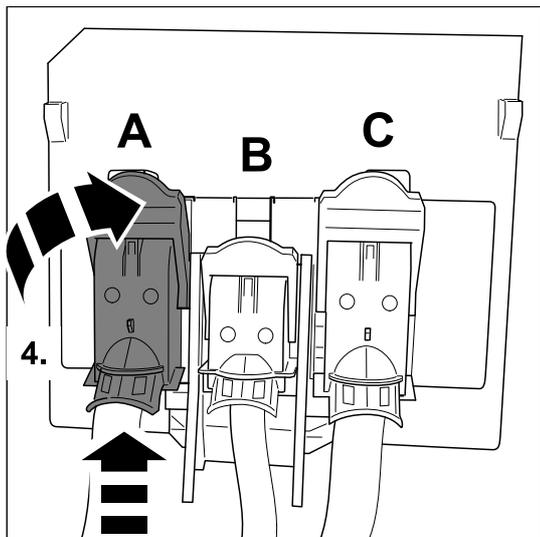


CAN

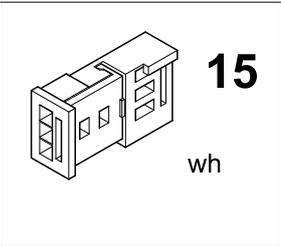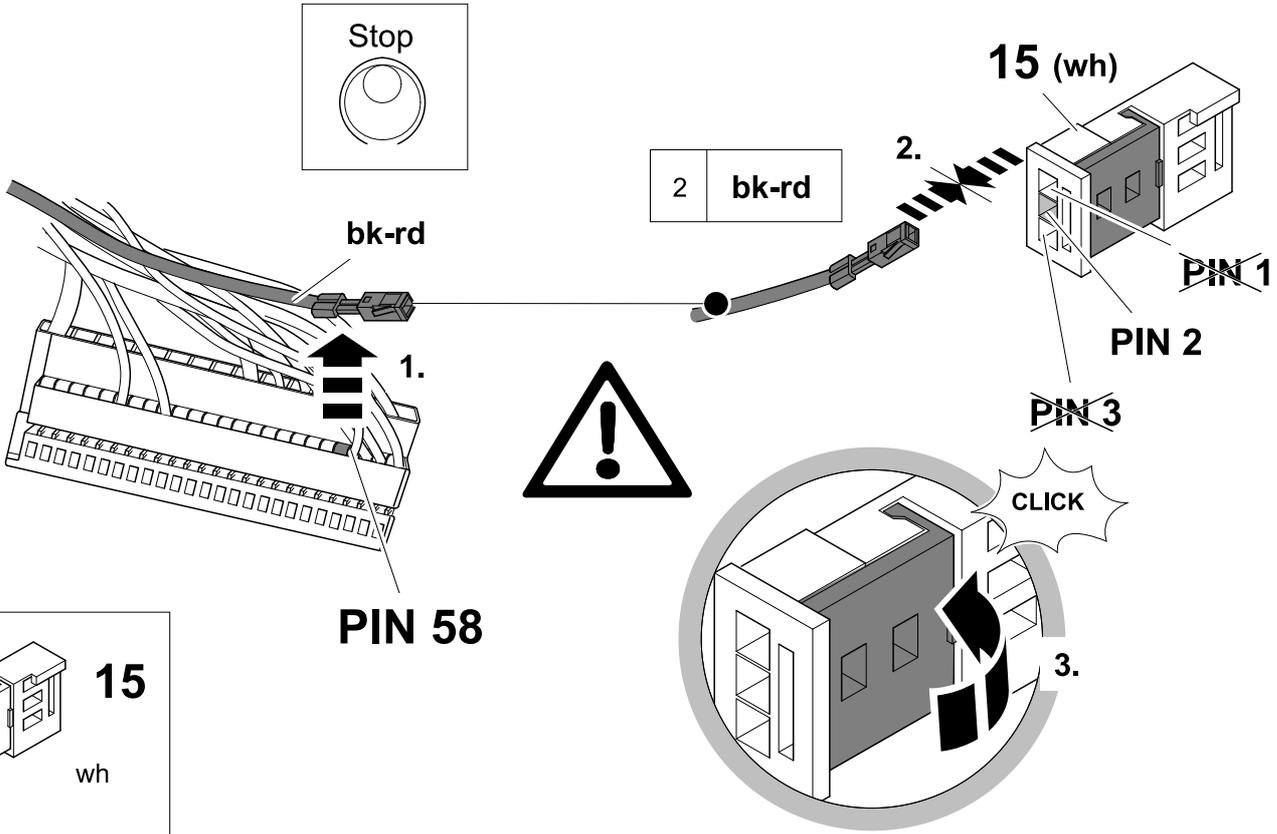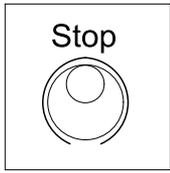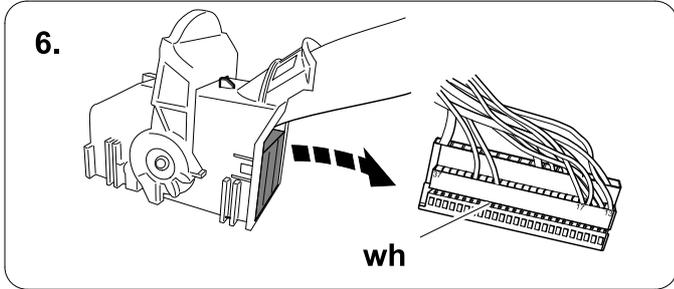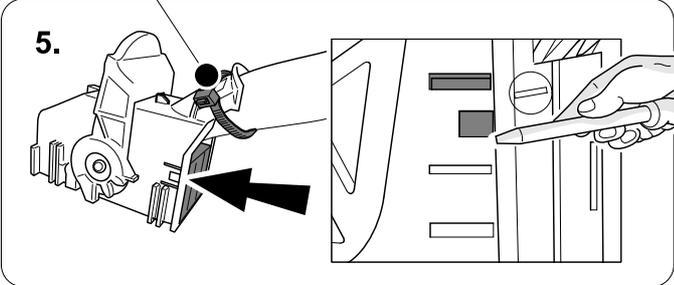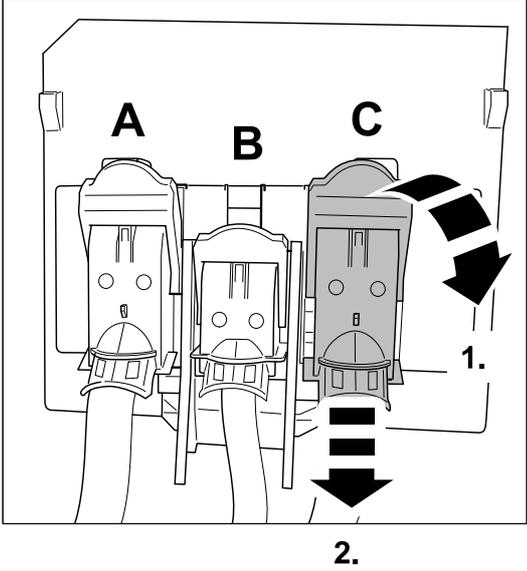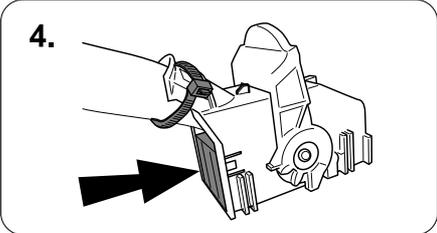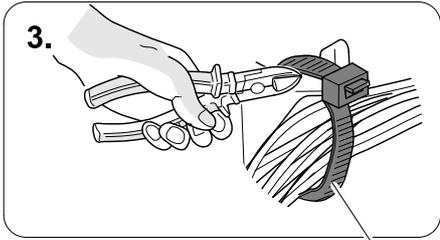

30

👁️ ⇒ 8


OPTION 2








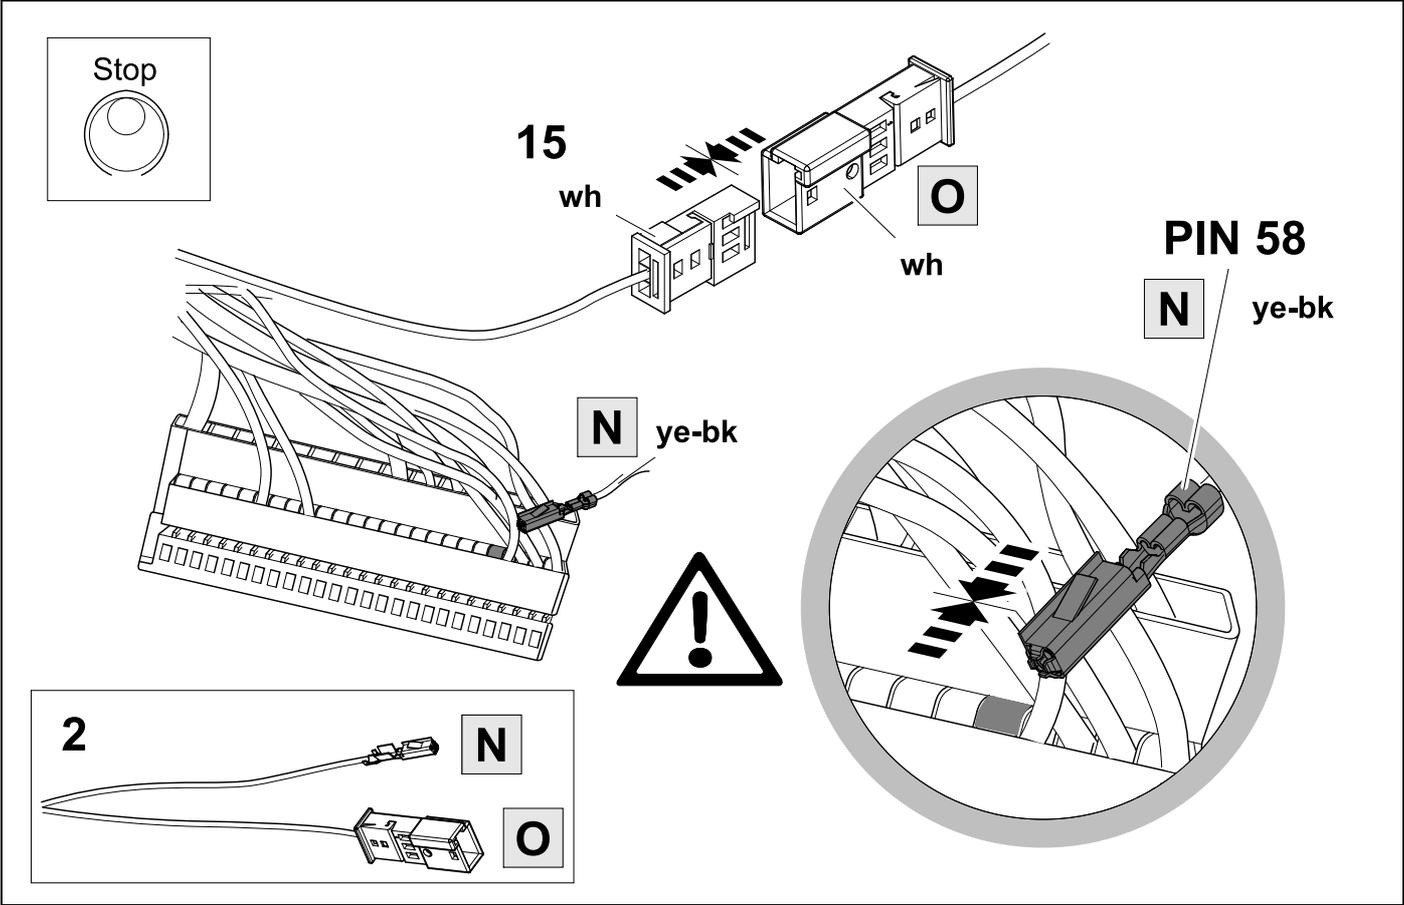


31

👁️ ⇒ 8


OPTION 2

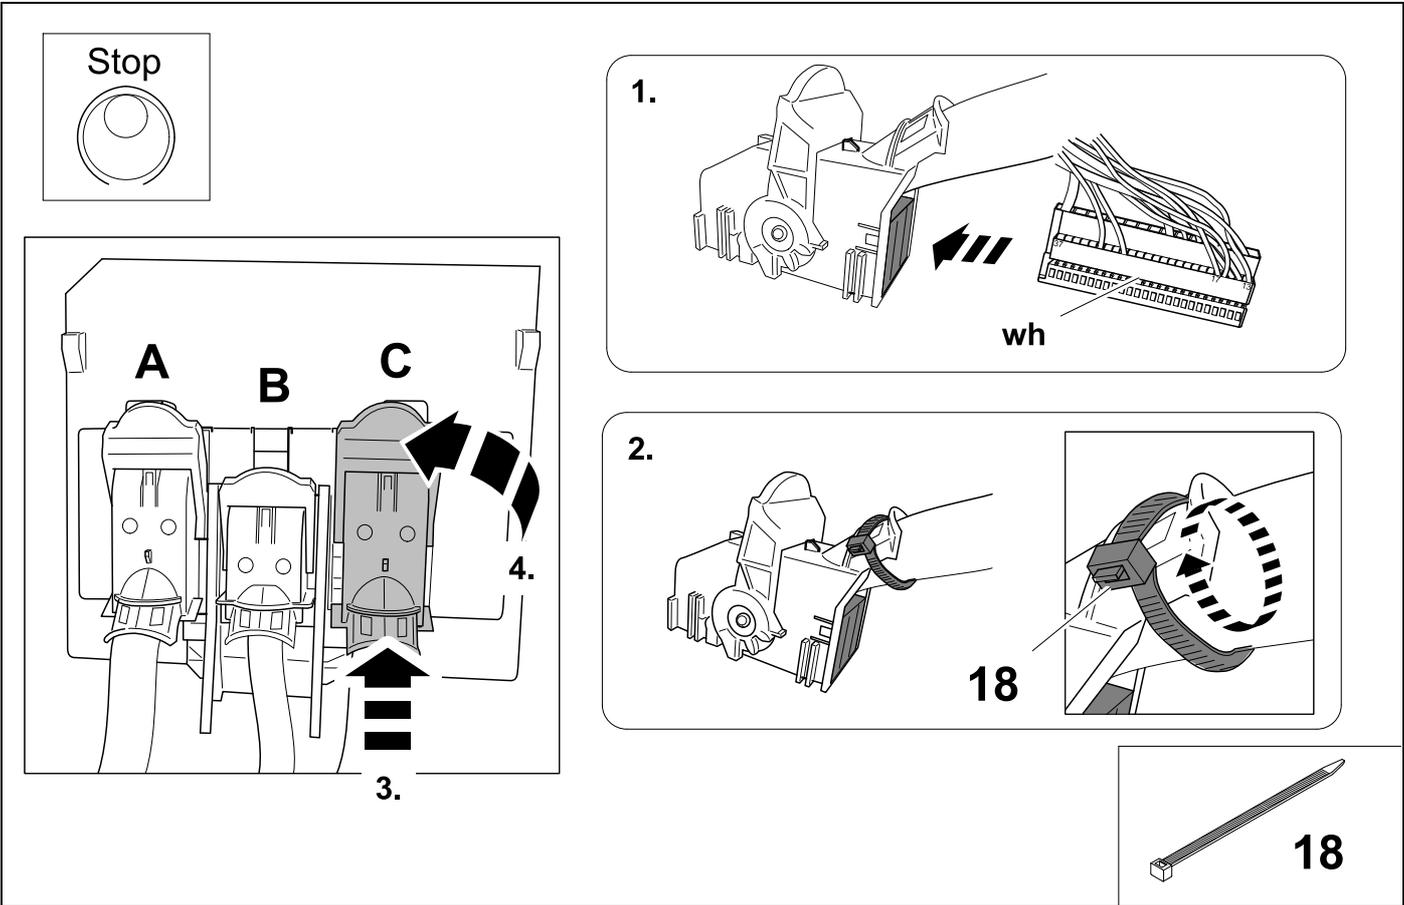

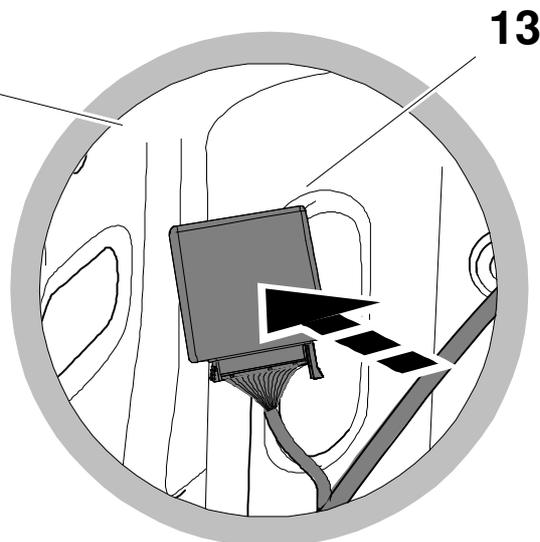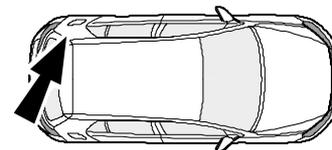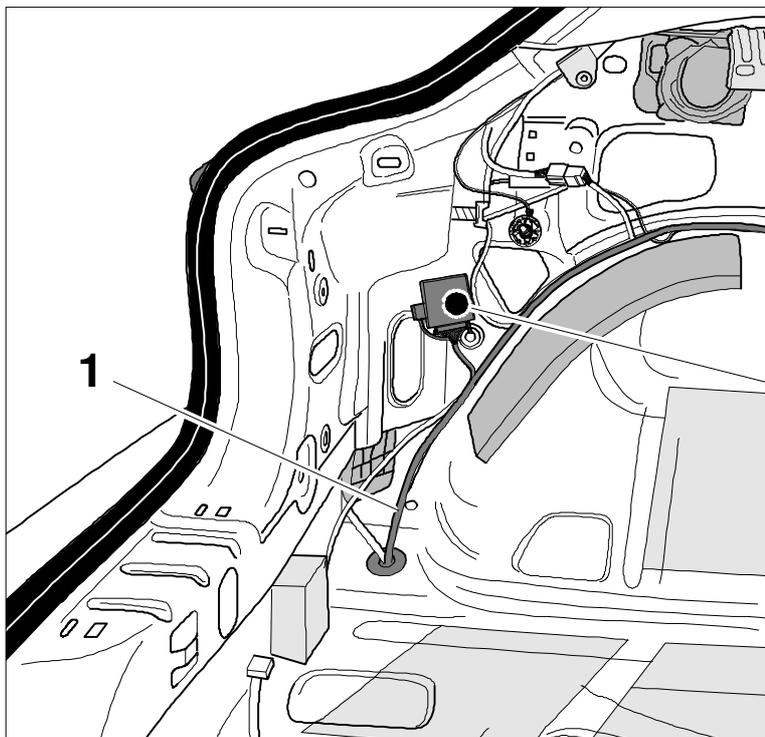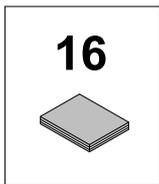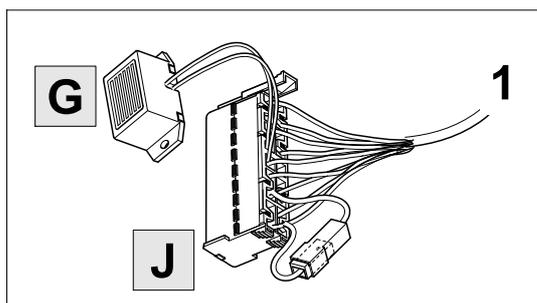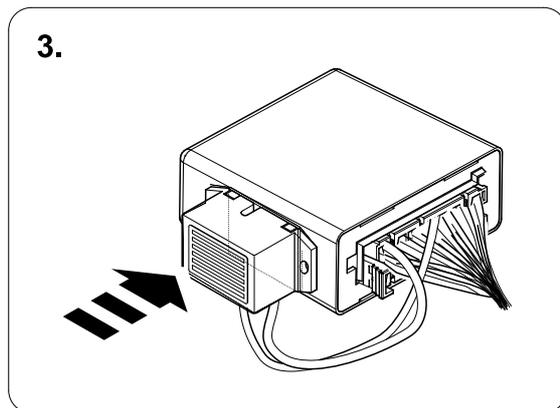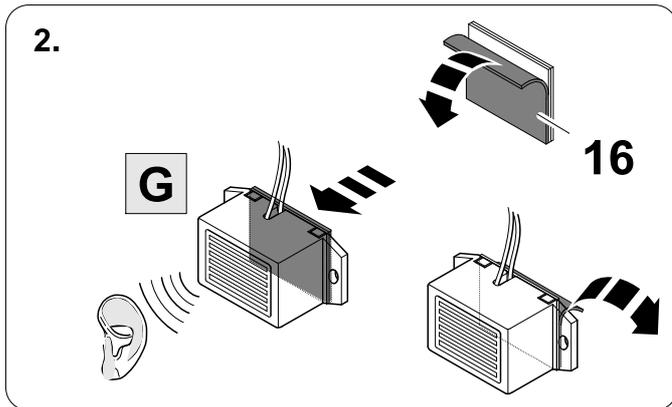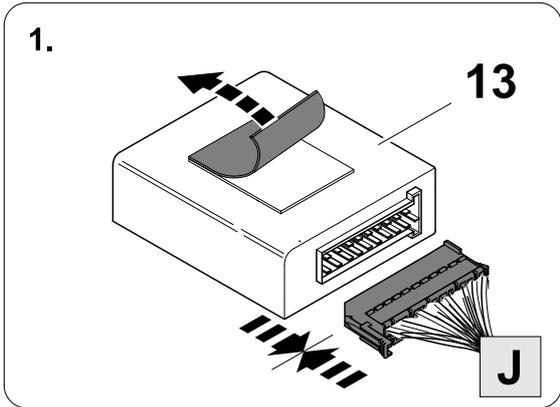





**BRAKE  
CONTROLLER  
PREPARED**

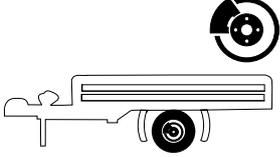


**Trailer Brake Preparation**

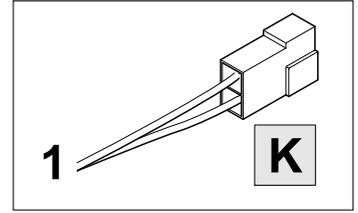


1.

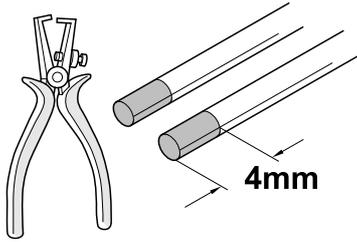


2.

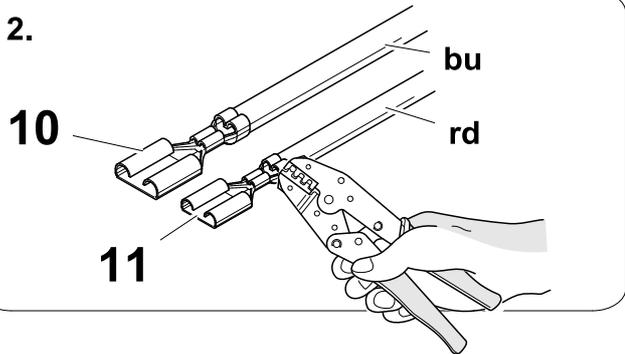

3.

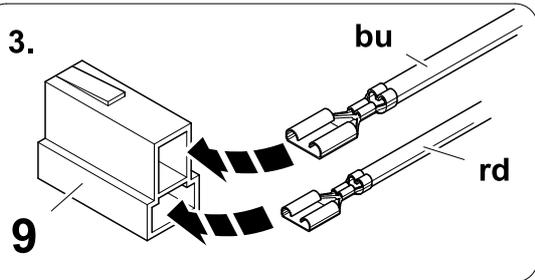




4.

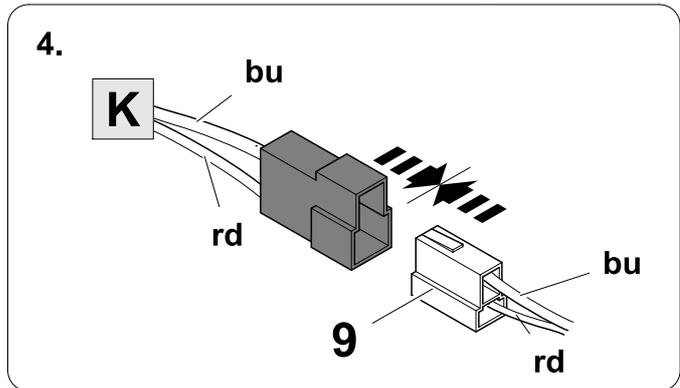


9

10

11

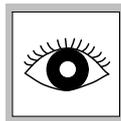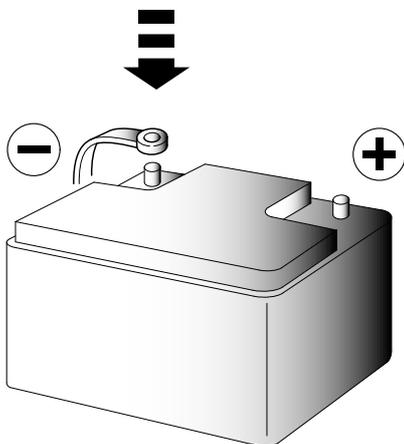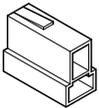


36

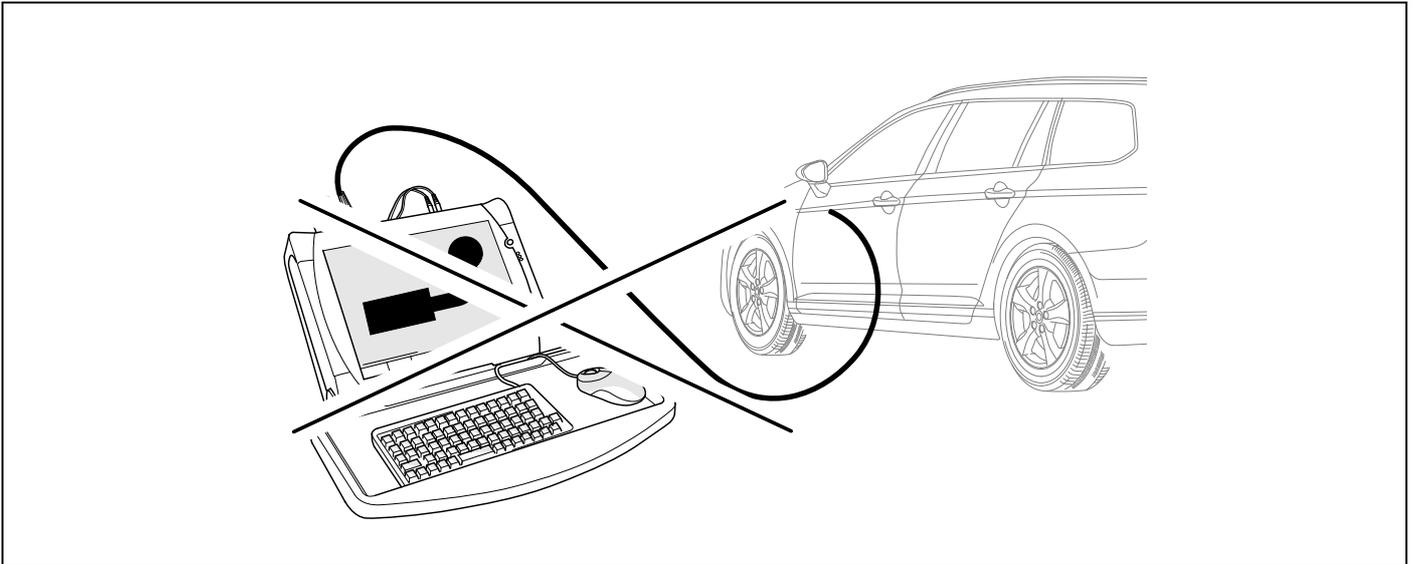


37

### CHECK ALL LIGHTING FUNCTIONS

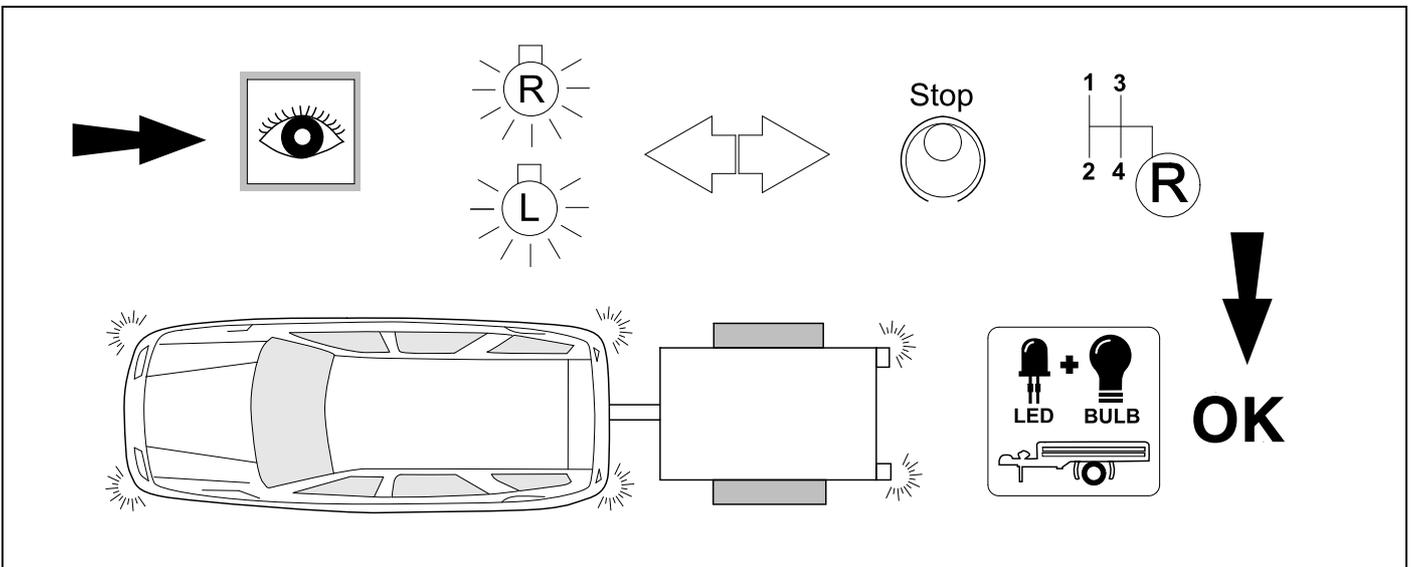


38

**Bulb out condition indicated with sound from modul speaker**

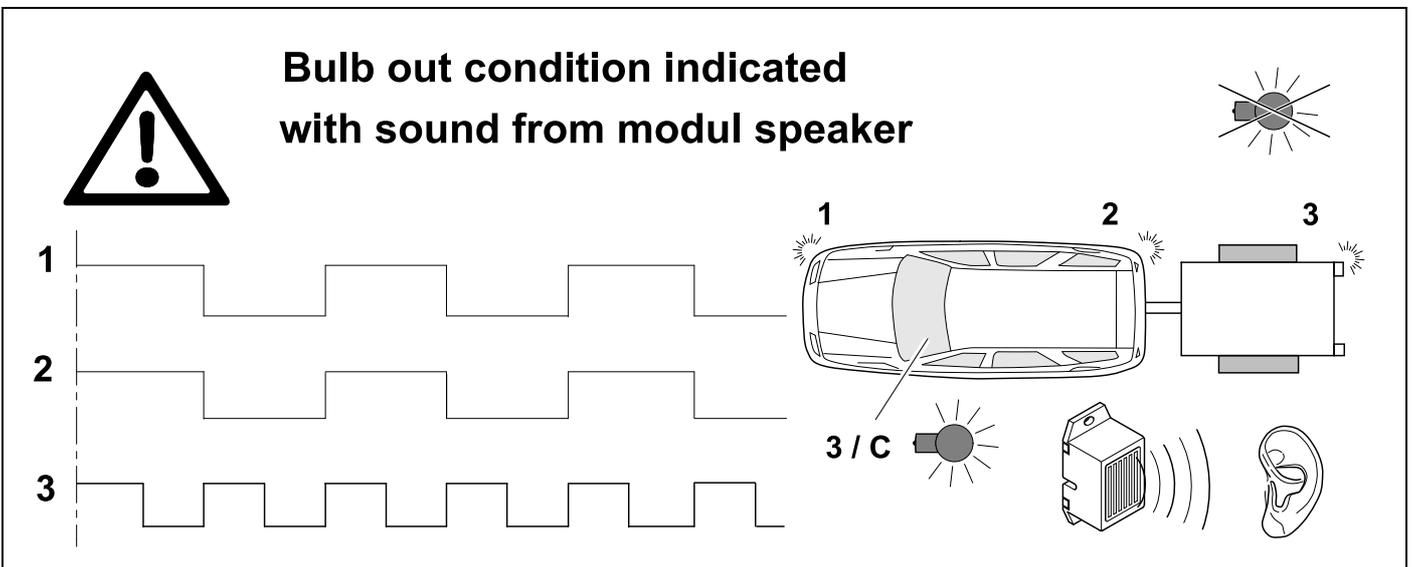


39

⇒ 21

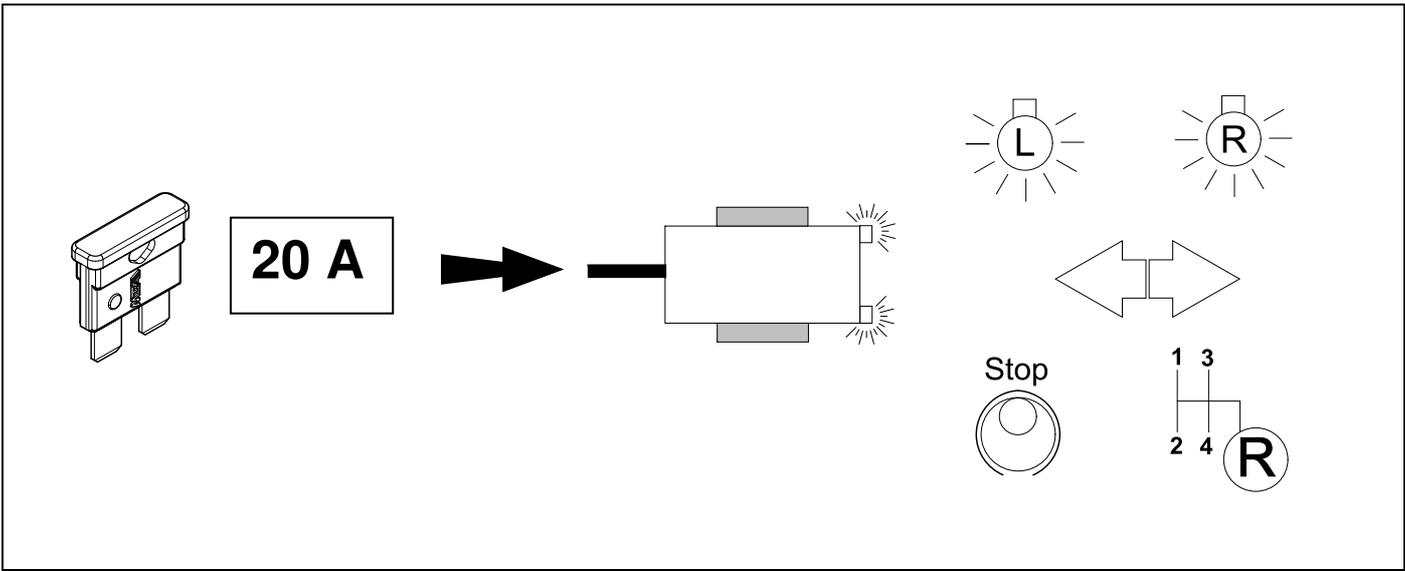

40

**With vehicle coding**

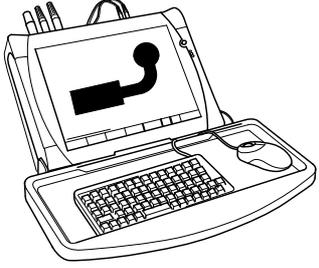




**38** ⇒ **40**

**TSP**  
Trailer  
Stability  
Program

**! Attention !**

**These codings may be lost**

**after visiting an authorized workshop!**

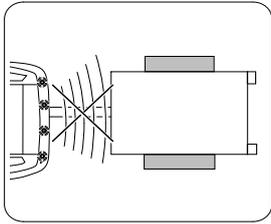



**P** 



**Trailer  
Assistent**

# OPTION vehicle coding

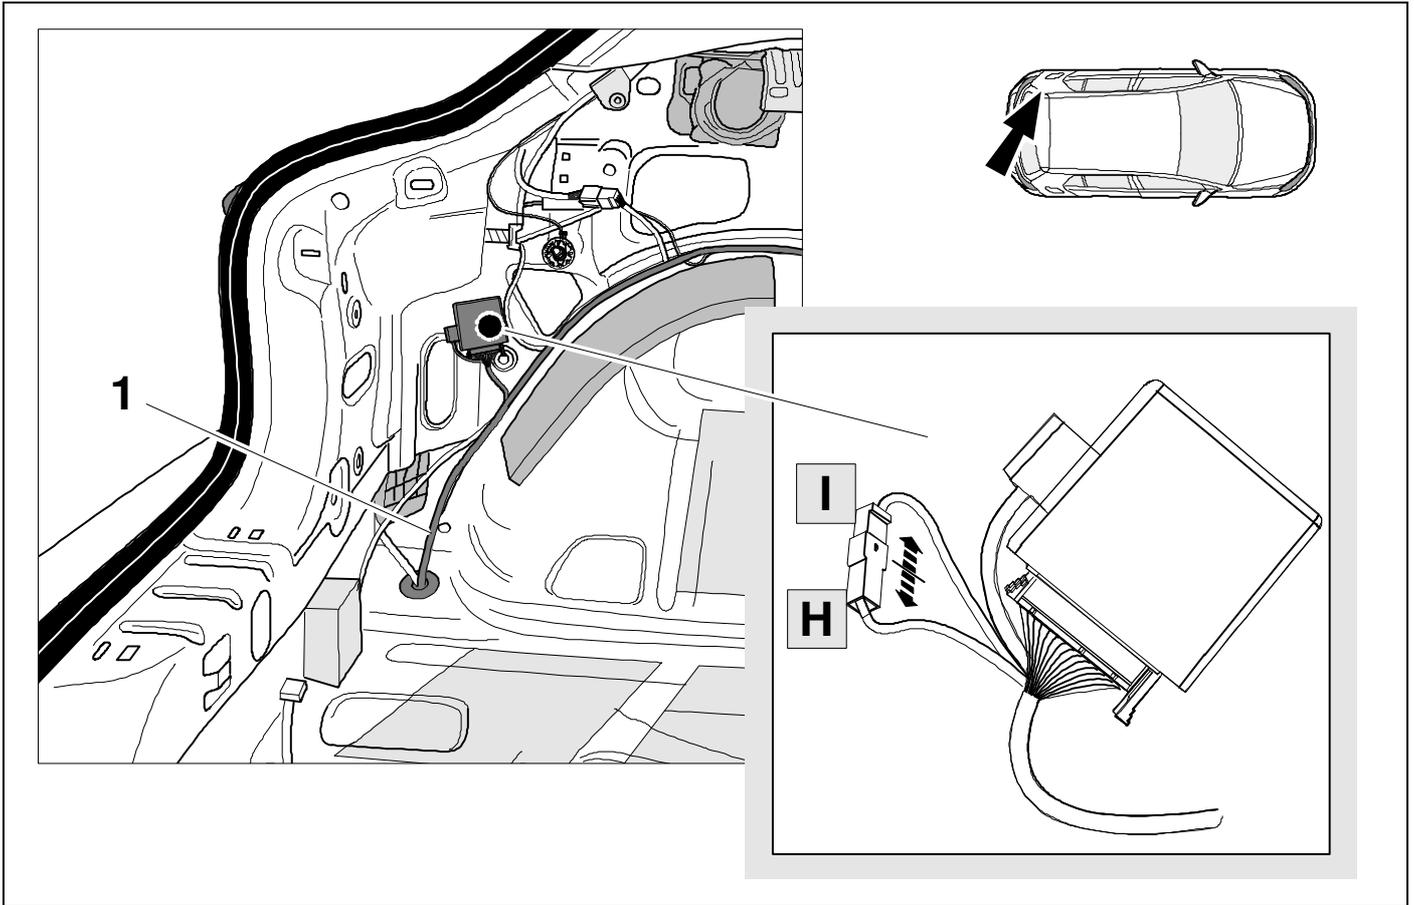

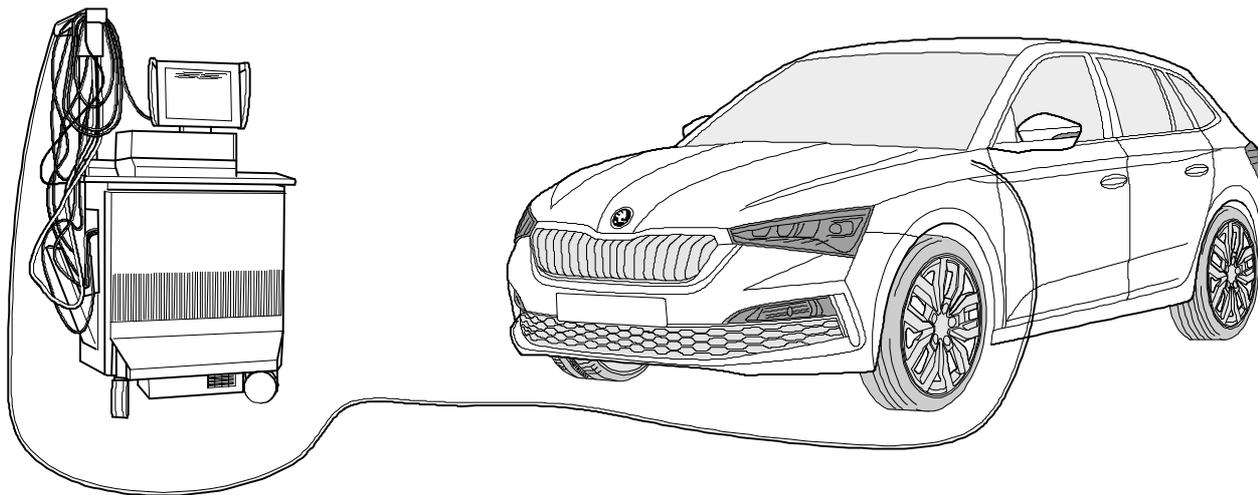

GB

### Coding with VCDS, please note:

The procedure described below for encoding and enabling the trailer mode only serves for a general orientation and can vary greatly depending on the model (motorisation / equipment). If necessary less or further control units will have to be adapted.

➤ **After connecting to VCDS, the "69 trailer function" controller has to be set to encoded in the \_19 installation list.**

➤ **Coding EZE\_09**

**(electronic central electric controller; Login 31347)**

Diagnosis / Networking plan / Controller self-diagnosis encode hitch\_ecu > installed

Vehicles from (MJ 2017>>) adjustment > channel

-integration trailer control unit > installed

➤ **Coding ZKS\_46 (Central module convenience system)**

trailer monitoring > put on active trailer control unit > installed

➤ **Coding\_03 (Brake Electronics; Login 61378)**

Adjustment > channel - trailer stabilization,

change value to > active

➤ **Encoding SWA\_3C (Lane Change Assist)**

ECU for draw bar > with ECU for draw bar

➤ **Encoding SCH\_17 (Dash panel insert)**

Trailer > yes

➤ **Encoding RFK\_6C (reverse camera system)**

equipment\_ahk > installed

➤ **Encoding STF\_74 (chassis control system)**

Trailer > installed

➤ **Encoding EPH\_76 (PDC controller)**

Trailer > trailer device can be removed manually

➤ **Encoding DiS\_13 (controler distance control, possible Login 20103)**

Control module for towing sens > installed or

Control module for trailer recognition > installed

(Byte 03 Bit 03)

➤ **Encoding FFF\_A5 (front sensor system controller)**

AAG > coded

➤ **Encoding HDE\_6D (boot lid electronics controller)**

Trailer > installed

### Important note on encoding and activating in trailer mode



The aforementioned settings are carried out in the vehicle's electrical system and saved locally. During general updates for the vehicle software (for example, within the scope of service or repair work) the settings may be overwritten and deleted under certain circumstances. At this case, the trailer mode activation has to be updated again locally after the update.

Diagnostic information relating to the trailer mode that may appear during variance comparisons with the data saved in the manufacturer's works, may form the basis of the local activation

**43**

**CHECK BULB OUT DETECTION**

BULB OUT CONDITION INDICATED WITH INCREASED INDICATOR FREQUENCY

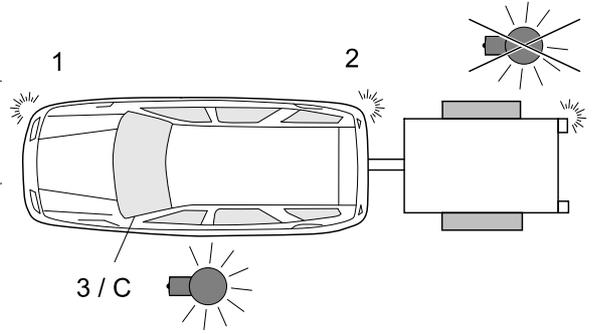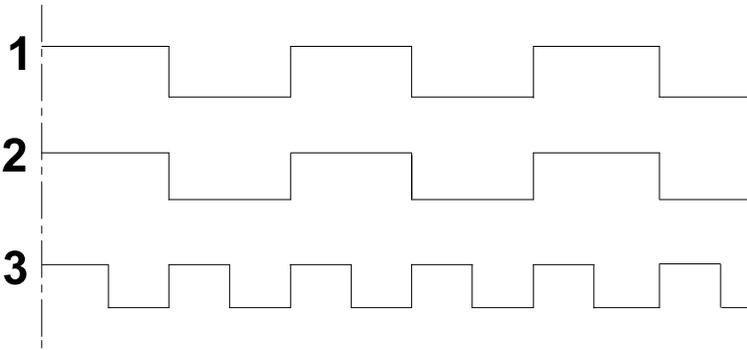

**44**

Service 2x 12

Service

Service

Service



Diagnostics Trailermodule. Refer to the E-Kit fitting instruction

Service

# Status LED für Eigendiagnose

# Status LED for self-diagnosis

## Operation support

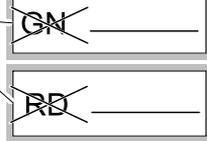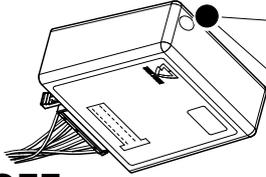





No CAN-Data =





Standby / Sleepmode



Ignition OFF

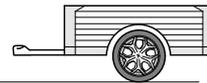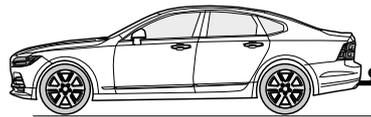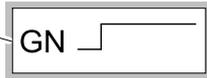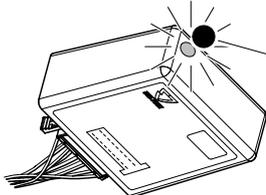






Ignition ON

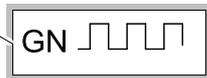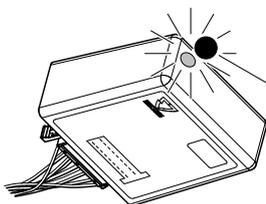




Ignition ON

## Failure support



## Check CAN-Data Wire

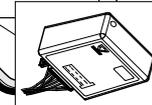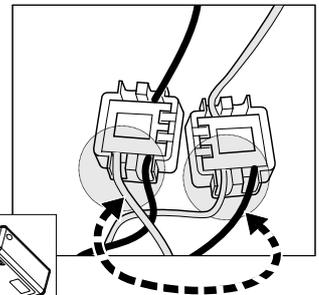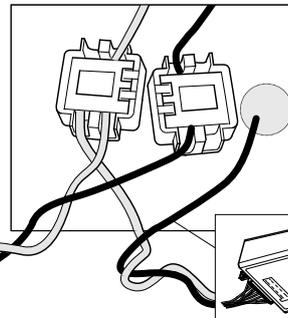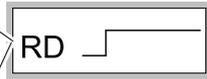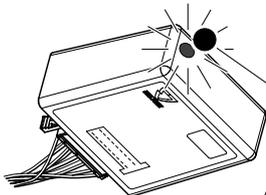




Ignition ON

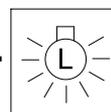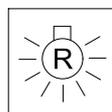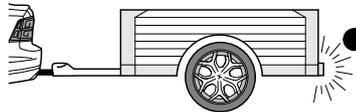

1x max 5 min.

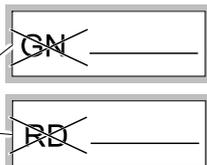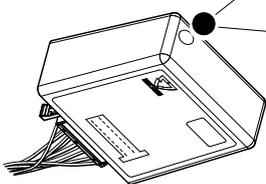

oder / or

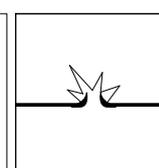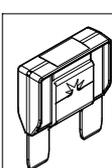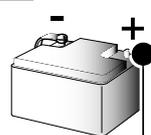


Ignition ON







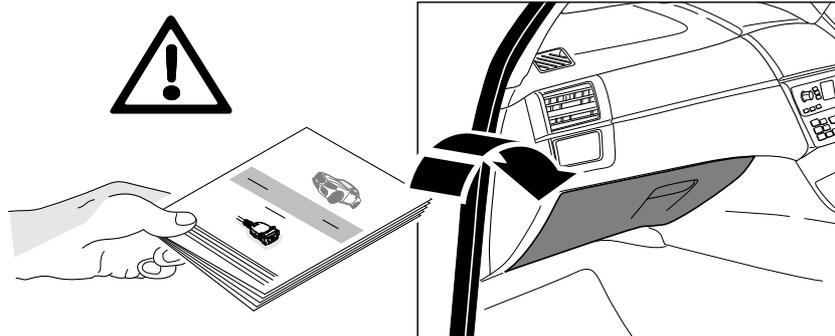

Subject to change in terms of construction, equipment and colour, and may contain errors.  
The information and illustrations are non-binding.