



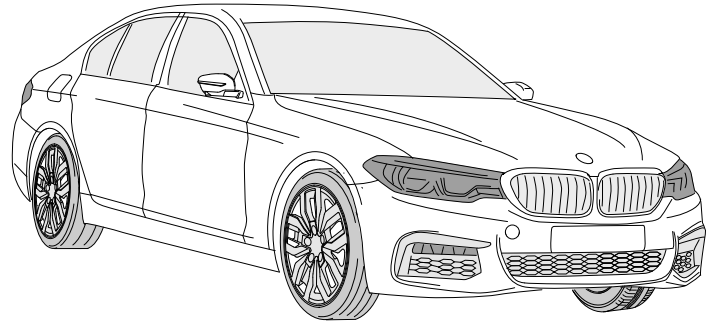

ERICH JAEGER

Installation instructions

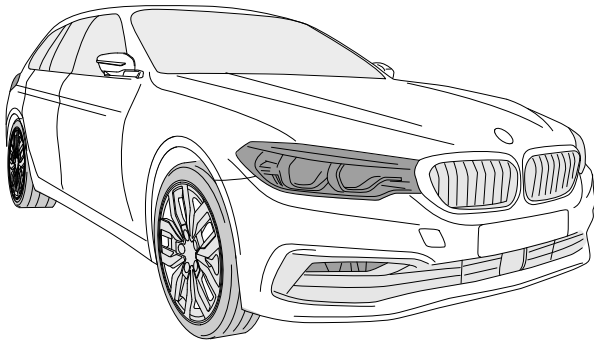

750124

BMW 5-Serie Limousine

G30

02/17 >>

BMW 5-Serie Touring


G31


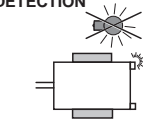






06/17 >>08/20

BMW 6-Serie GT

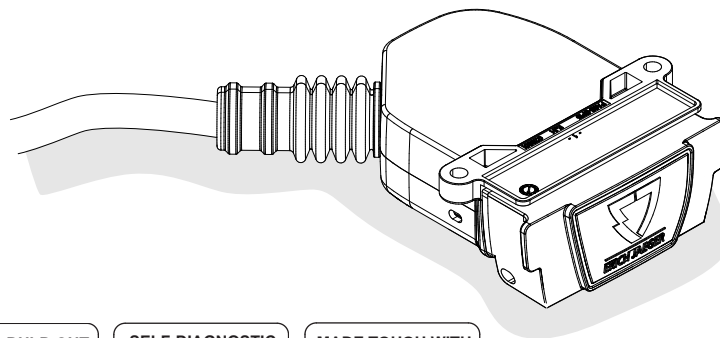G32

11/17 >>

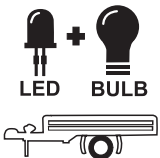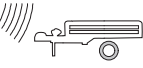

<p>BRAKE CONTROLLER PREPARED</p> 	<p>TRAILER BULB OUT DETECTION</p> 	<p>SELF-DIAGNOSTIC CAN-BUS ECU</p>  <p>JaegerCANtrol™</p>	<p>MADE TOUGH WITH JAEGER FIBRE TECHNOLOGY</p> 
<p>LED + BULB</p> 	<p>AUTOMATIC TRAILER DETECTION</p> 	<p>WATERPROOF SOCKET INCLUDED</p>  <p>WEATHERLOCK™</p>	<p>AUTOMATIC PDC DEACTIVATION</p> 

Reference:

The following information must be reviewed before beginning the assembly:

The installation instructions are to be thoroughly read.


The installation should be carried out by qualified personnel with the relevant technical knowledge.

The vehicle manufacturers' current technical notices and information on retrofitting must be followed.


The removal and replacement instructions found in the current repair manuals must be followed.

It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.


OVERVIEW

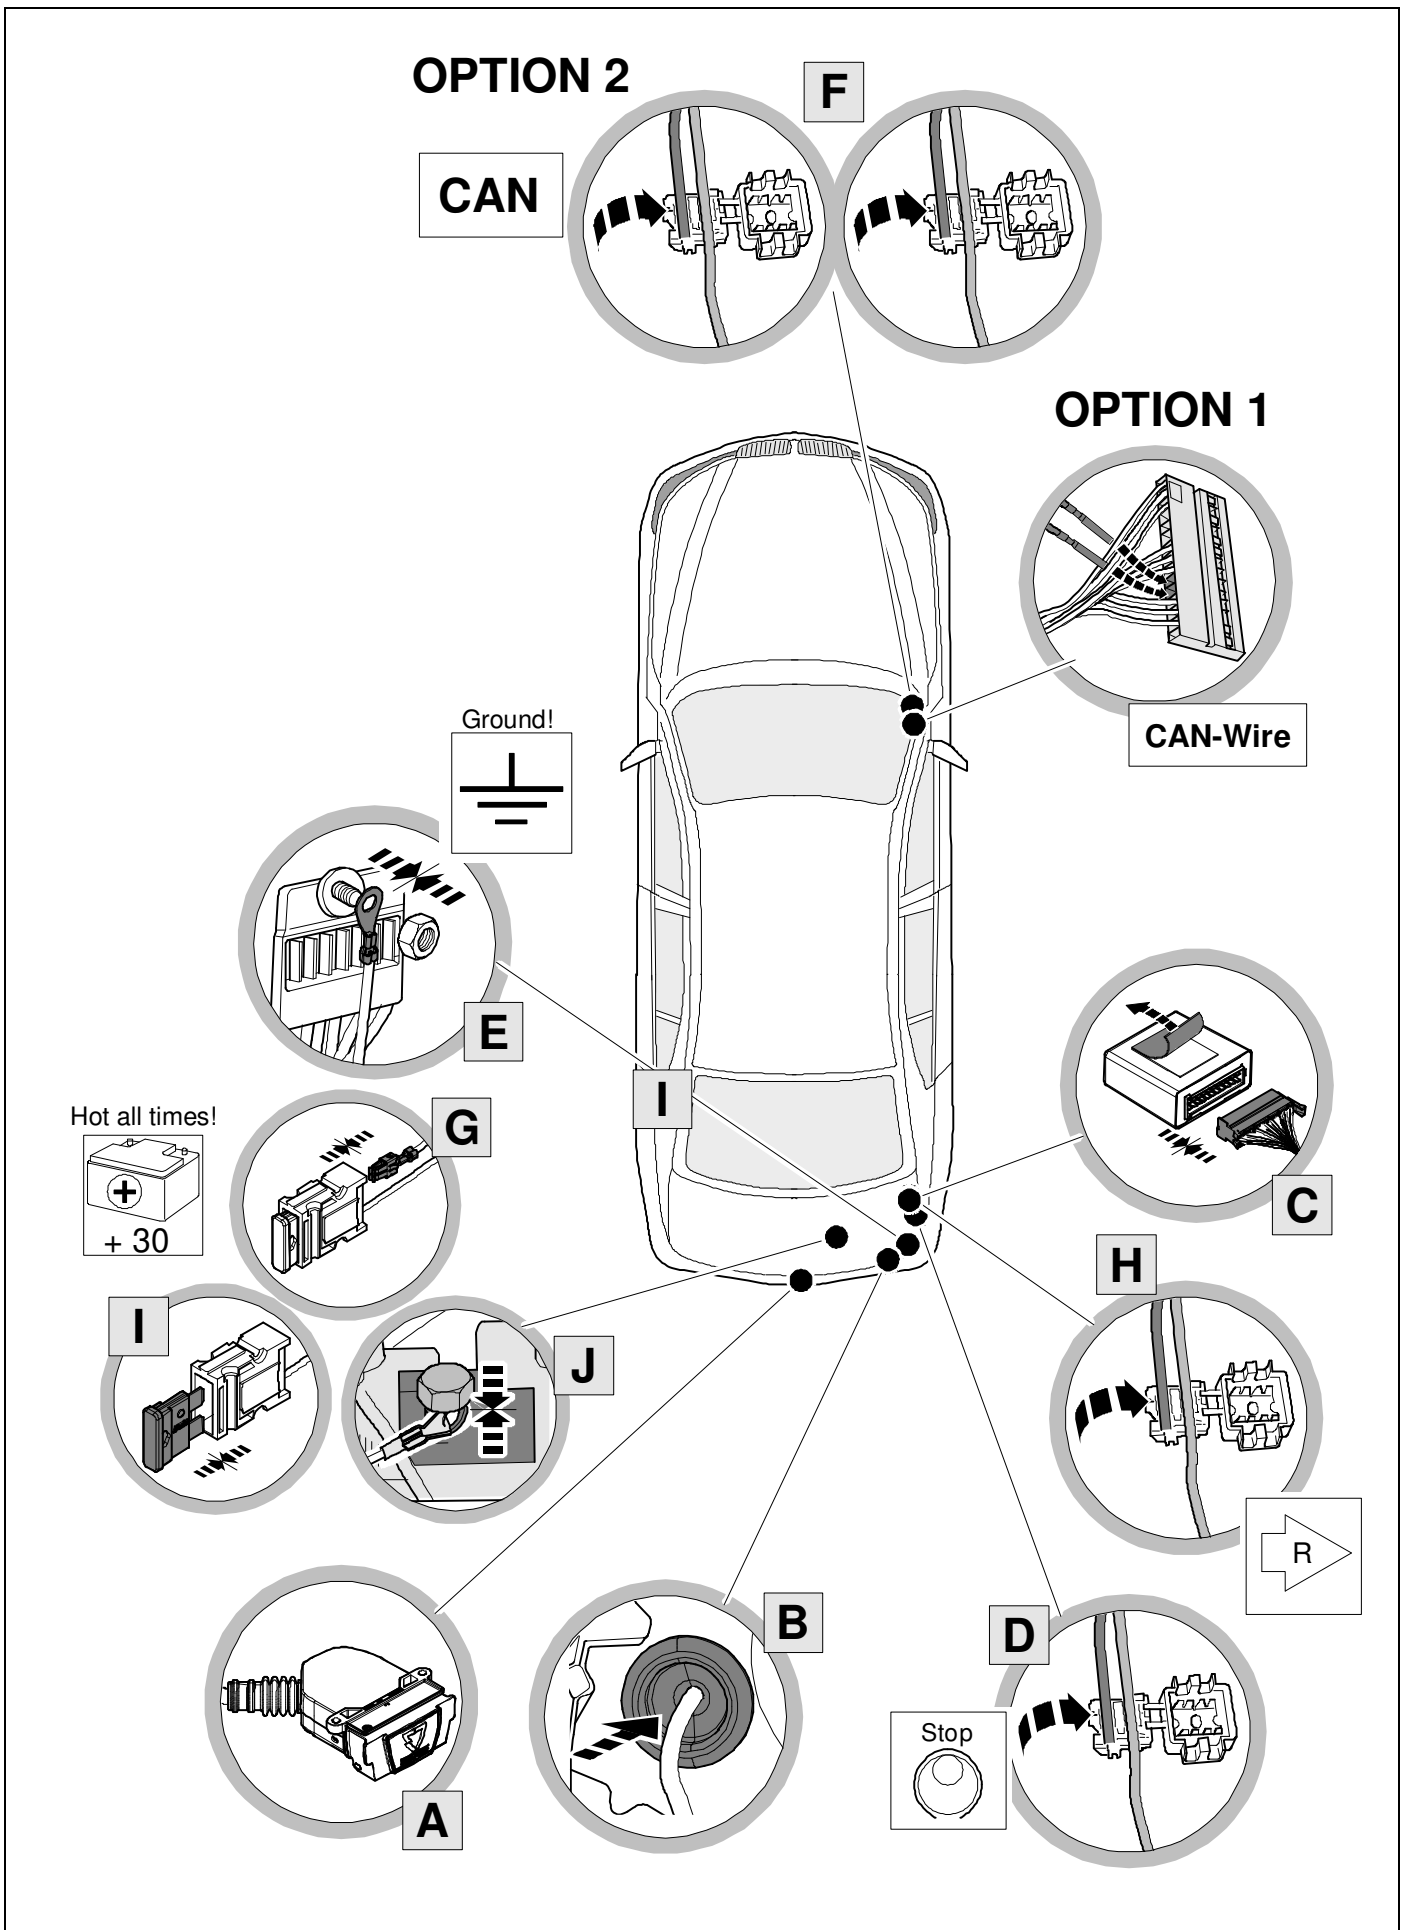


KIT

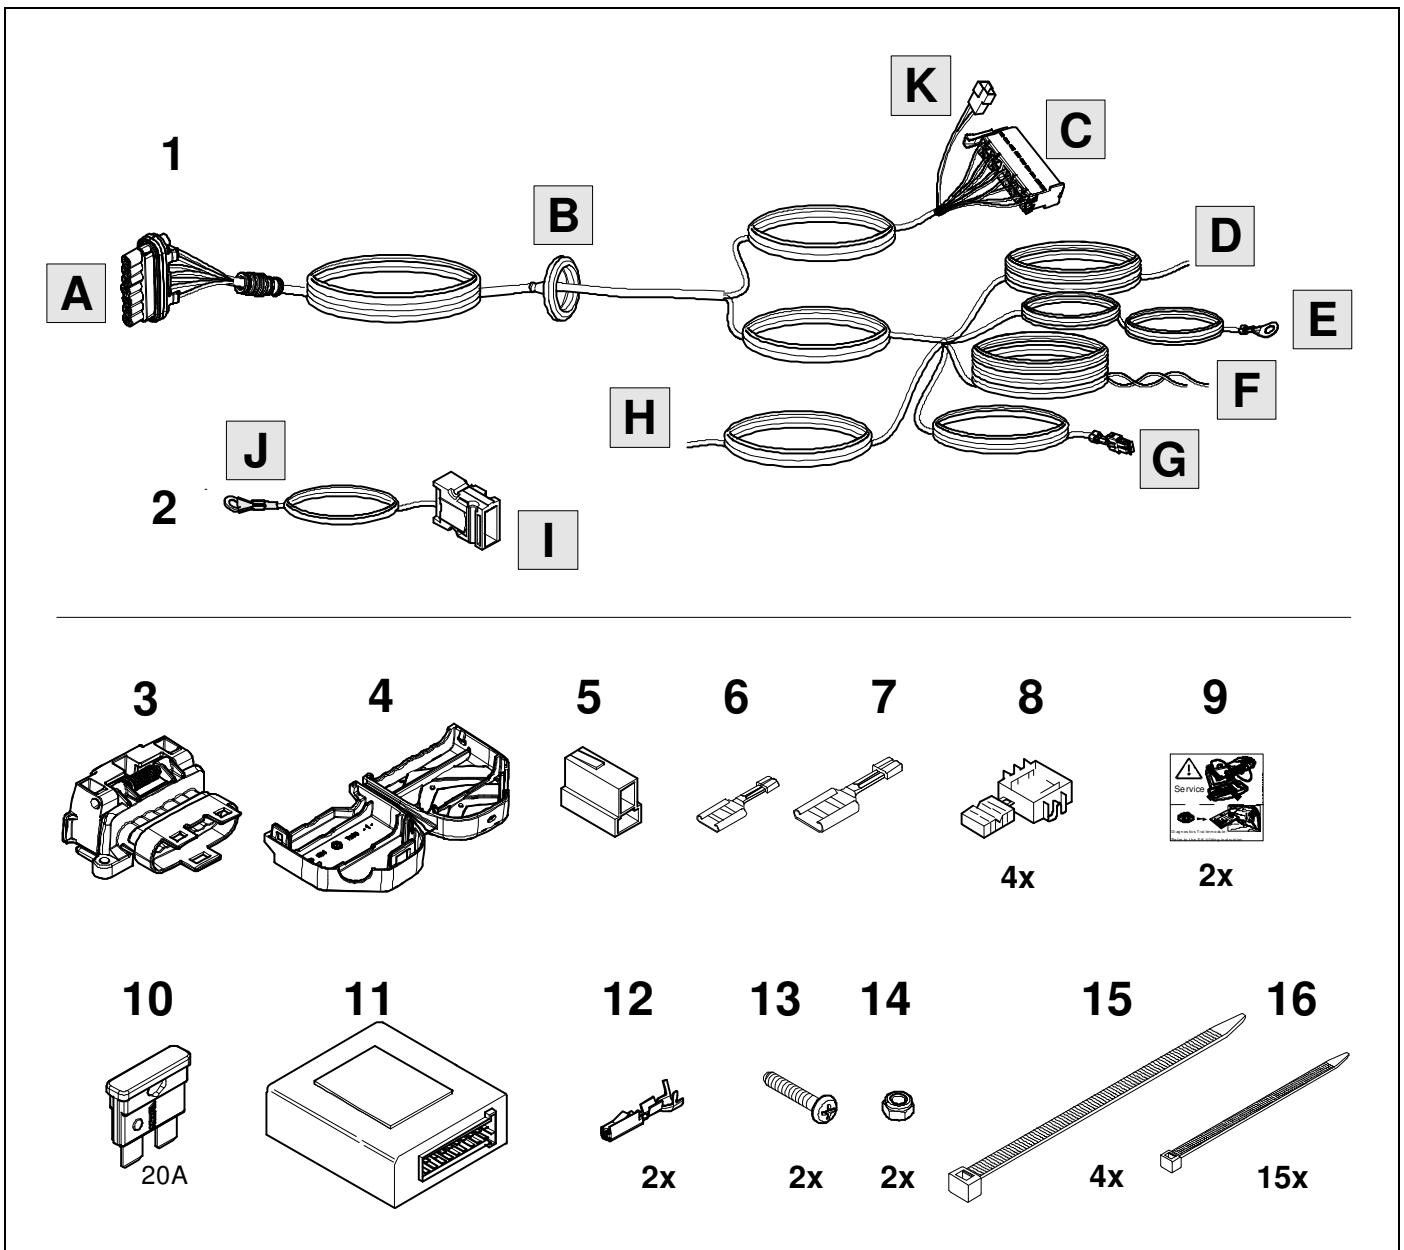


TOOLS

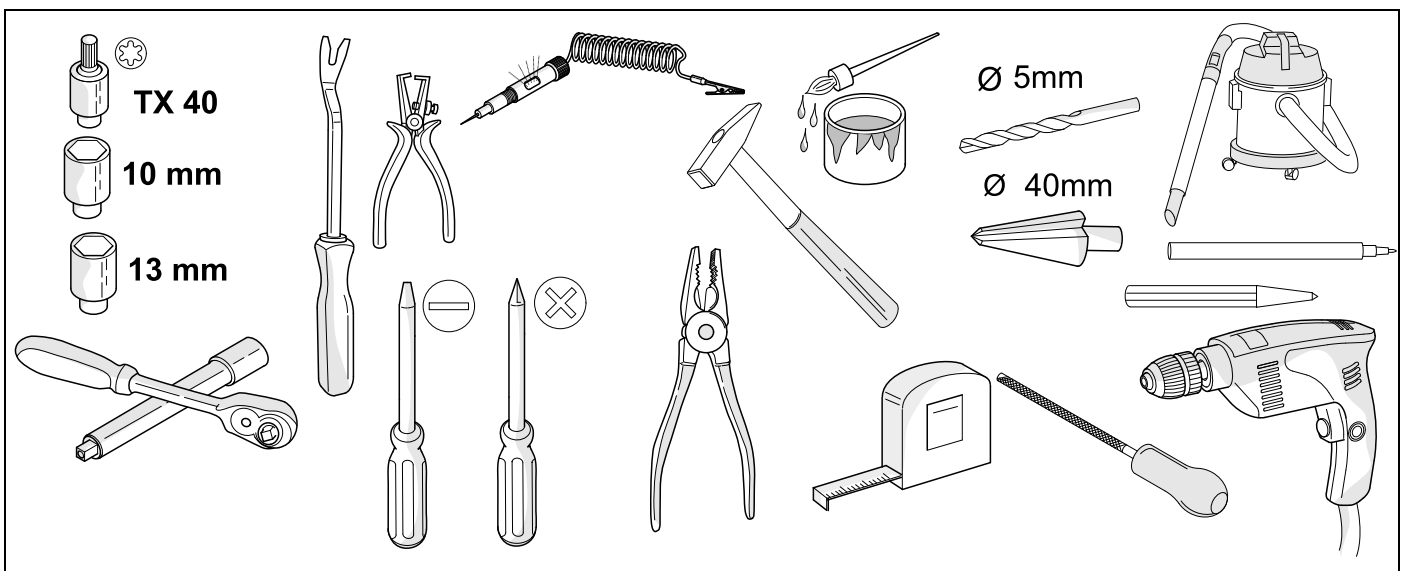



1

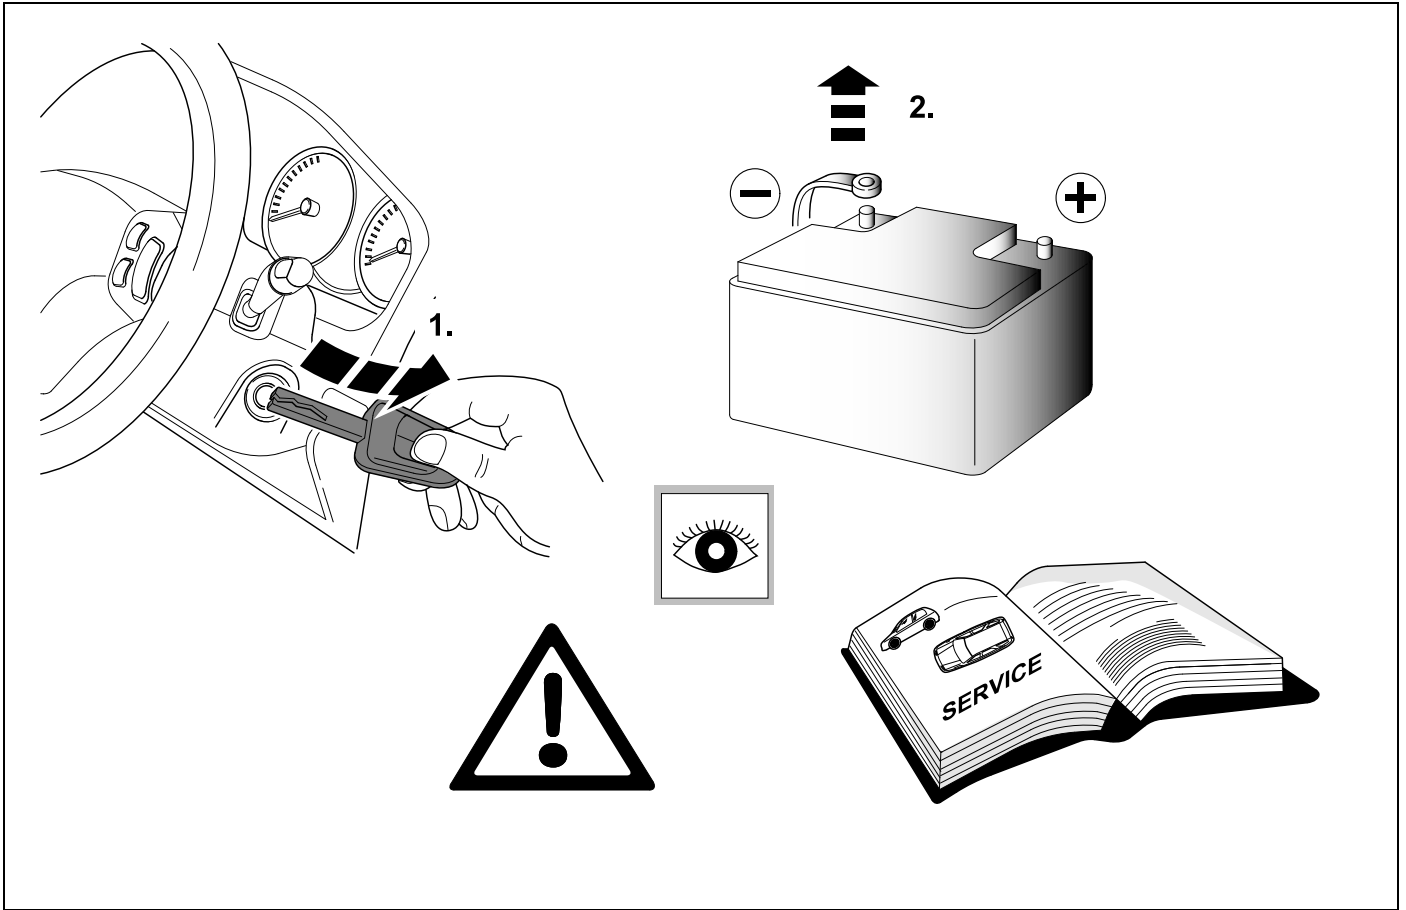







2 REMOVE

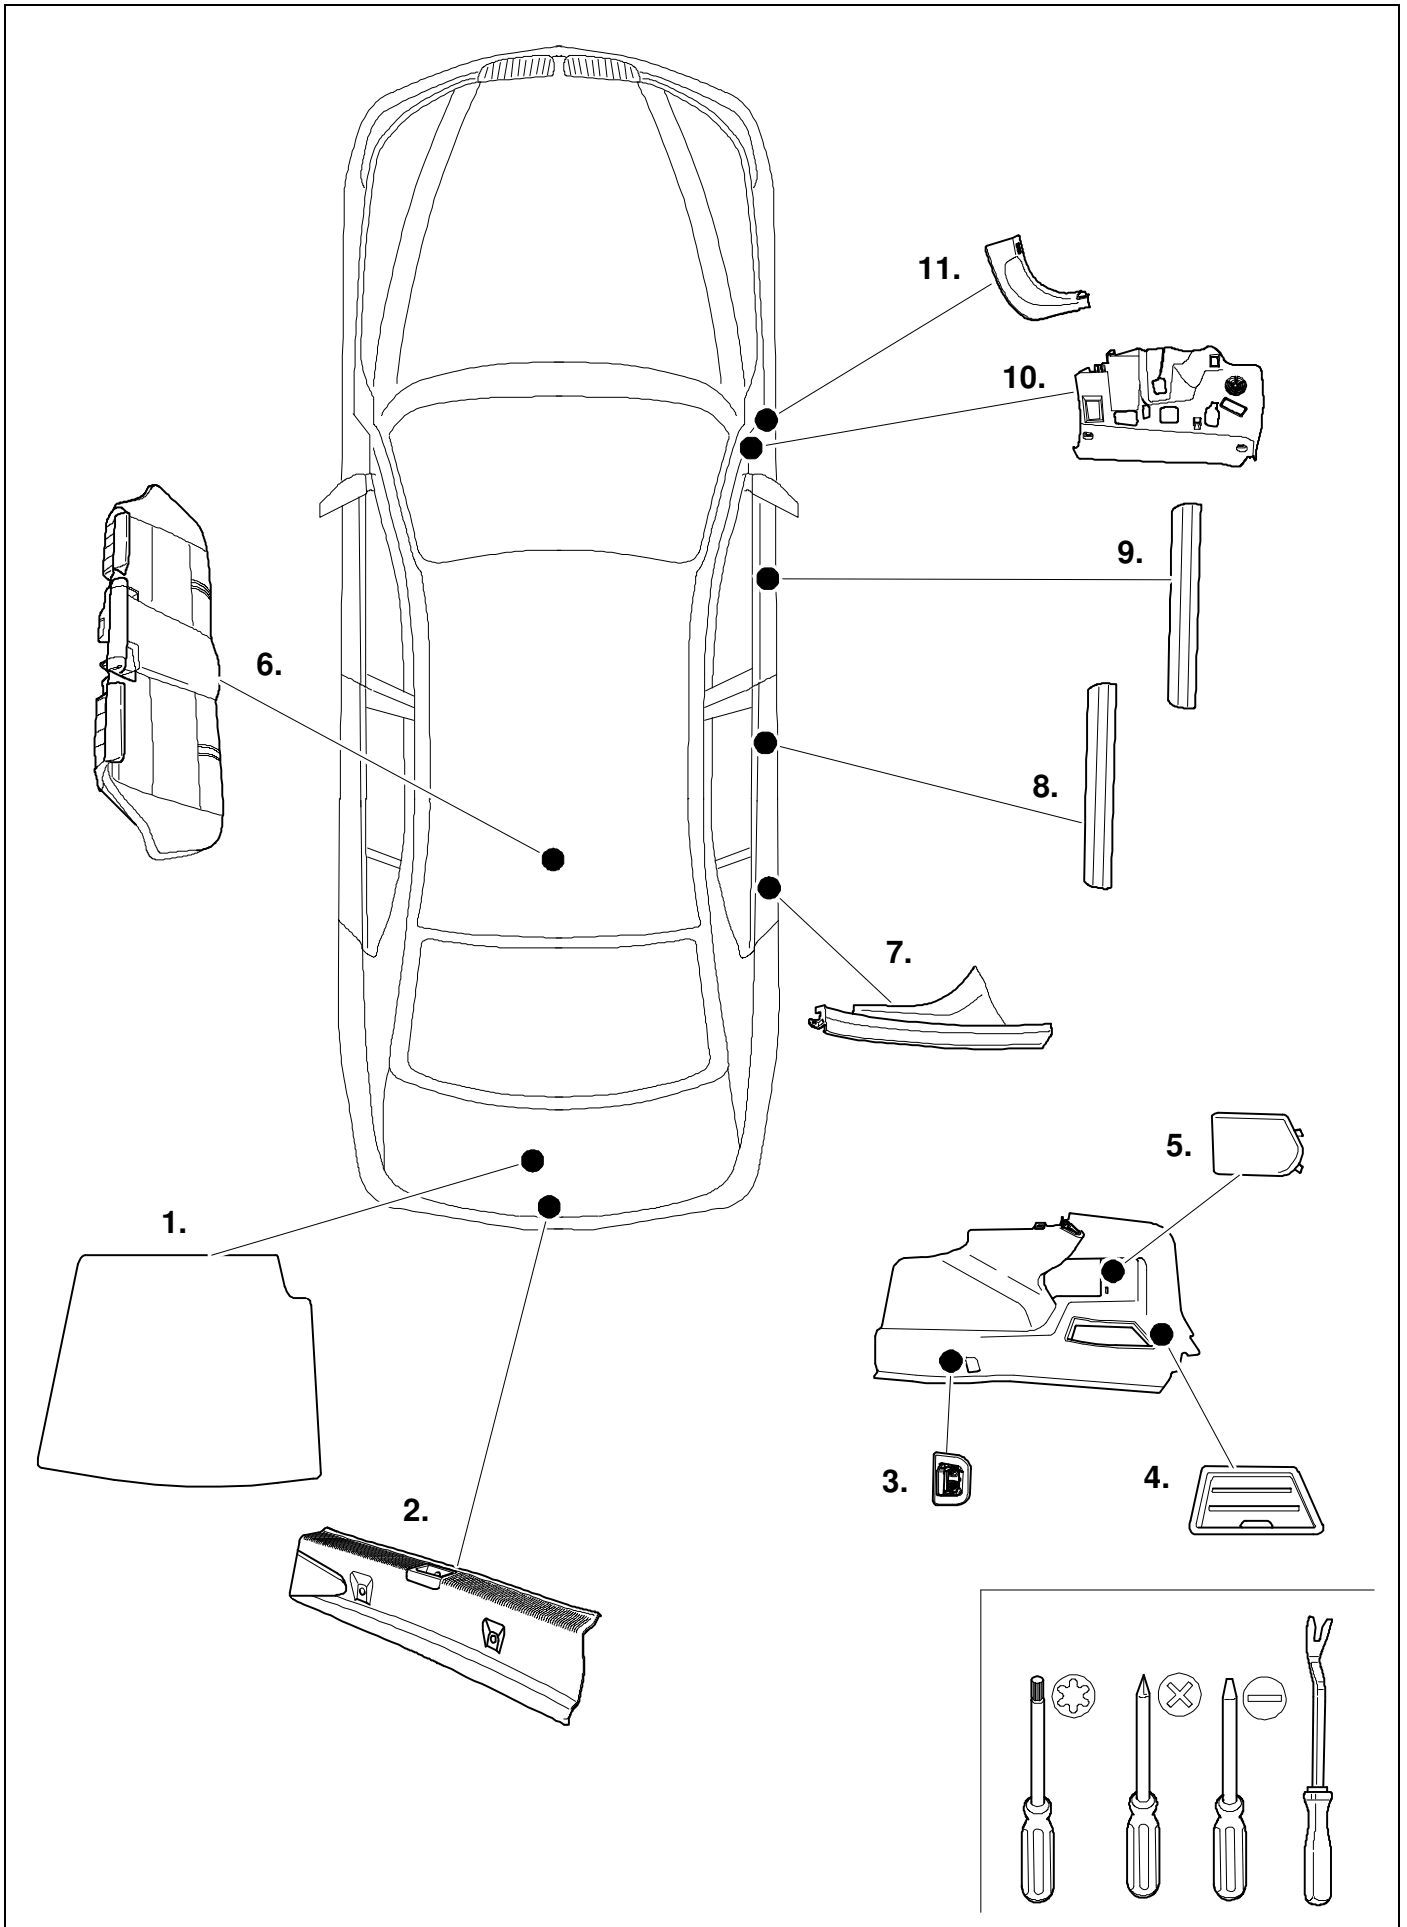






3

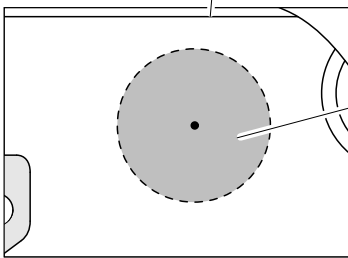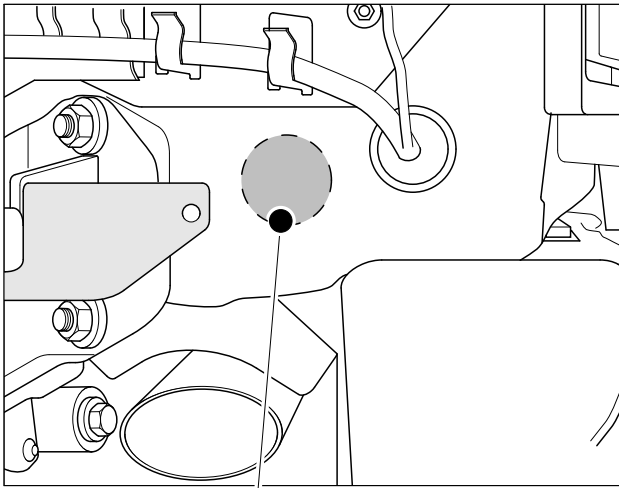





Ø40mm

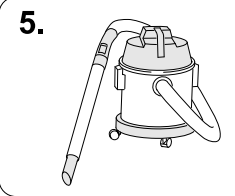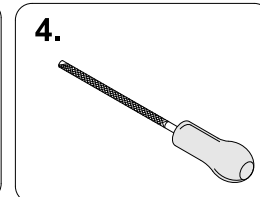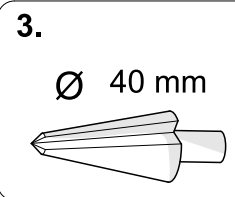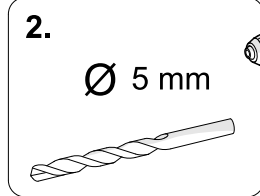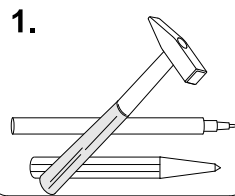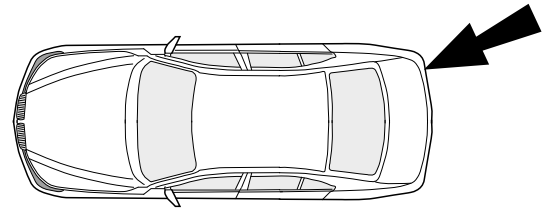






4

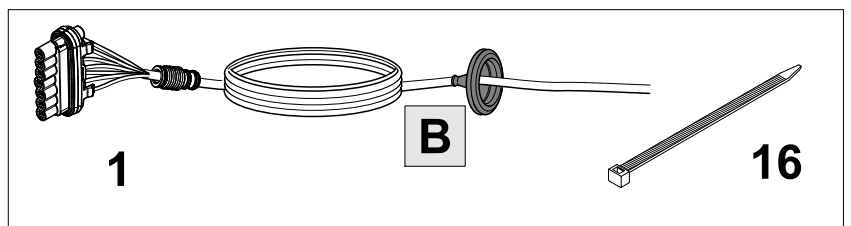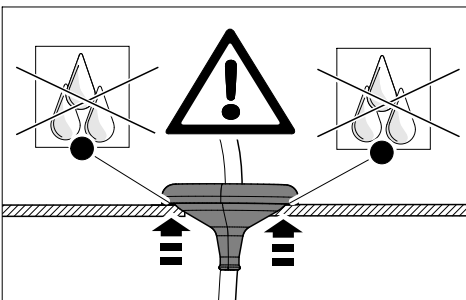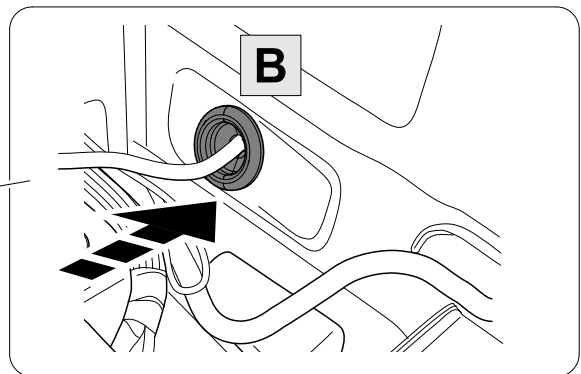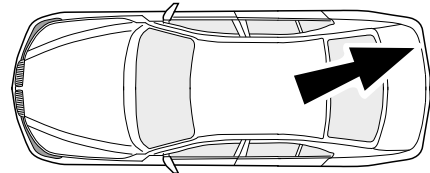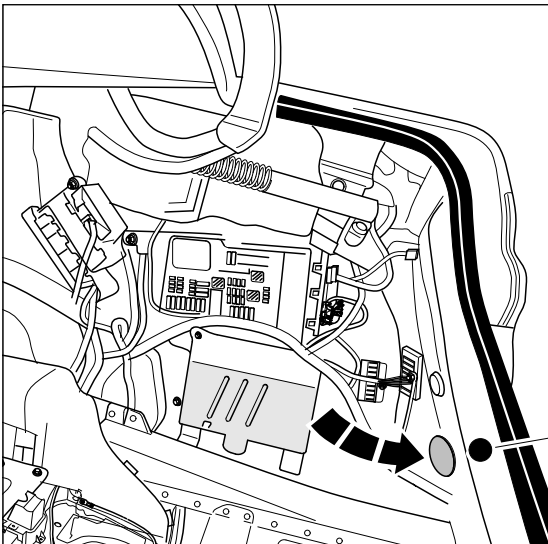


5

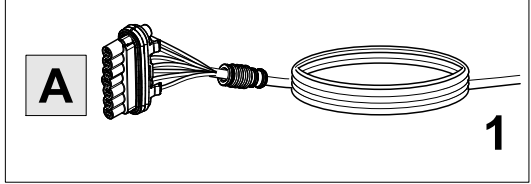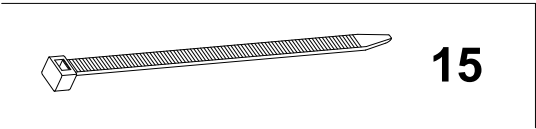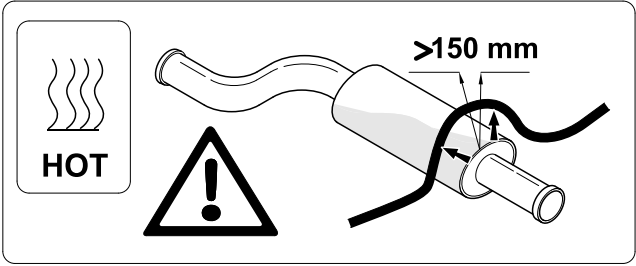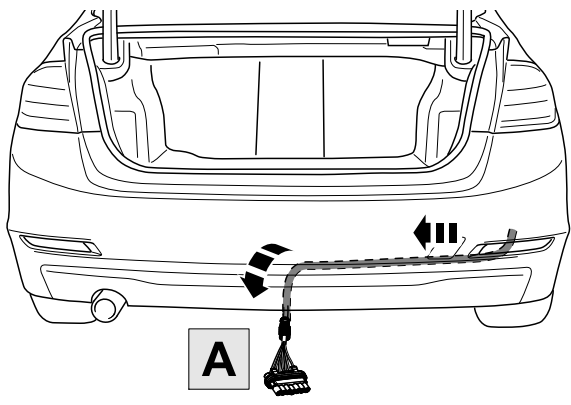

6

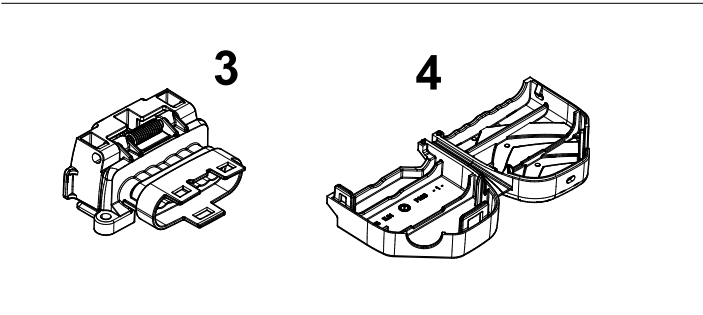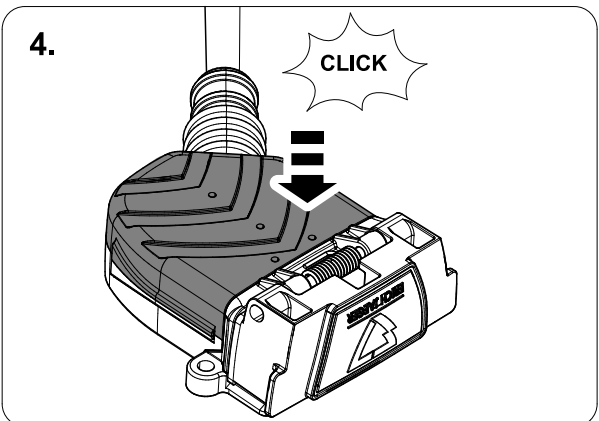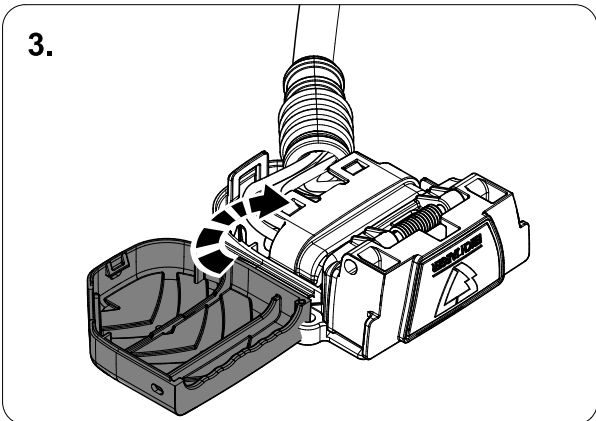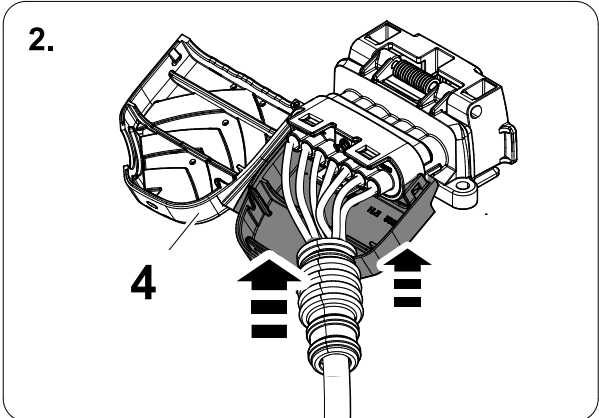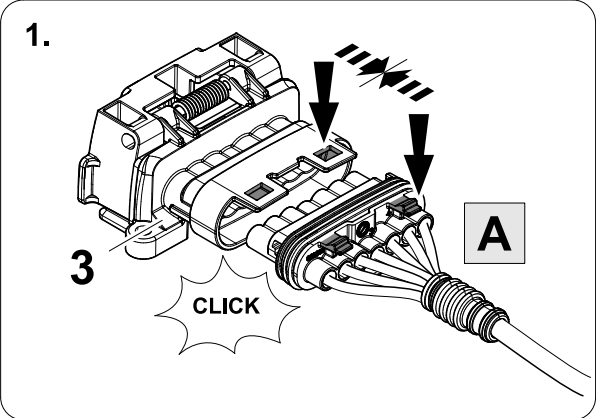

7

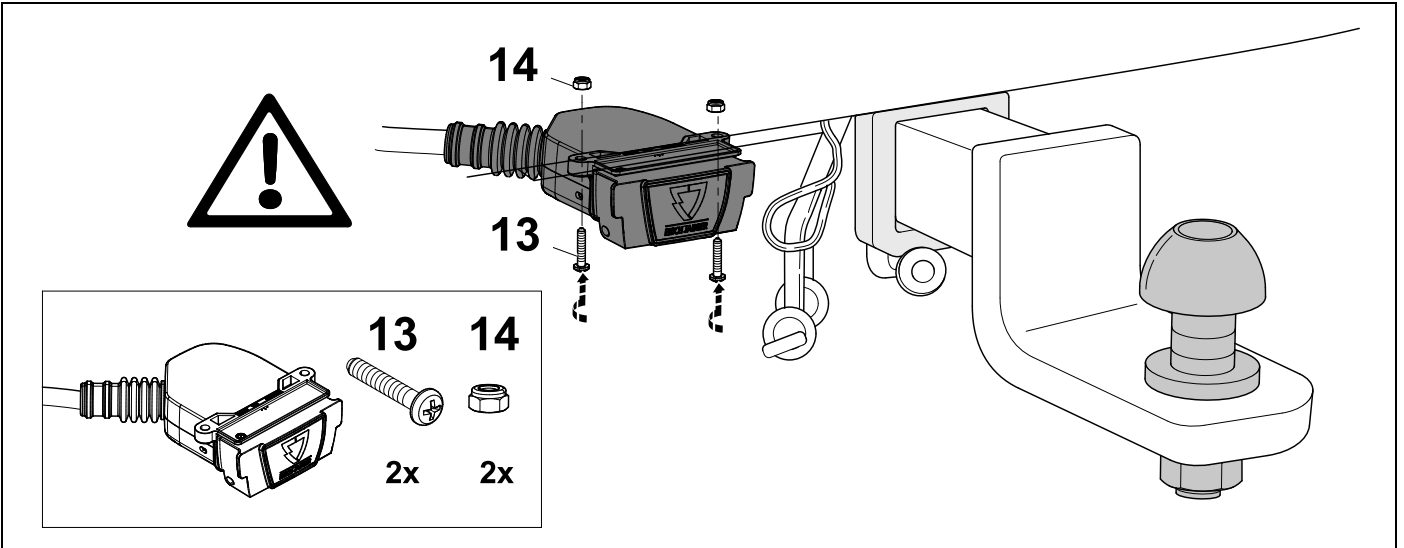

8




9


1	ye	←
2	bk	1 3 2 4 (R)
3	wh	⏏
4	gn	→
5	bu	🔑
6	rd	Stop
7	bn	💡

9	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
GB	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied


10

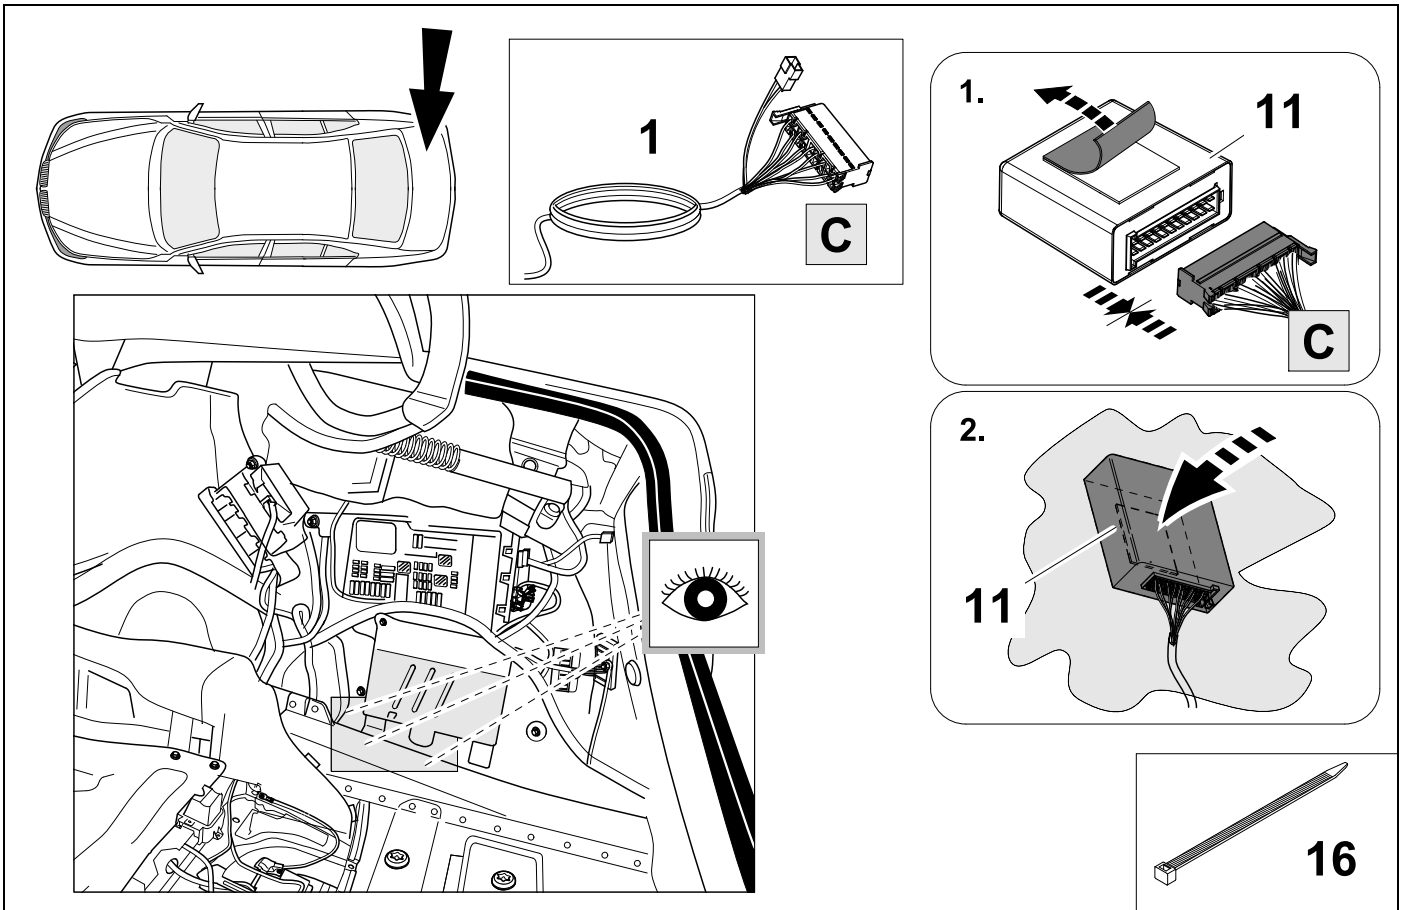






11

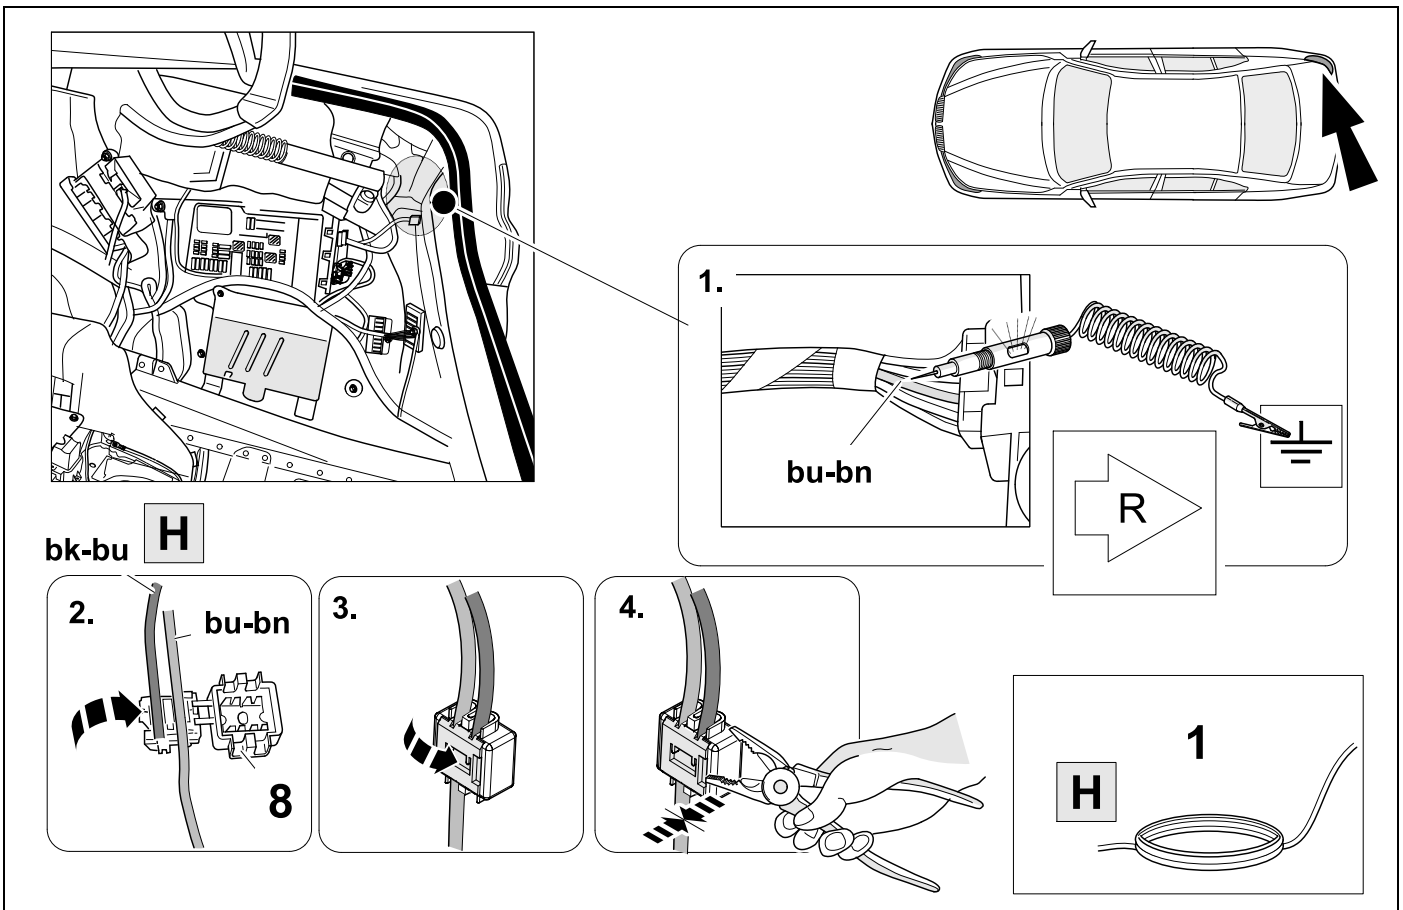




12

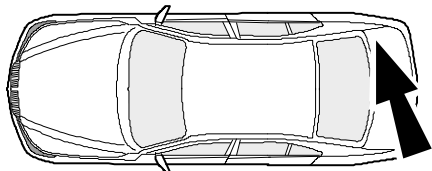


Ground!




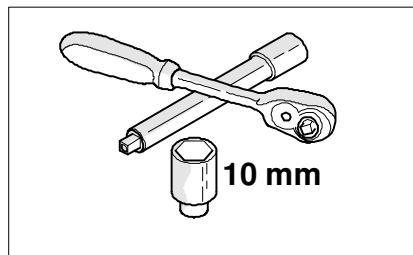
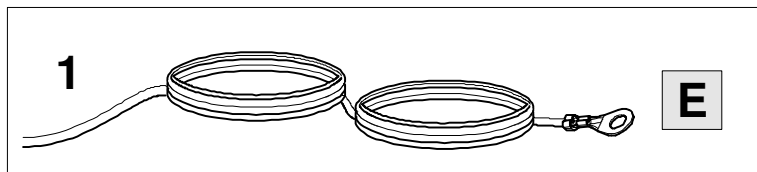
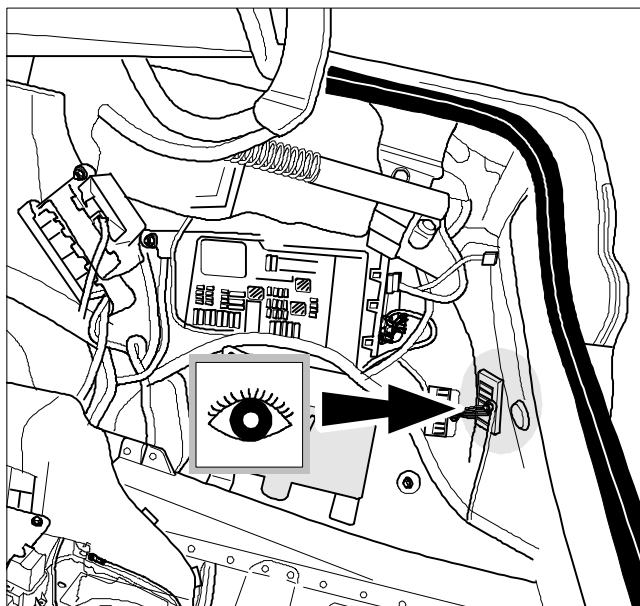
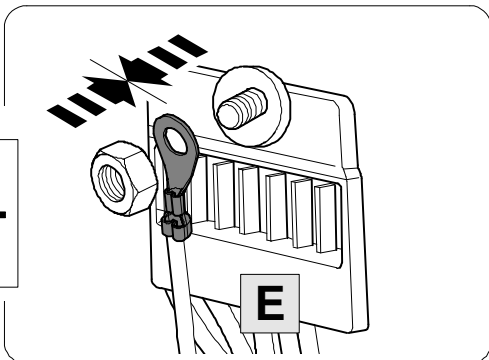
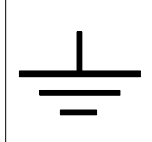


13

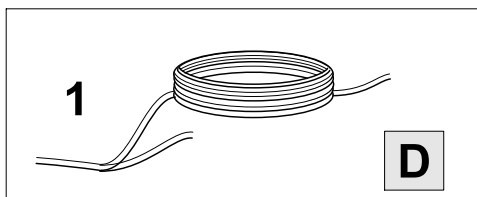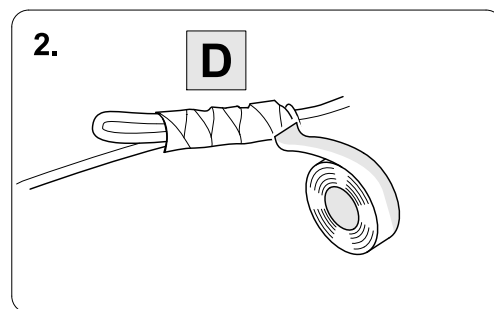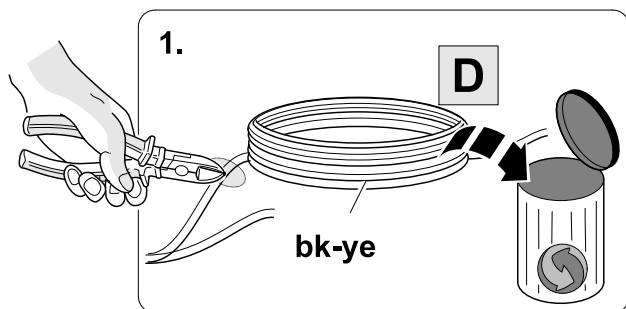

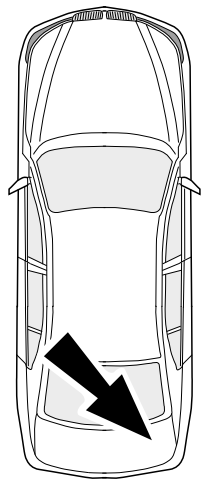


Hot all times!

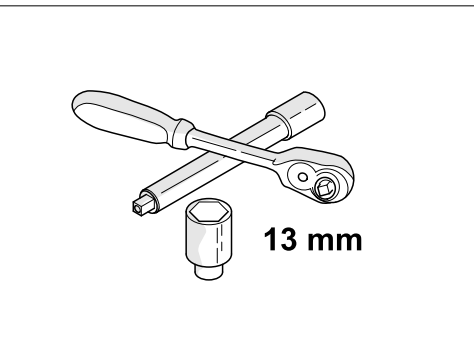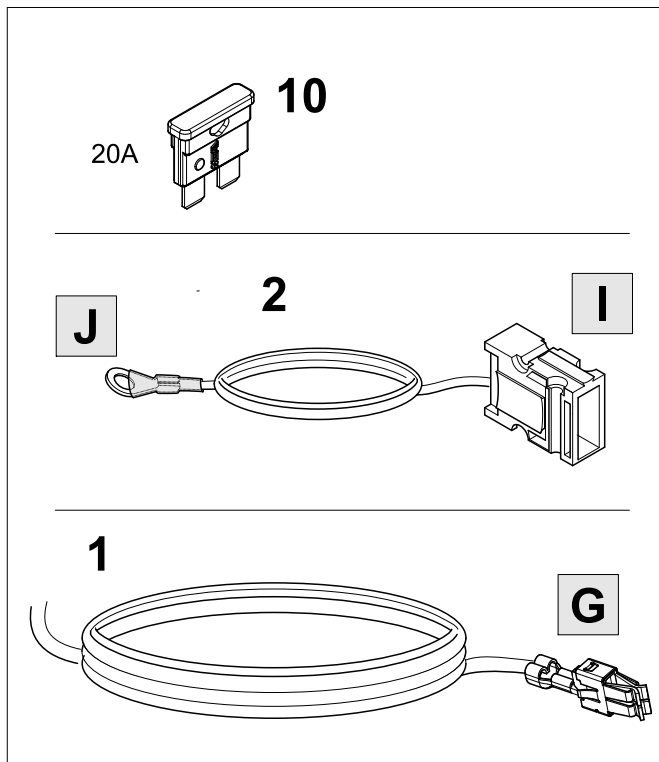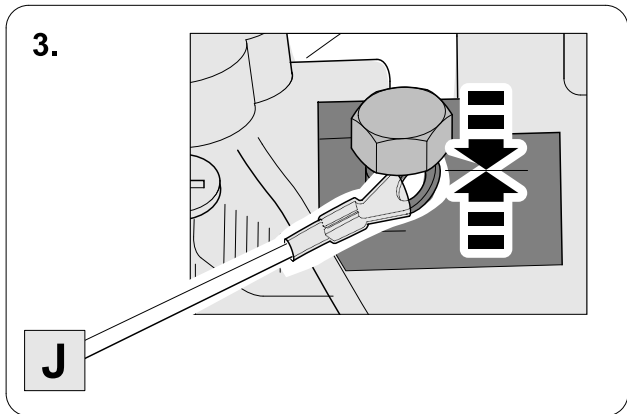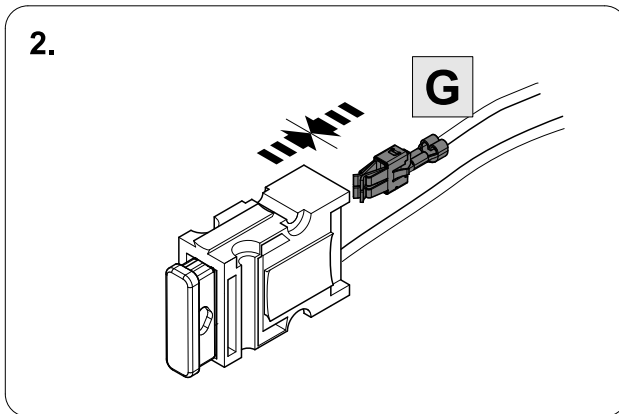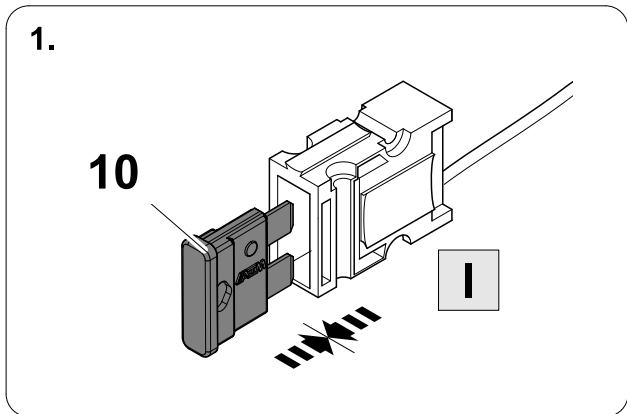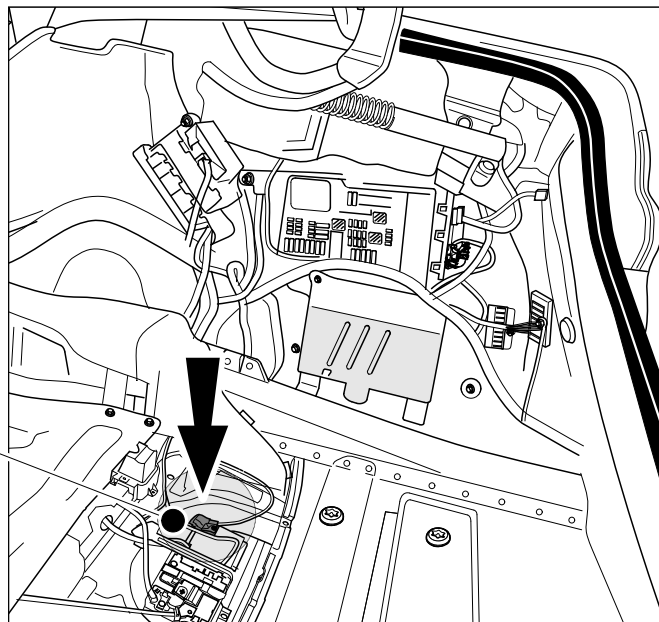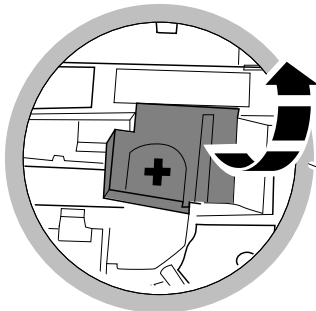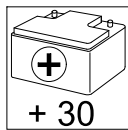


13 mm

15

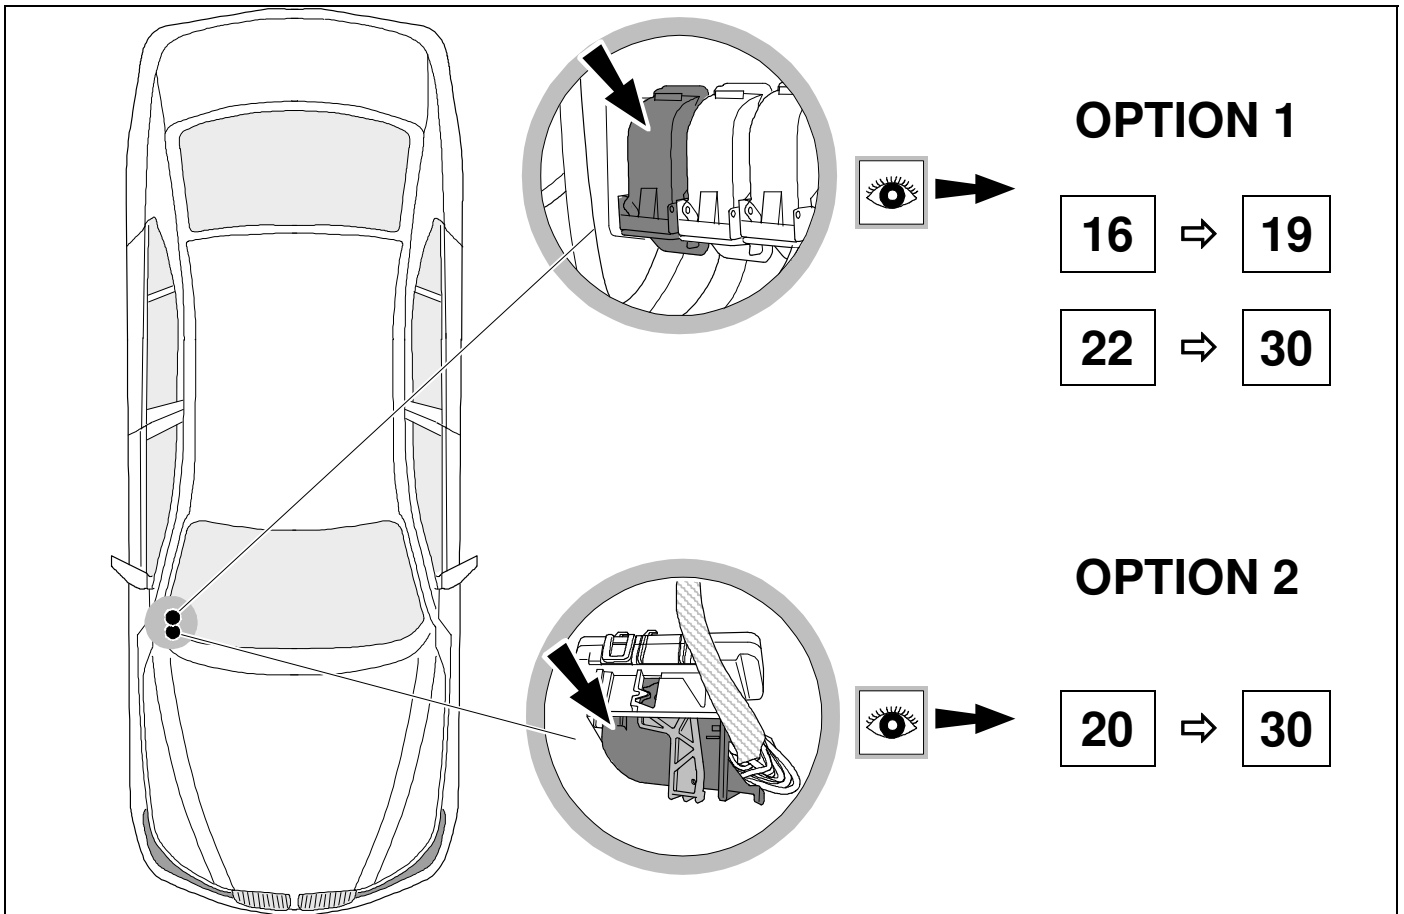



16 OPTION 1

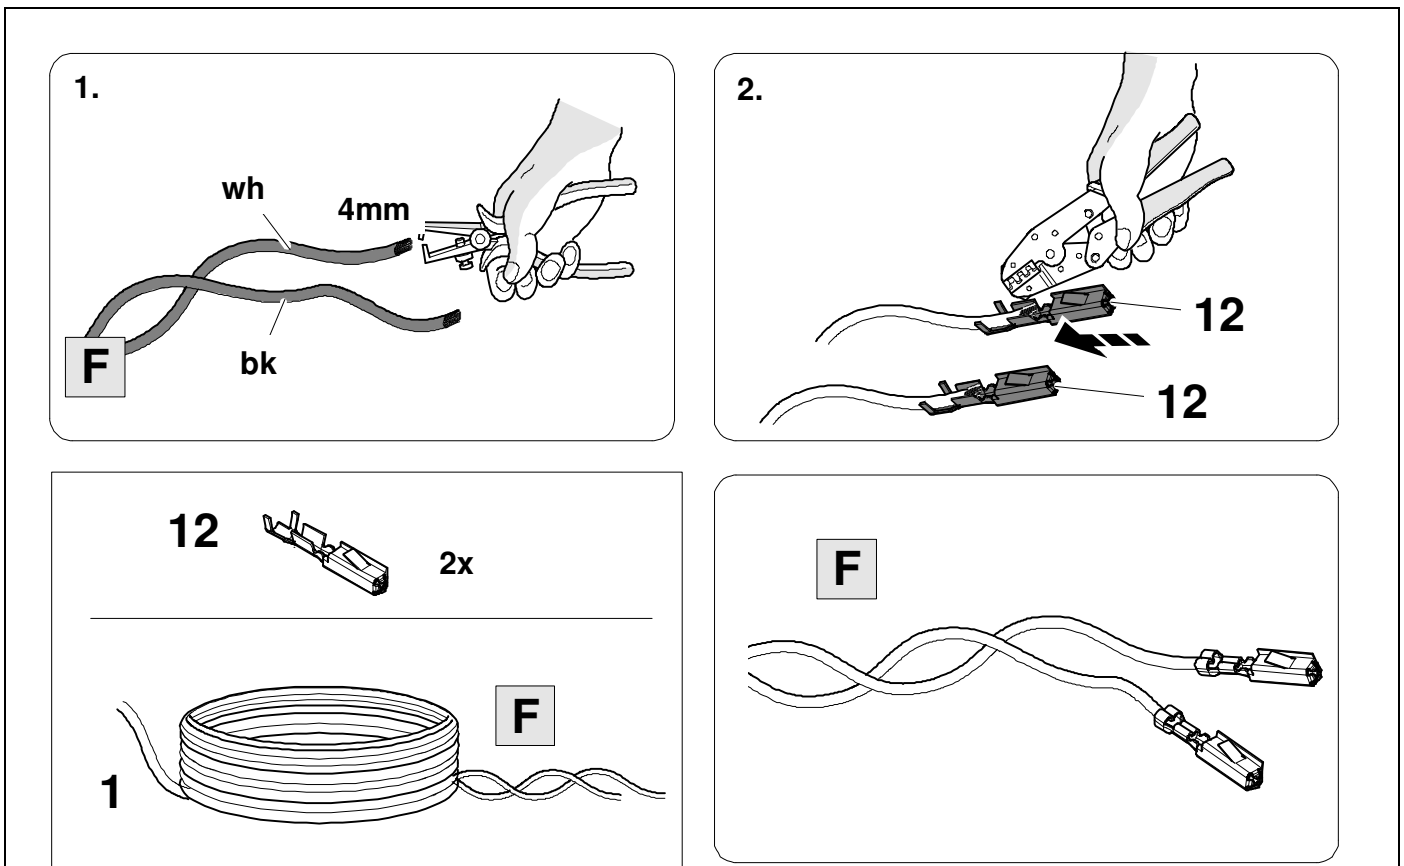



17 OPTION 1




9

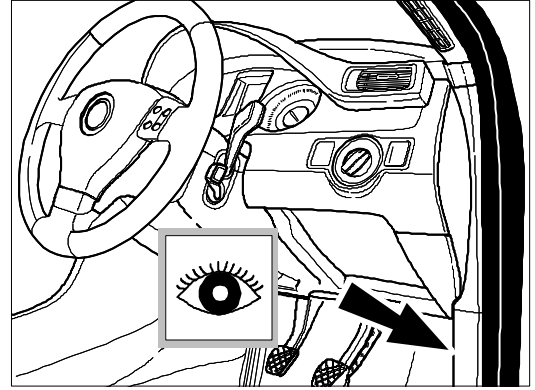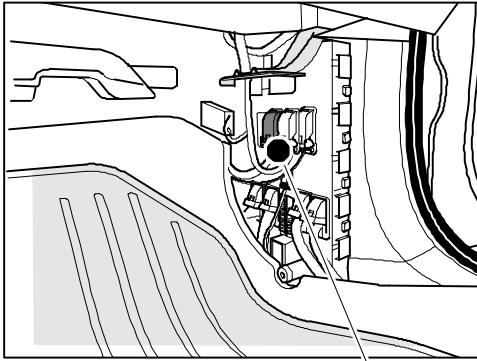

CAN bk

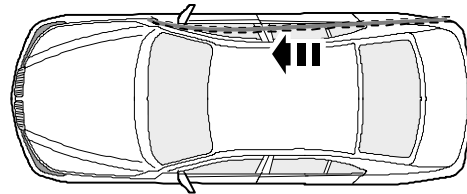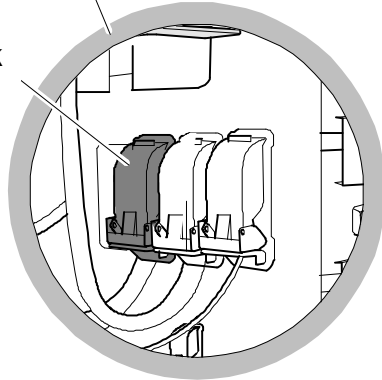

16

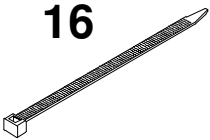

F



1

18 OPTION 1




9

G30

CAN

1.

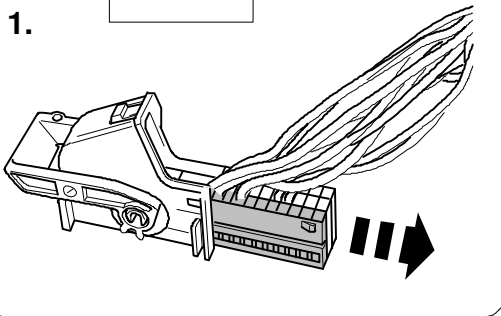

2.

PIN 49


wh

F



PIN 50

bk

gy

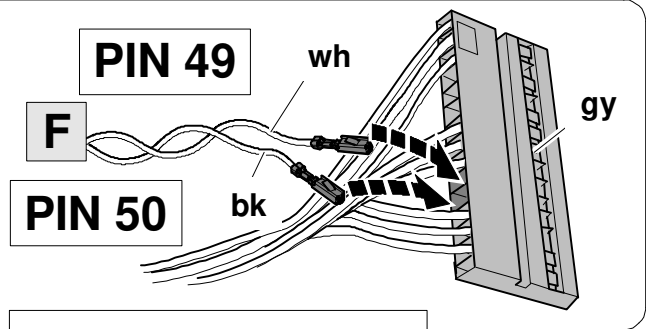

3.

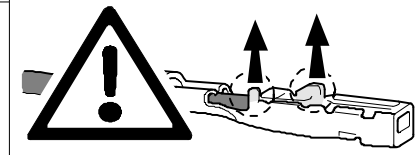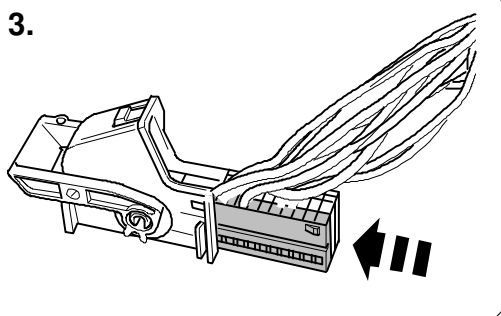

F




1




CAN







1.

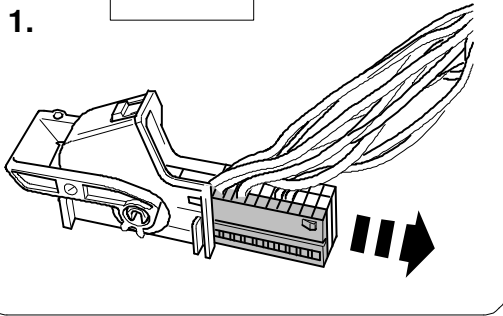




2.

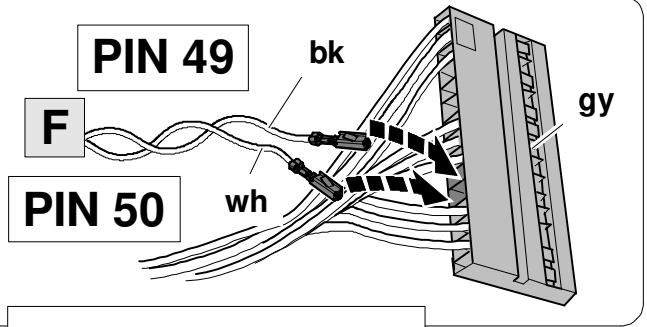


3.

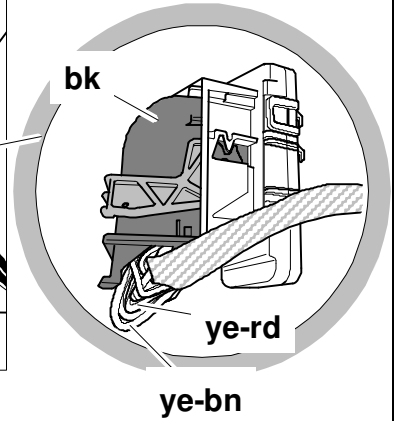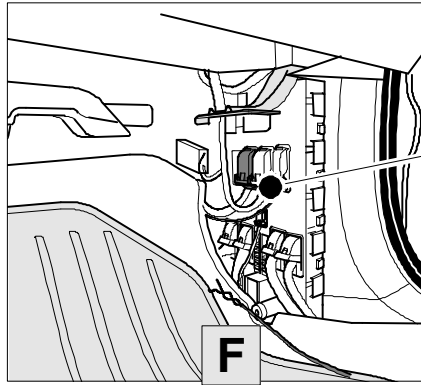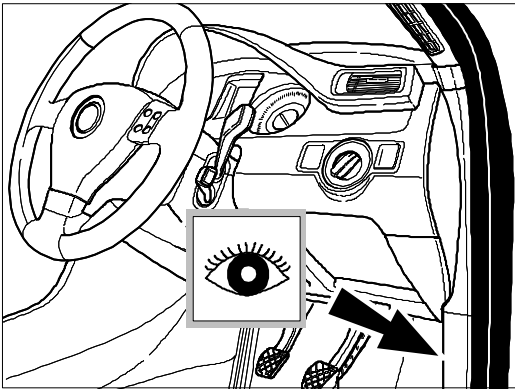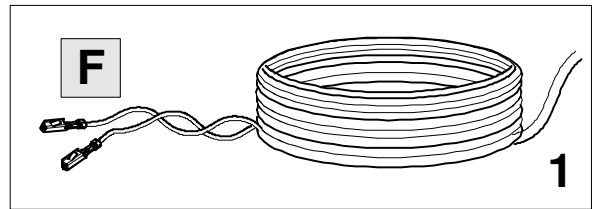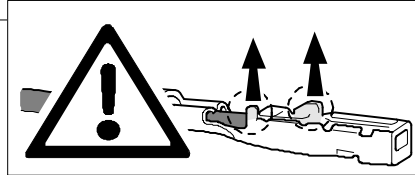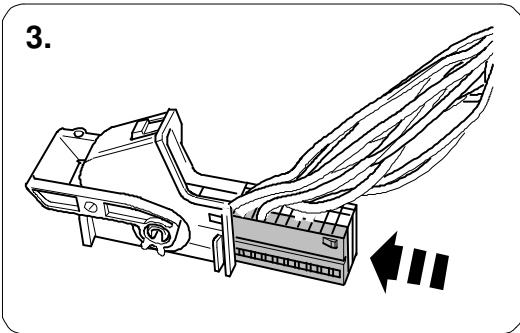












CAN

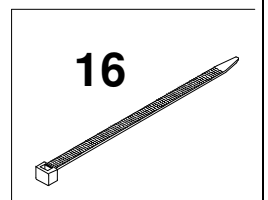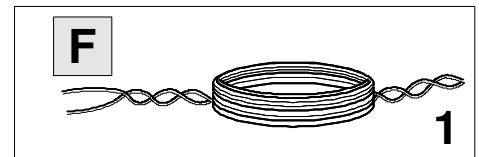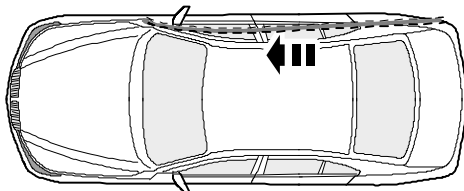

21 OPTION 2

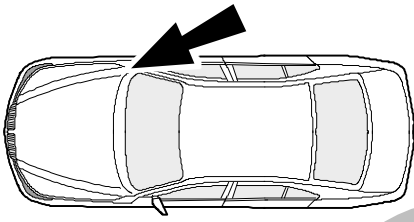


CAN

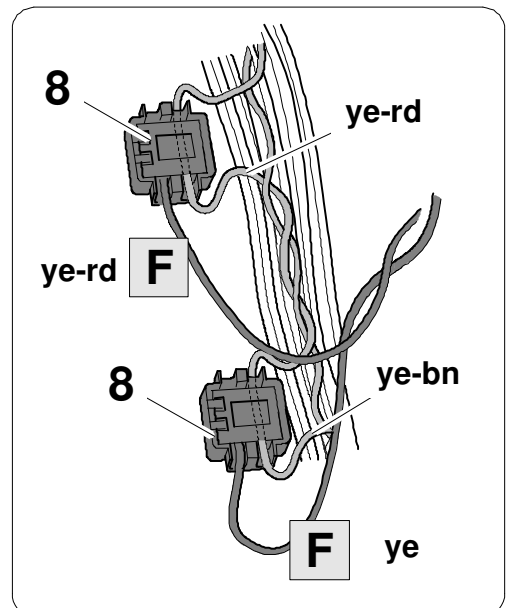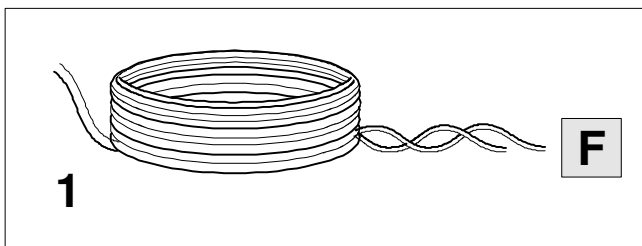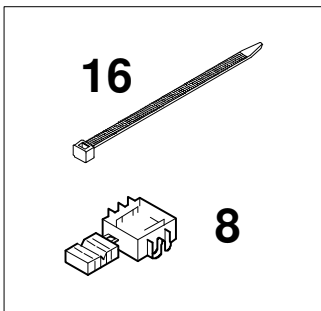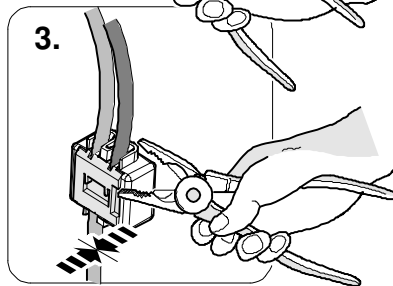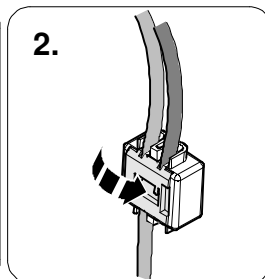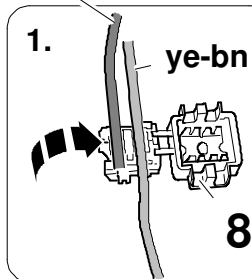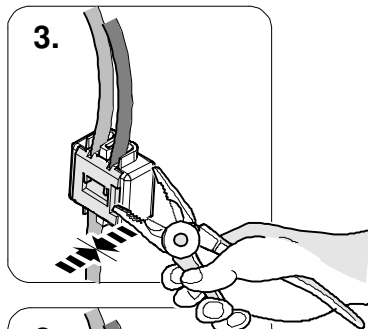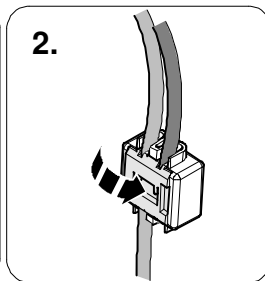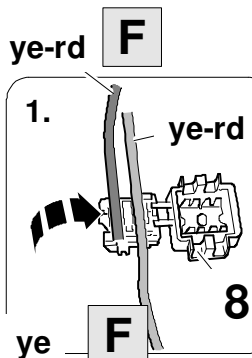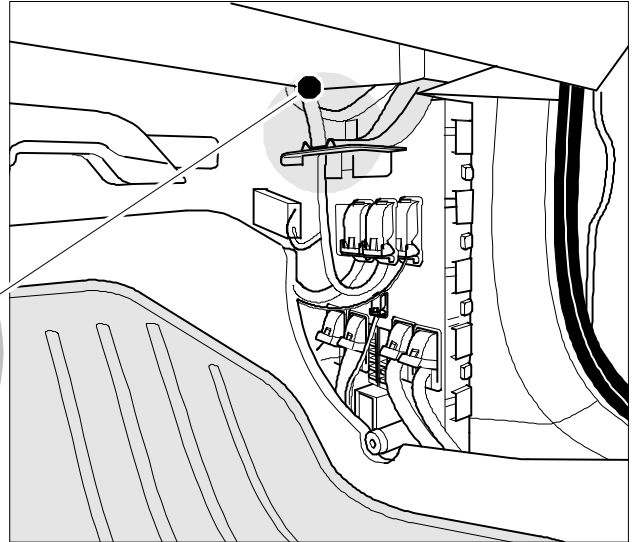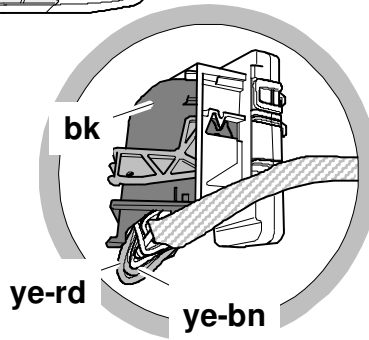





**BRAKE
CONTROLLER
PREPARED**

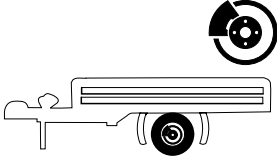


Trailer Brake Preparation

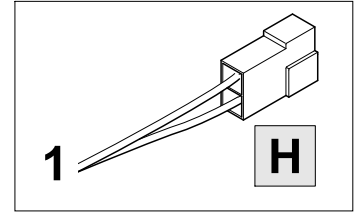


1.

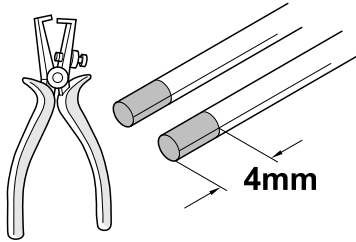


2.

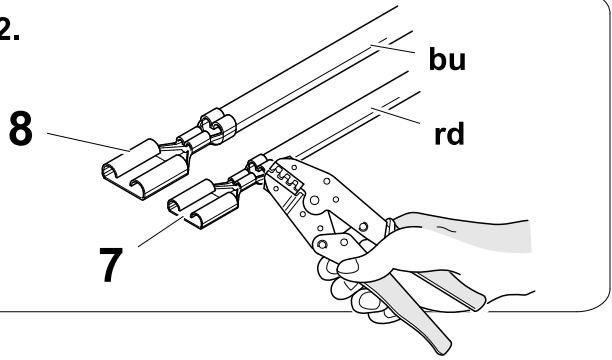

3.

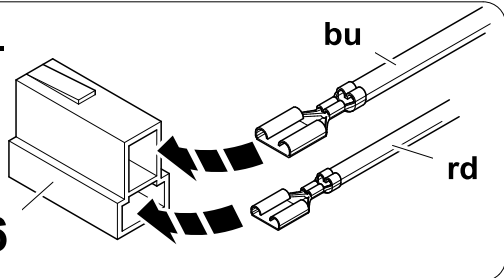





4.

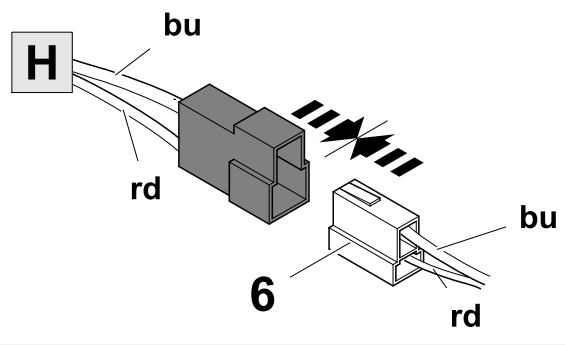

6


7

8

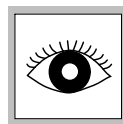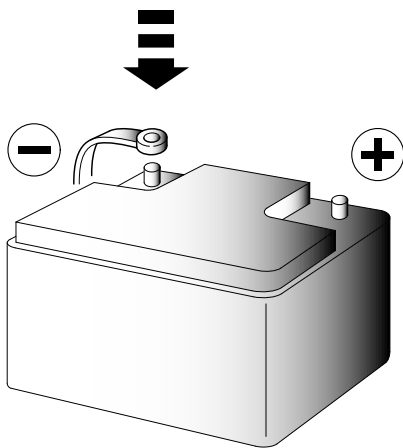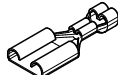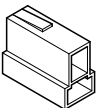


24

CHECK ALL LIGHTING FUNCTIONS

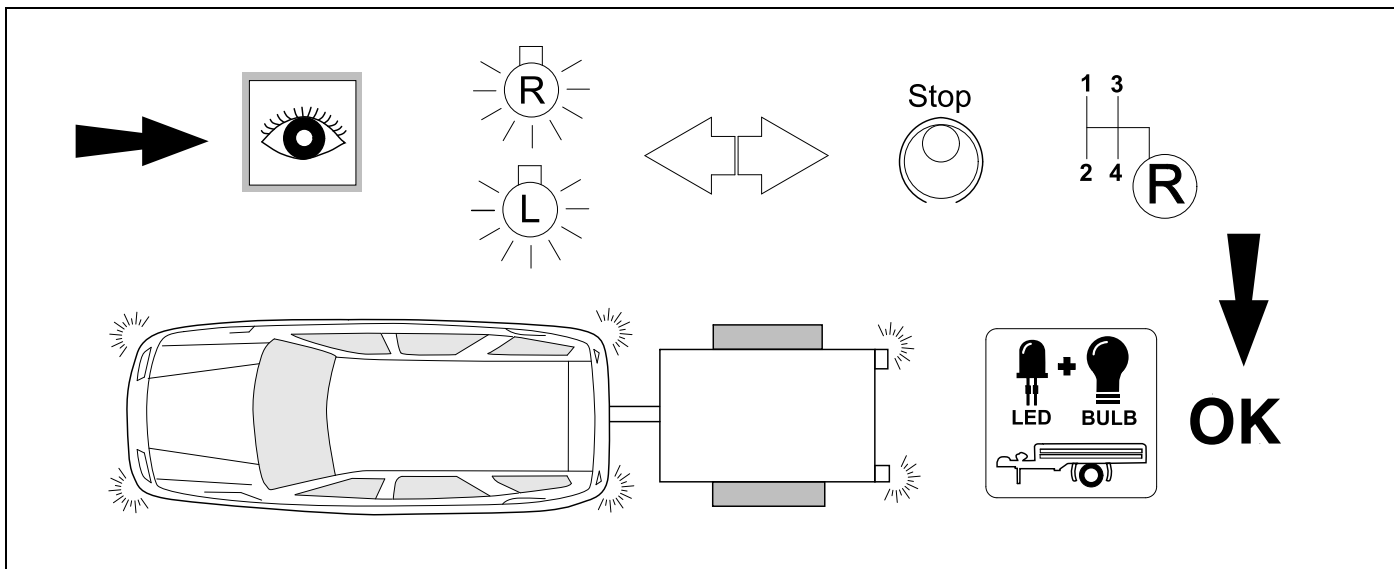

25


eye icon ⇒ 14

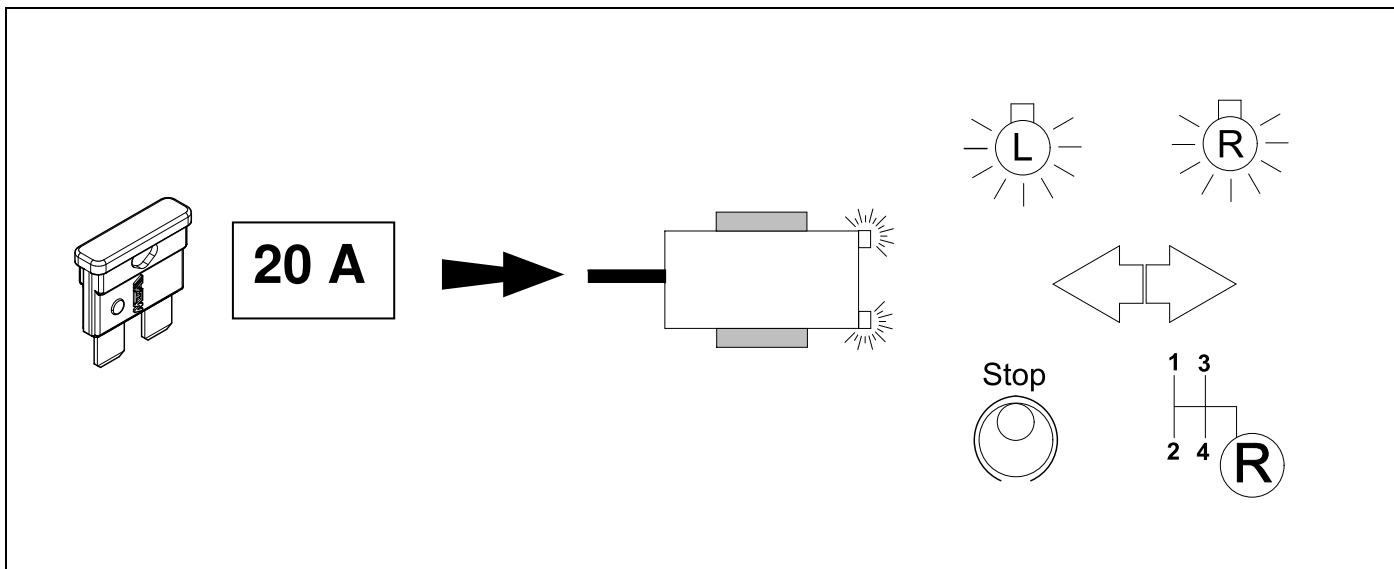


26





CHECK BULB OUT DETECTION

BULB OUT CONDITION INDICATED WITH INCREASED INDICATOR FREQUENCY

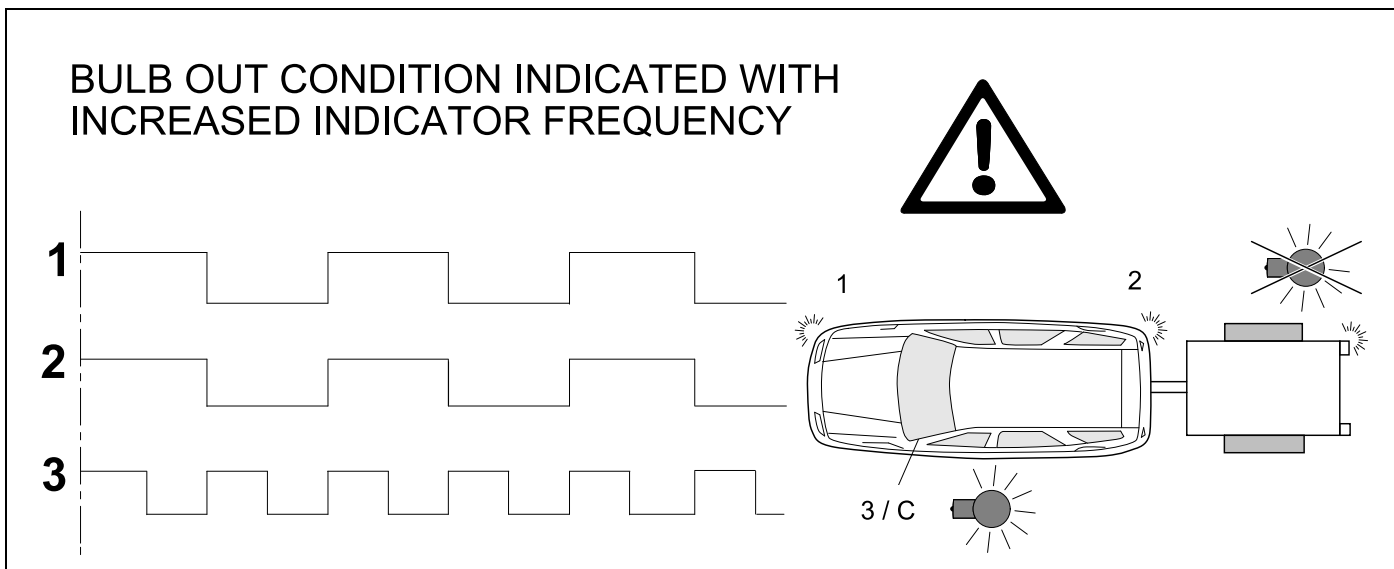

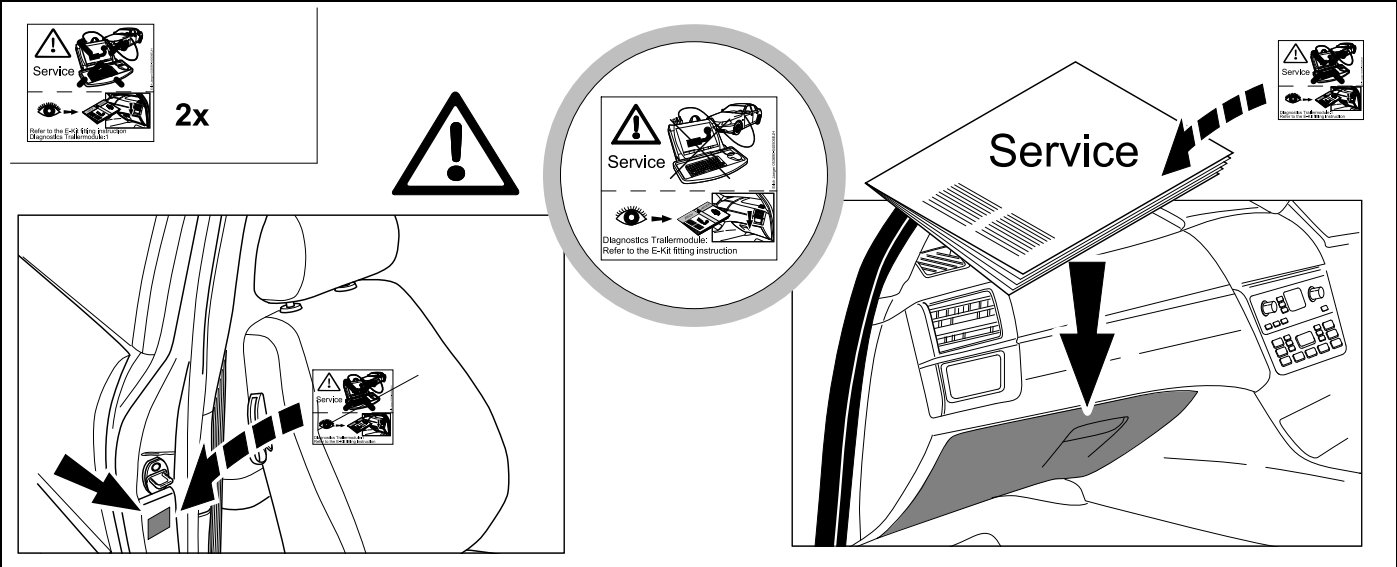



If the PDC does not automatically deactivate, coding and initialization of the module might be required.

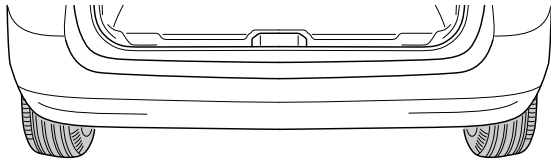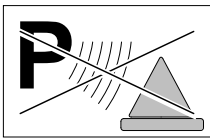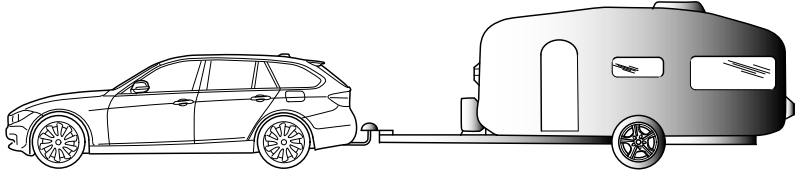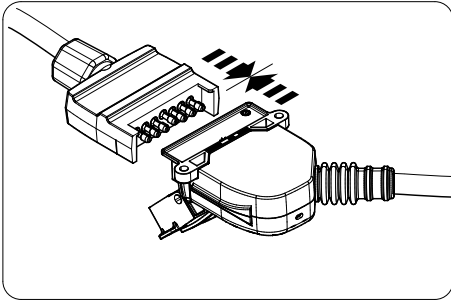


OPTION 1





No Coding

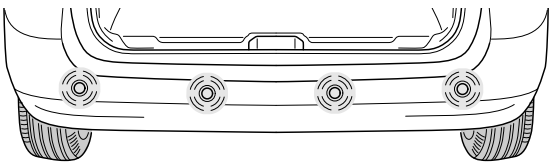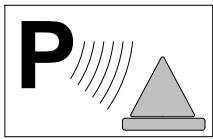


OPTION 2

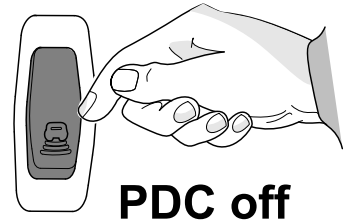


PDC off

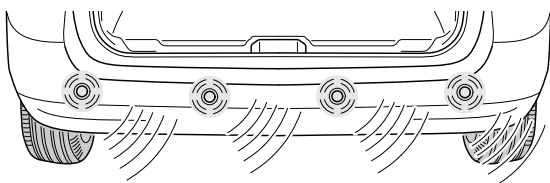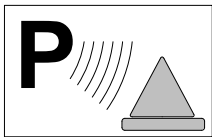


OPTION 3

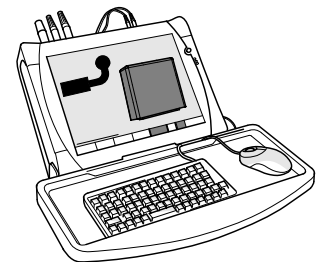

**BMW Service ISTA/P
Initialize Trailer Module**

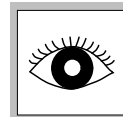

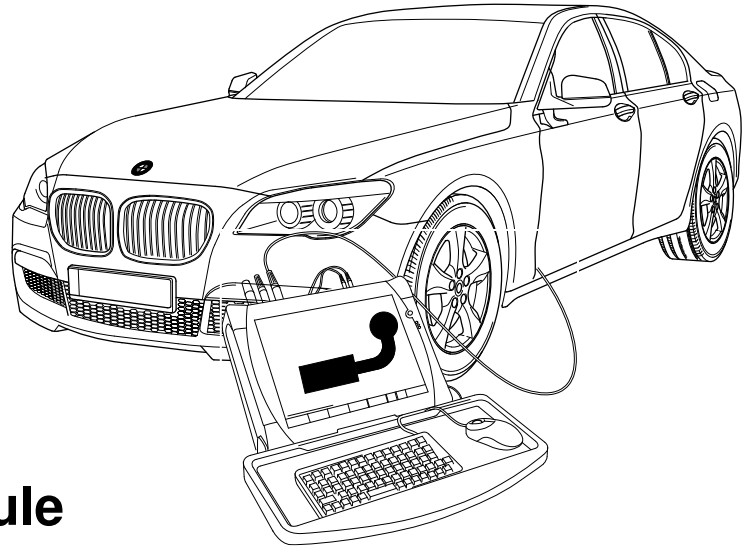

BMW Service ISTA/P Initialize Trailer Module

Please effect coding as follows:





- Connect computer to vehicle
- Start ISTA/P
- Click "Modification / Upgrades"
- Scan Action plan
- Click „Coding (Ethernet)“
- Scan Action program follow-up
- Final report checking

After the effected connection, the rear park assist system will also automatically be deactivated in trailer operation!

Status LED for self-diagnosis

Operation support

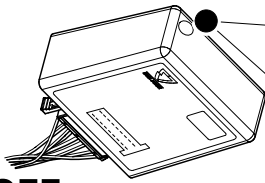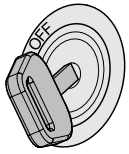





No CAN-Data =








Standby / Sleepmode



Ignition OFF

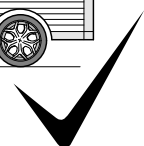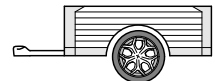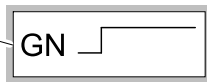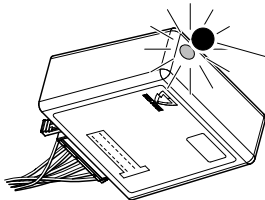




Ignition ON

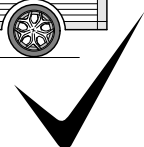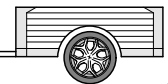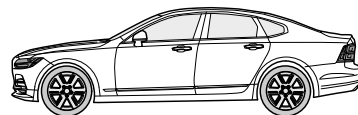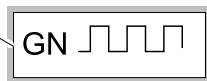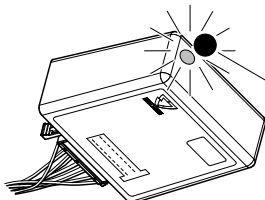




Ignition ON

Failure support



Check CAN-Data Wire

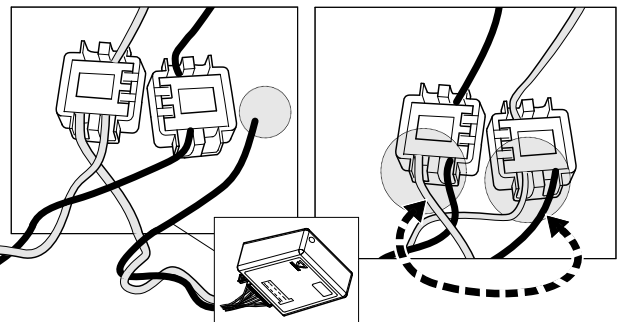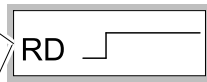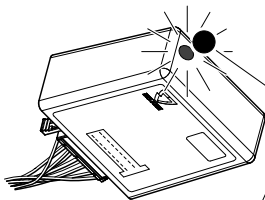




Ignition ON

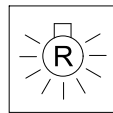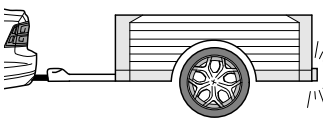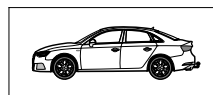

+

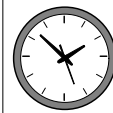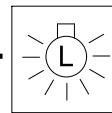


1x max 5 min.

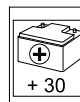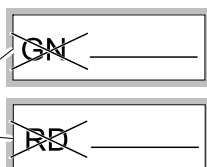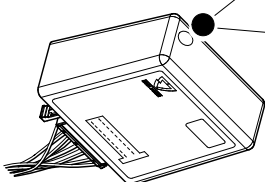


PIN 17


oder / or

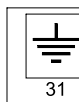

PIN 1

Ignition ON

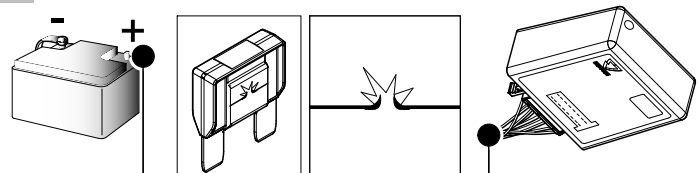

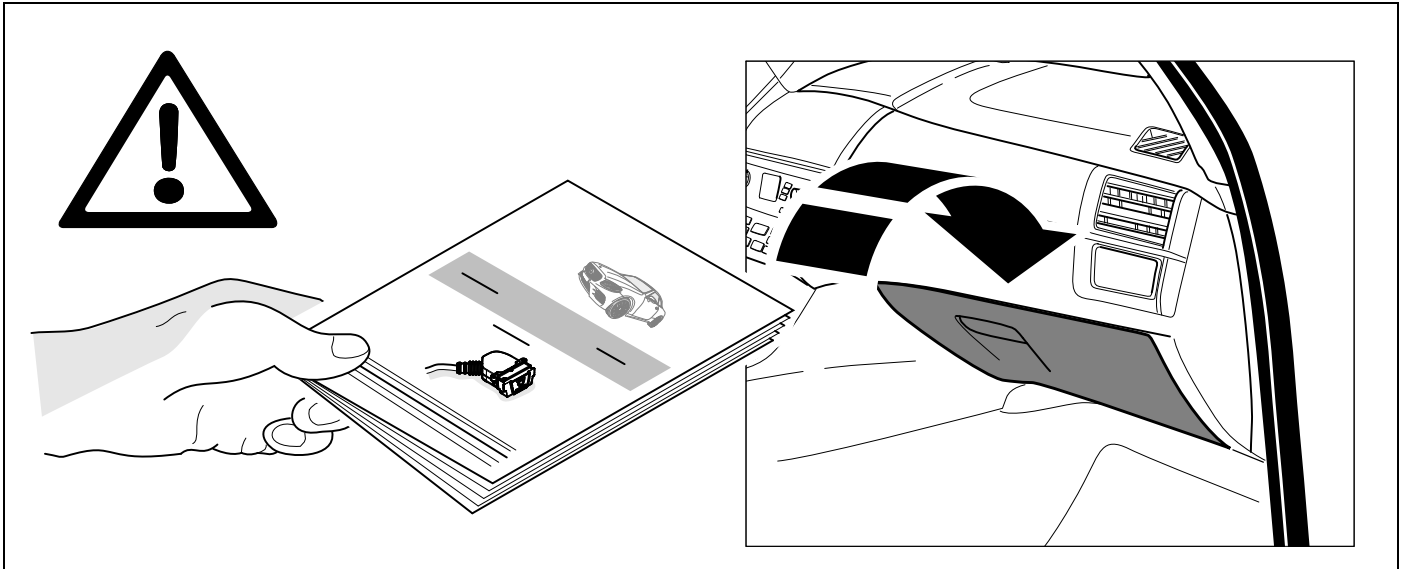

Subject to change in terms of construction, equipment and colour, and may contain errors.

The information and illustrations are non-binding.