



INSTALLATION INSTRUCTIONS

R1662 - TO SUIT HOLDEN FRONTERA 3/99-ON

PLEASE READ INSTRUCTIONS THROUGH BEFORE YOU BEGIN

WARNING : 1. Do not drill, cut weld or otherwise modify the towbar.

2. If you are using electric welding on a motor vehicle, always check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could destroy any onboard computers. If in doubt, check with the vehicle's manufacturer.

**Max. Tow Weight: 4 Door LWB : 2000kg
2 Door SWB : 1600kg**

1. Ensure all hardware items have been included.
2. Lift towbar up driver's side first over exhaust pipe.
3. Line up captive nuts in vehicle with side plate slots and fit flat washers, spring washers and bolt into captive nuts loosely.
4. Fit remaining bolts.
5. Tighten all bolts to torque listing below.
6. Towbar rating sticker to be conspicuously located on inside rear end of the driver's door. (see diagram below)


NOTE: Hayman Reese recommends that you check your towball to ensure it complies to Australian Design Rules.

RECOMMENDED ASSEMBLY TORQUE LISTING

<u>Diameter</u>	<u>Grade 4.6 Bolt</u>	<u>Grade 8.8 Bolt</u>
	<u>Nm</u>	<u>Nm</u>
M6	3.5	9.5
M8	8.6	21.7
M10	16.9	43.4
M12	29.8	77.3
M16	74.0	189.8

FOR TOWING PURPOSES ONLY

For towing capacity details please refer to vehicle owner's manual or to the manufacturer. Overloading can void your warranties.

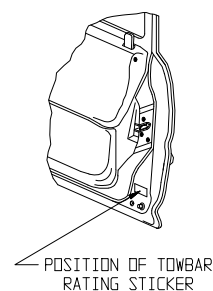

PLEASE NOTE: You must remove the Trailer Ballmount unless you are actually towing if it obscures your number plate. Failure to do so may result in a fine.



R1662 - TO SUIT HOLDEN FRONTERA 3/99-ON
PLEASE READ INSTRUCTIONS THROUGH BEFORE YOU BEGIN

