

# INSTALLATION INSTRUCTIONS

## 1878 RENAULT SCENIC RX4 4WD 5/01-on

### PLEASE READ INSTRUCTIONS THROUGH BEFORE YOU BEGIN

**WARNING :** 1. Do not drill, cut weld or otherwise modify the towbar.  
 2. If you are using electric welding on a motor vehicle, always check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could destroy any onboard computers. If in doubt, check with the vehicle's manufacturer.

Max. Towing Weight: Auto1300kg  
 Max. Towing Weight: Maual1350kg

1. Ensure all hardware items have been included.
2. Remove rear muffler.
3. Remove heat shield.
4. Remove Torx head screws from driver's side wheel arch, fold back inner guard to expose shipping hook bolts.
5. Remove and discard shipping hook. (Removal of driver's side rear wheel may be required on some vehicles for better access)
6. Remove bolt from fuel tank filler neck pipe.
7. On passenger side, inner face of chassis rail locate hole (Adjacent to chassis support brace.) and drill out to Ø11mm.
8. Lift towbar up into position, driver side first and fit M10 x 80 bolts.
9. Feed M10 bolt on wire through access hole on outside face of passenger side chassis. Fit spring washer and nut.
10. Tighten bolts.
11. Using remaining holes in towbar side plate as a guide, drill through inner face of chassis, fit M10 bolt on wire as per step 9. Fit remaining M8 bolts, flat washers and spring washers.
12. Tighten all bolts to torque listing.
13. Refit bolt from fuel tank filler neck pipe.
14. Refit heat shield.
15. Refit rear muffler.
16. Towbar rating sticker to be conspicuously located on inside rear end of the drivers door. (See diagram below)


**NOTE:** Hayman Reese recommends that you check your towball to ensure it complies to Australian Design Rules.

### RECOMMENDED ASSEMBLY TORQUE LISTING

<u>Diameter</u>	<u>Grade 8.8 Bolt</u>
	<u>Nm</u>
M6	9.5
M8	21.7
M10	43.4
M12	77.3
M14	121.0
M16	189.8

#### **FOR TOWING PURPOSES ONLY**

For towing capacity details please refer to vehicle owner's manual or to the manufacturer. Overloading can void your warranties.

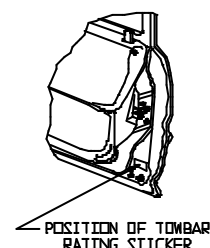

**PLEASE NOTE:** You must remove the lug unless you are actually towing if it obscures your number plate. Failure to do so may result in a fine.

**1878 RENAULT SCENIC RX4 4WD 5/01-on**

