

## INSTALLATION INSTRUCTIONS

### 1902 - TO SUIT HONDA CRV 12/01-2/07

### PLEASE READ INSTRUCTIONS THROUGH BEFORE YOU BEGIN


**WARNING :** 1. Do not drill, cut weld or otherwise modify the towbar.  
 2. If you are using electric welding on a motor vehicle, always check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could destroy any onboard computers. If in doubt, check with the vehicle's manufacturer.

Max. Tow Weight: 1500 kg

1. Ensure all hardware items have been included
2. Remove rear muffler from 3 rubber hangers and join in front of rear suspension.
3. Lift towbar into position and align pop marks with holes in side arms, support towbar with jack stands.
4. Fit M12 x 45 1.75P bolt, spring washer through tail mounting plate and shipping hook, using tapped plate on opposite side semi tight.
5. Making sure towbar is square to vehicle drill  $\varnothing 11\text{mm}$  holes through bottom face of subframe using forward most and rear most holes in side arm as guides.
6. Fit tapped plates on wire through hole forward of side arms. Fit bolts spring washers.
7. Tighten all bolts to torque listing below.
8. Refit rear muffler to 3 rubber hangers and join in front of rear suspension.
9. Towbar rating sticker to be conspicuously located on inside rear end of the driver's door. (see diagram below)

### RECOMMENDED ASSEMBLY TORQUE LISTING

<u>Diameter</u>	<u>Grade 8.8 Bolt</u> <u>Nm</u>
M6	9.5
M8	21.7
M10	43.4
M12	77.3
M14	121.0
M16	189.8

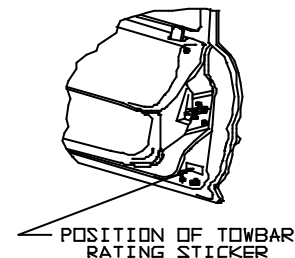

**1902 - TO SUIT HONDA CRV 12/01-2/07**

