
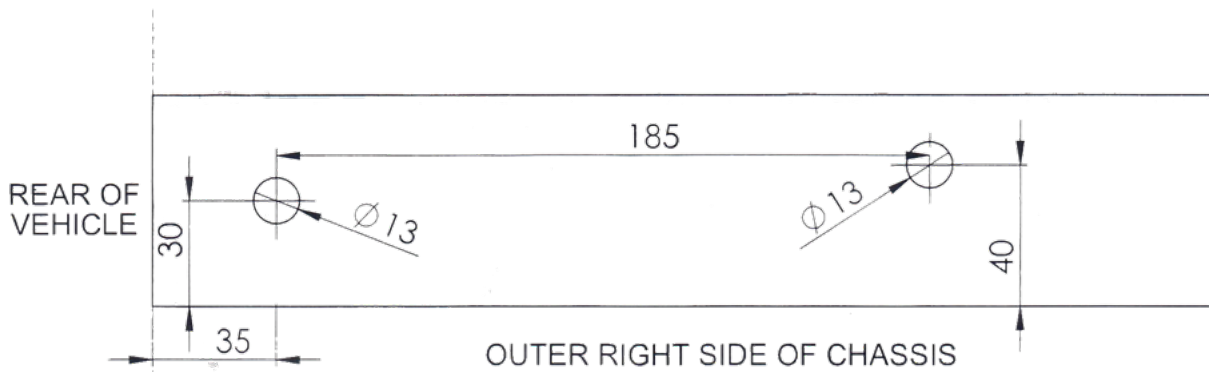


Towbar Fitting Instructions
Part Number 118101
To Suit MG ZS SUV 2018 - On

DRILLING TEMPLATE FOR CHASSIS

The outer side of the vehicles chassis will need to be drilled as per digram below

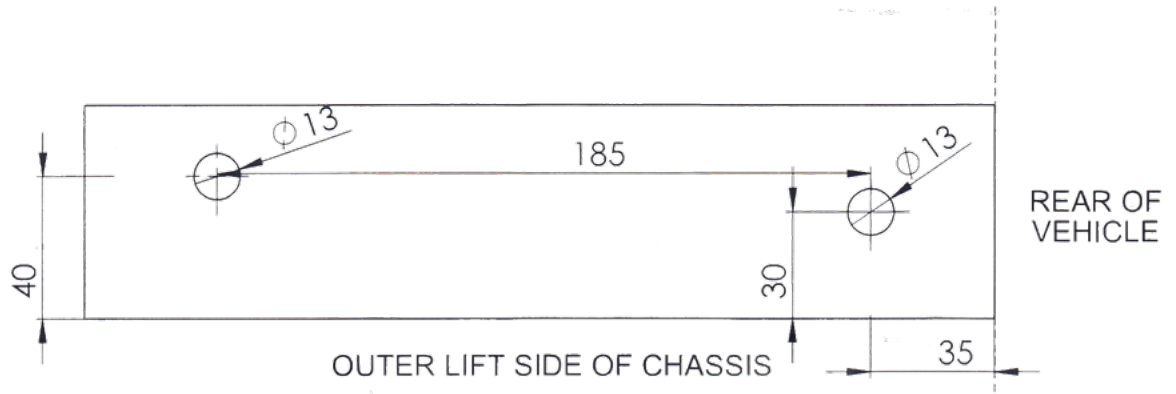

PLEASE READ AND NOTE

PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLTION IS COMPLETE,

It is the driver's responsibility to ensure that the towbar is used for towing purposes only.

Remove the Tongue or Ball Mount if it obstructs the vehicles Number Plate when not in use and NEVER exceed the vehicle or towbar's Maximum Tow Rating(whichever is lower).