




ERICH JAEGER

Installation instructions

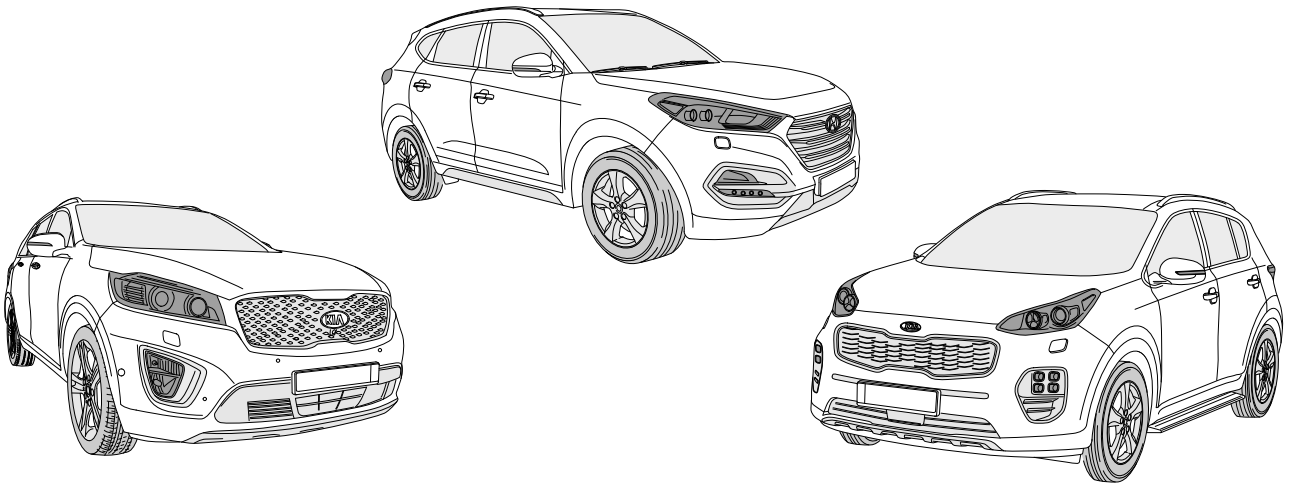

750090

KIA Sorento






01/15 >> 08/20

KIA Sportage

01/16 >> 12/21

HYUNDAI Tucson


07/15 >> 10/20

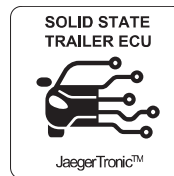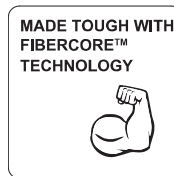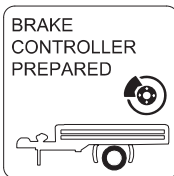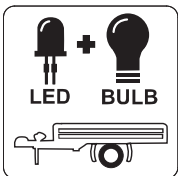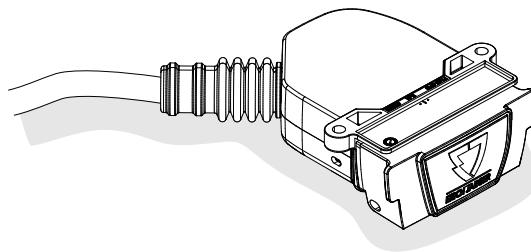





Reference:

The following information must be reviewed before beginning the assembly:






- The installation instructions are to be thoroughly read.
- The installation should be carried out by qualified personnel with the relevant technical knowledge.
- The vehicle manufacturers' current technical notices and information on retrofitting must be followed.
- The removal and replacement instructions found in the current repair manuals must be followed.
- It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.

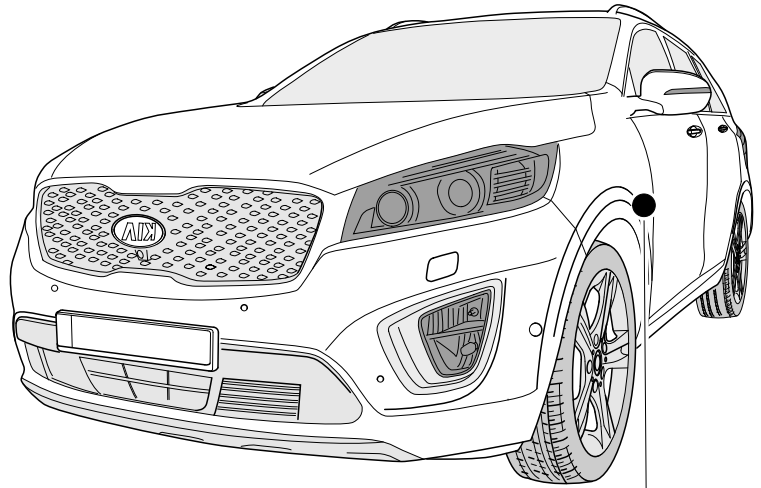



OPTION 1

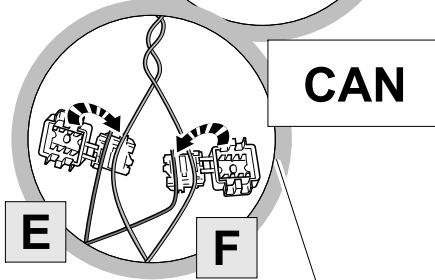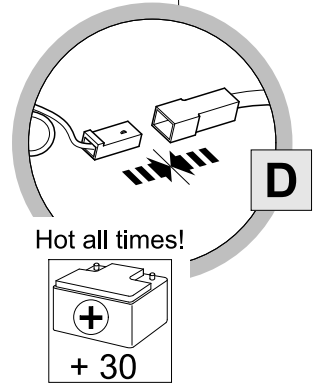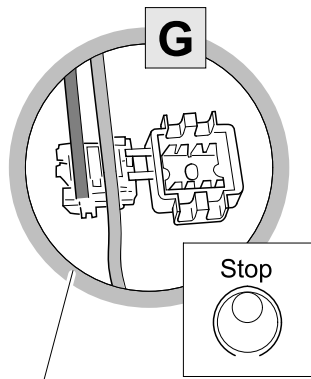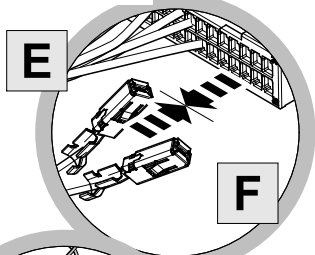


OPTION 2

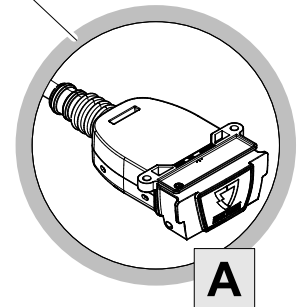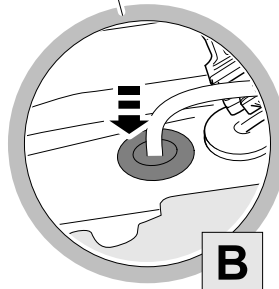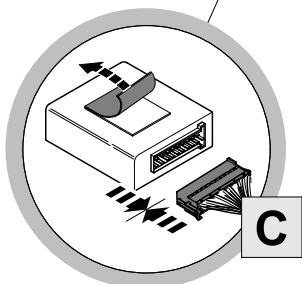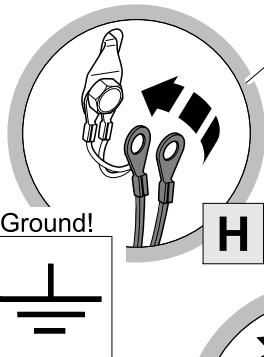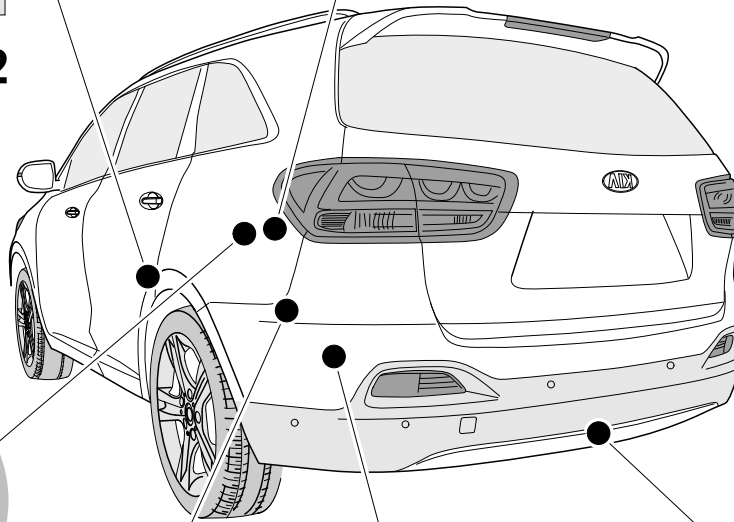

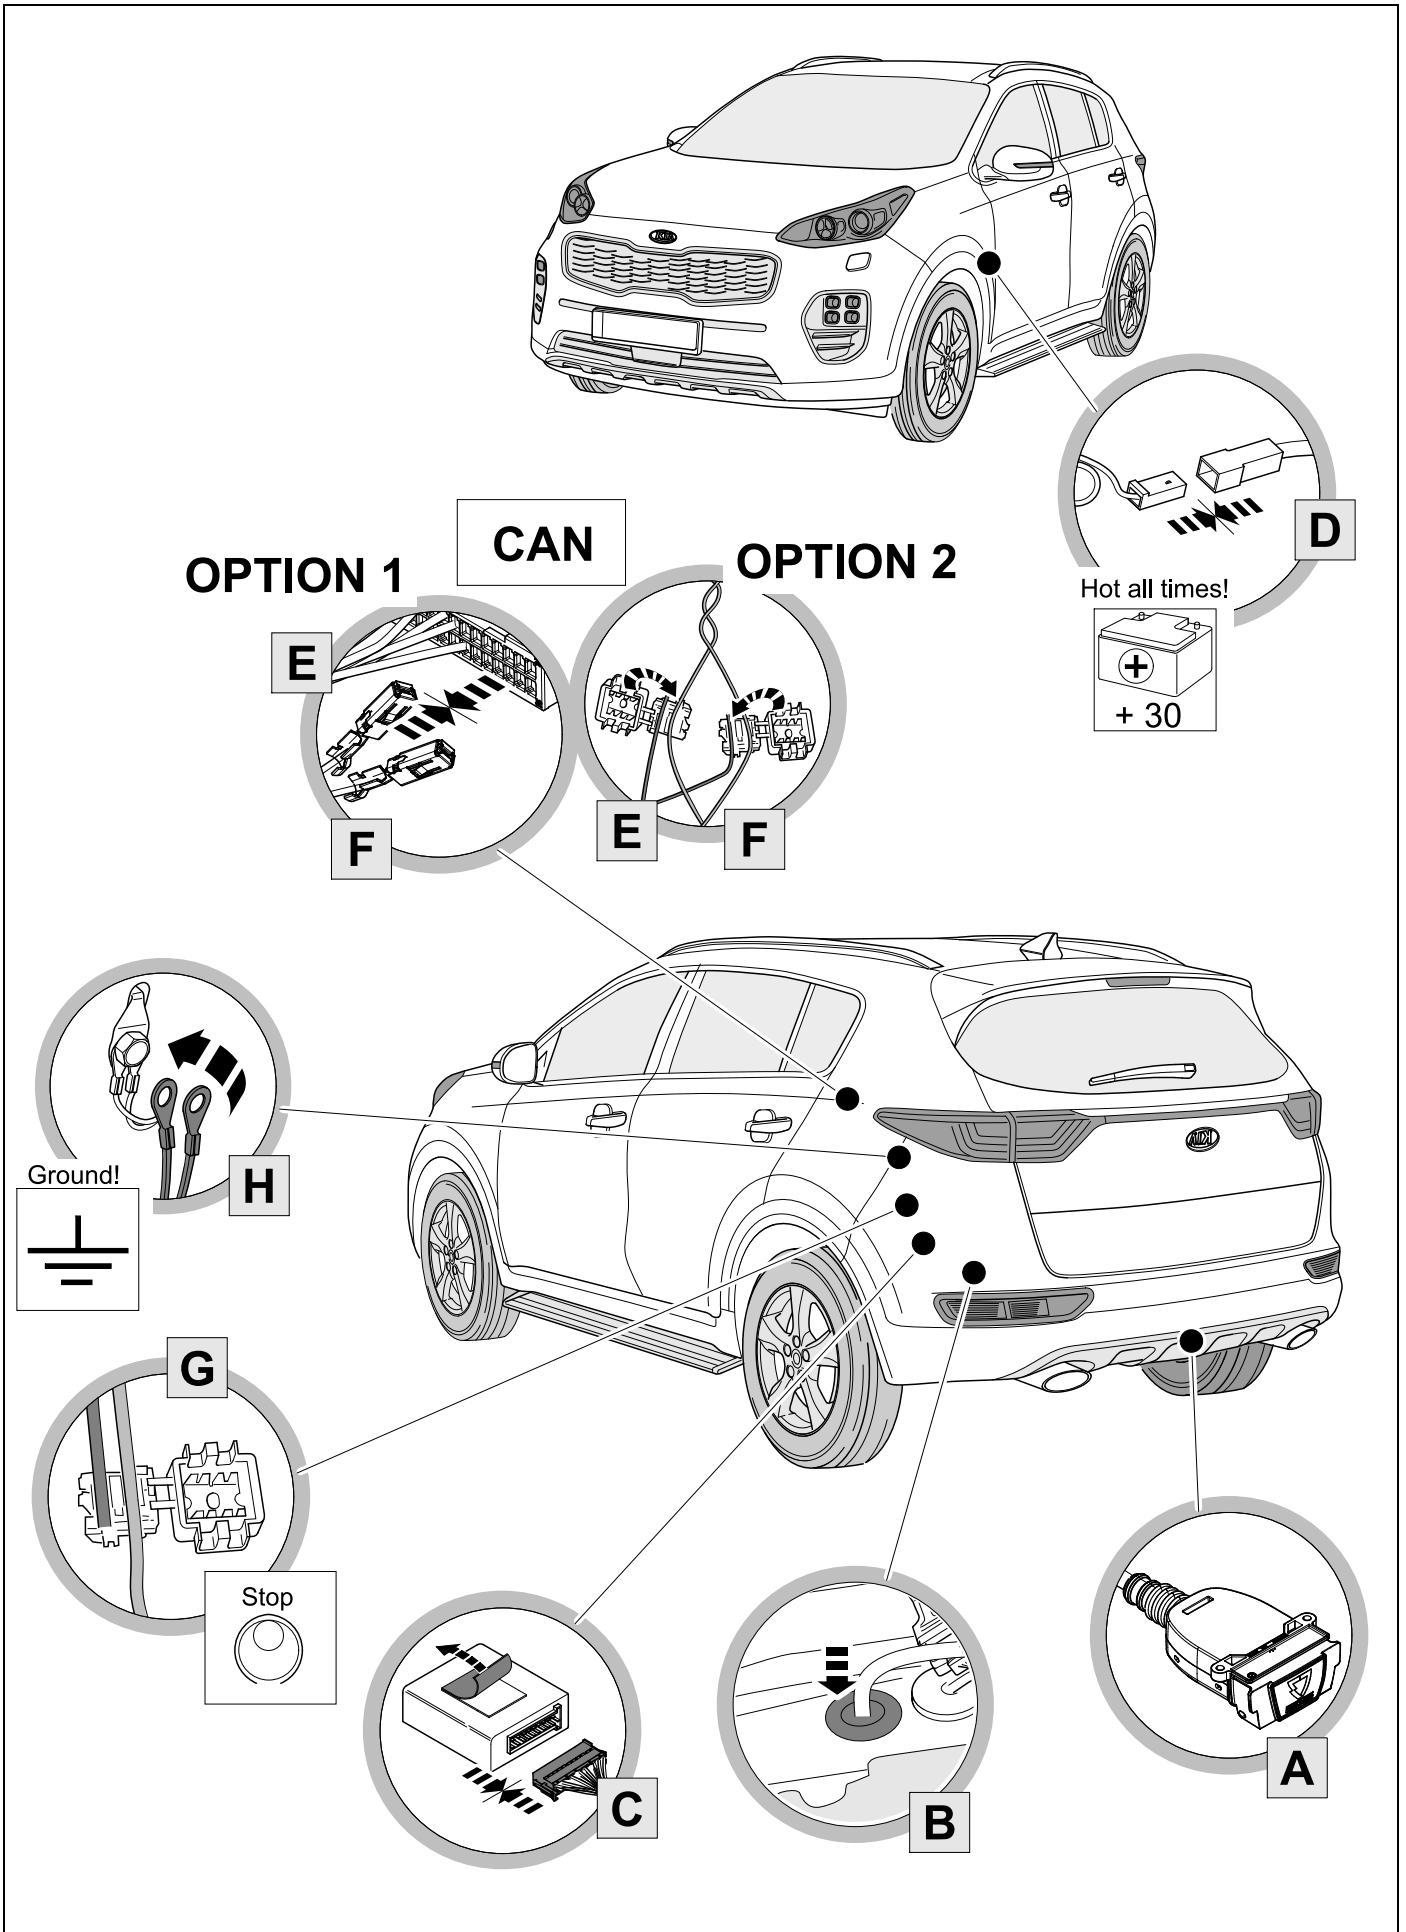


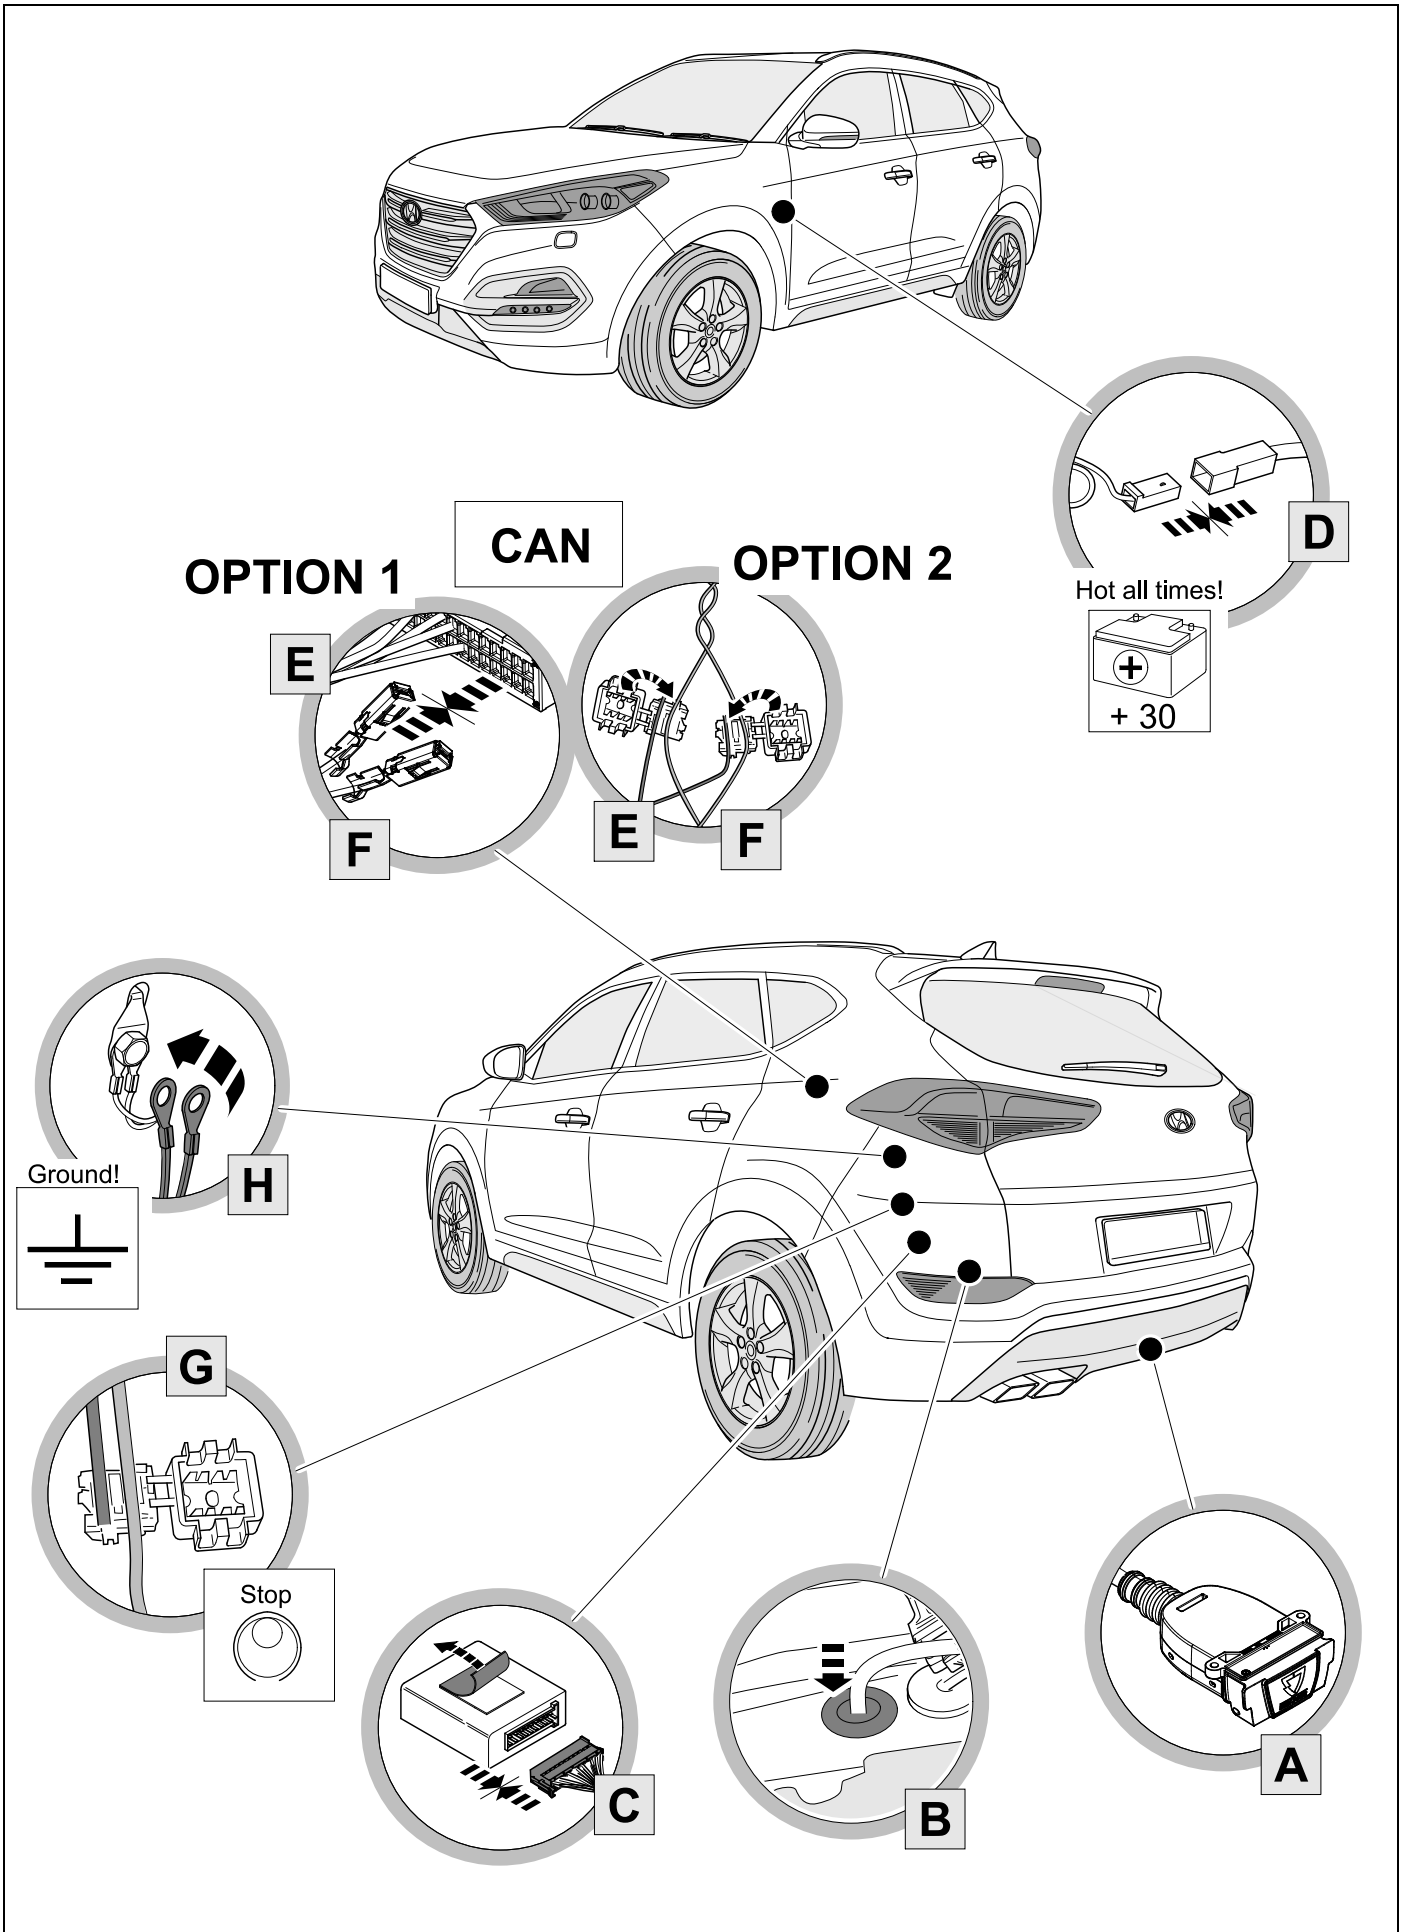


KIT

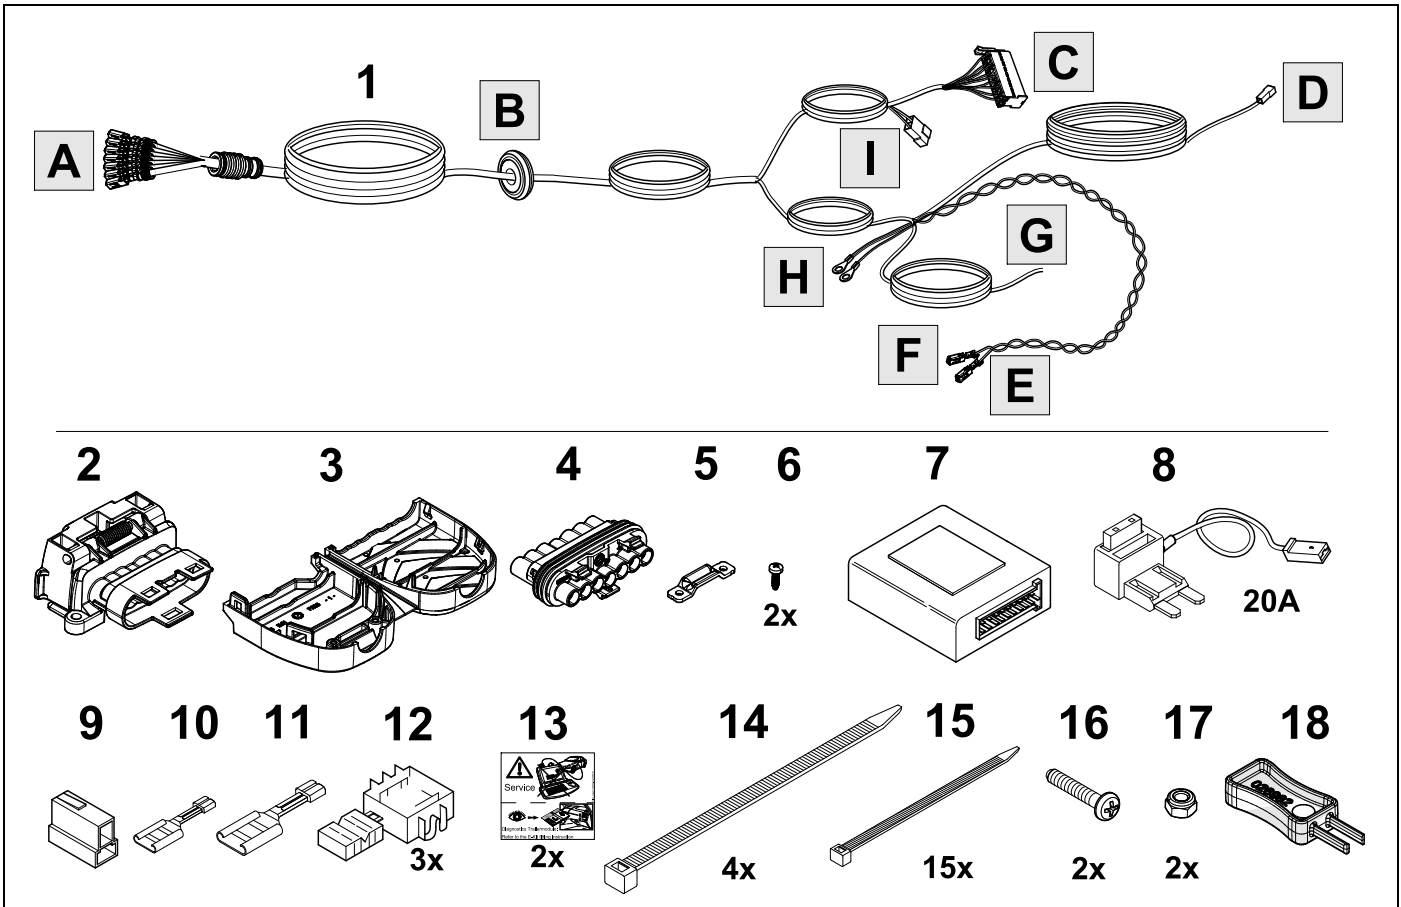

TOOLS

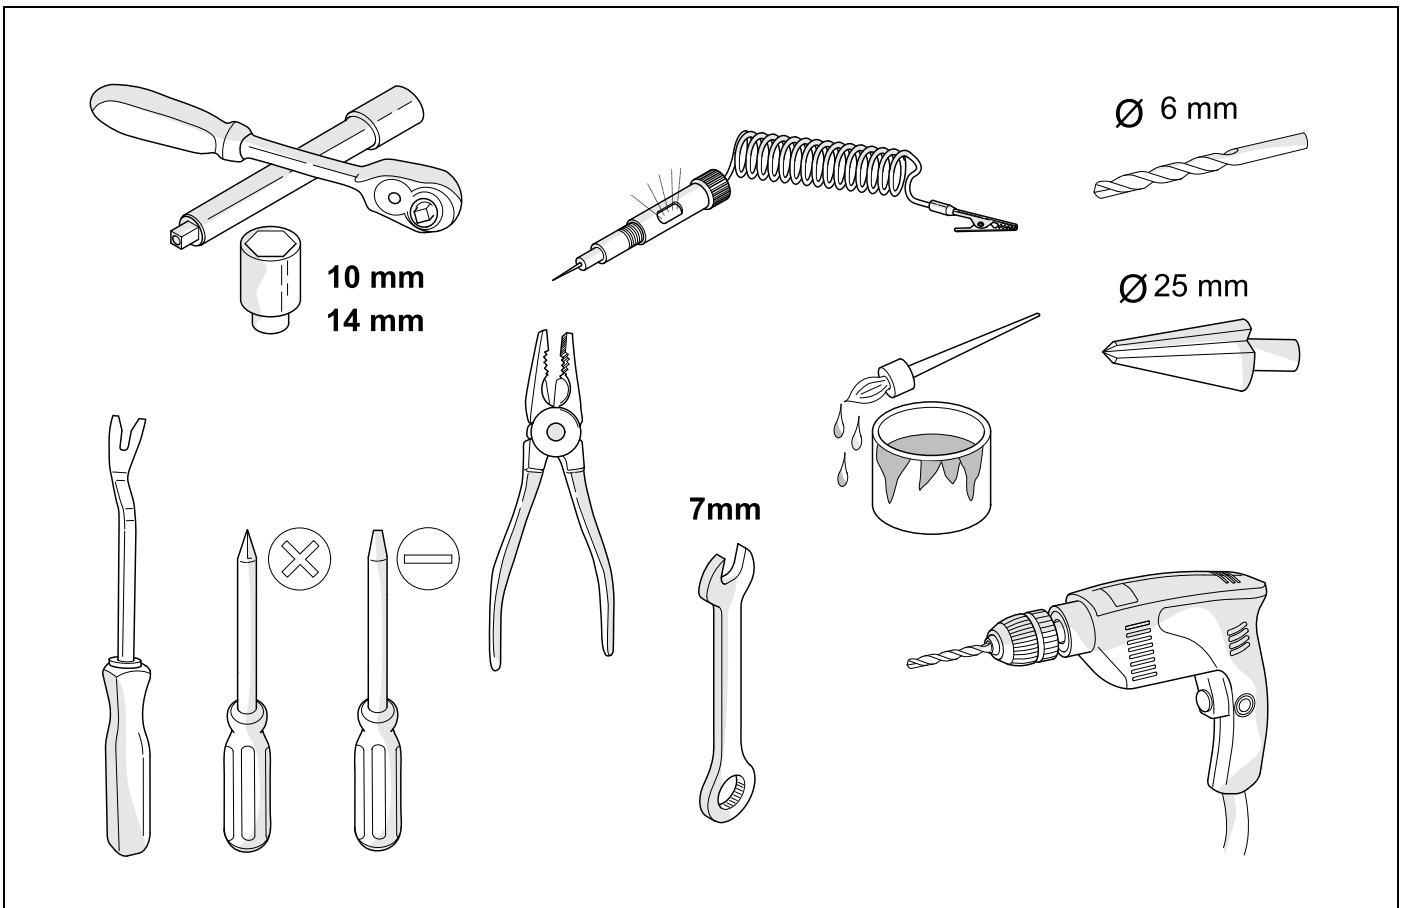


1

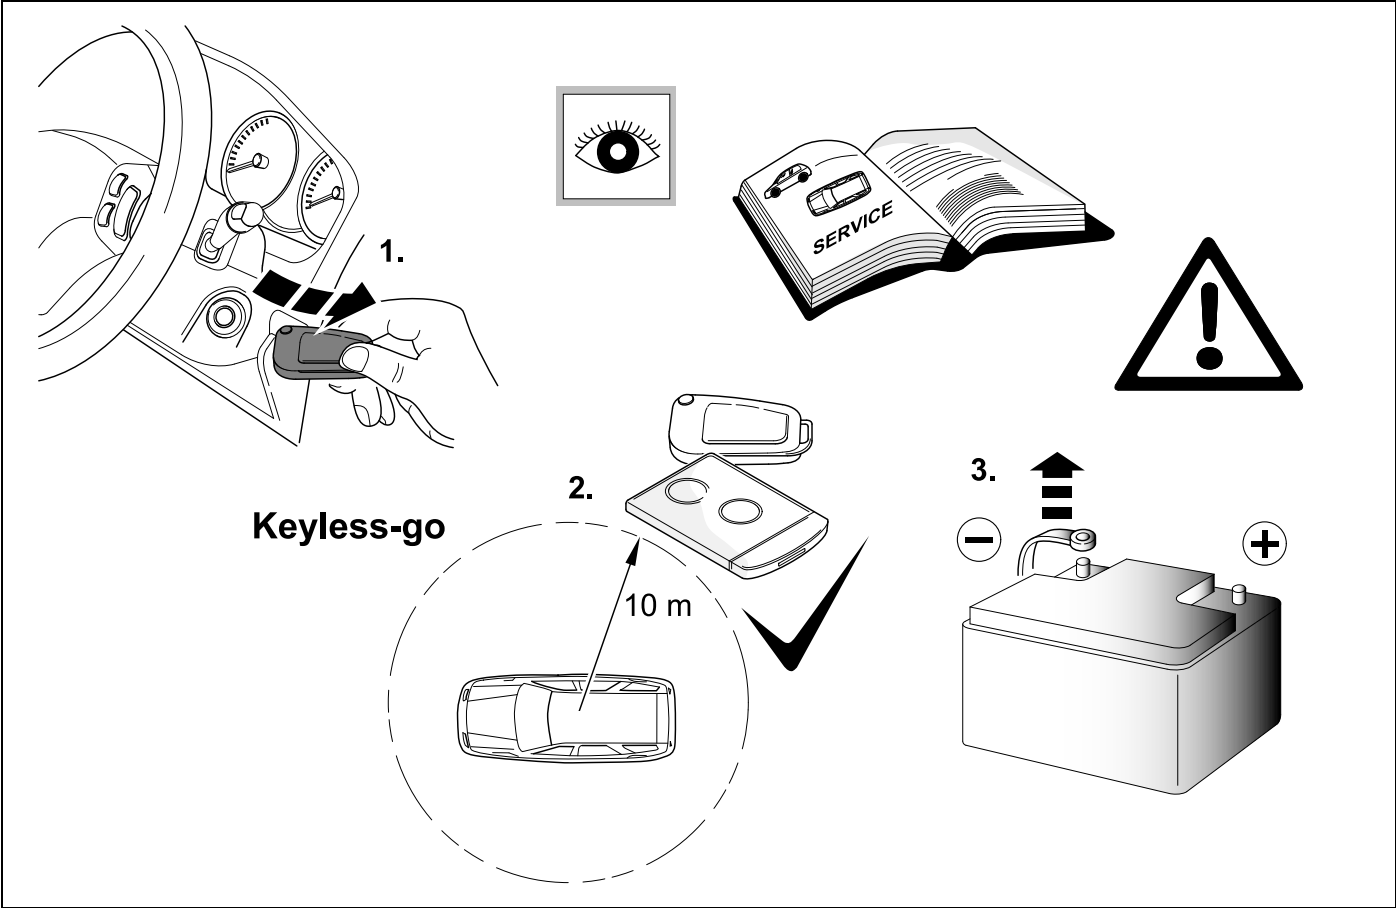


2 REMOVE

Kia Sorento

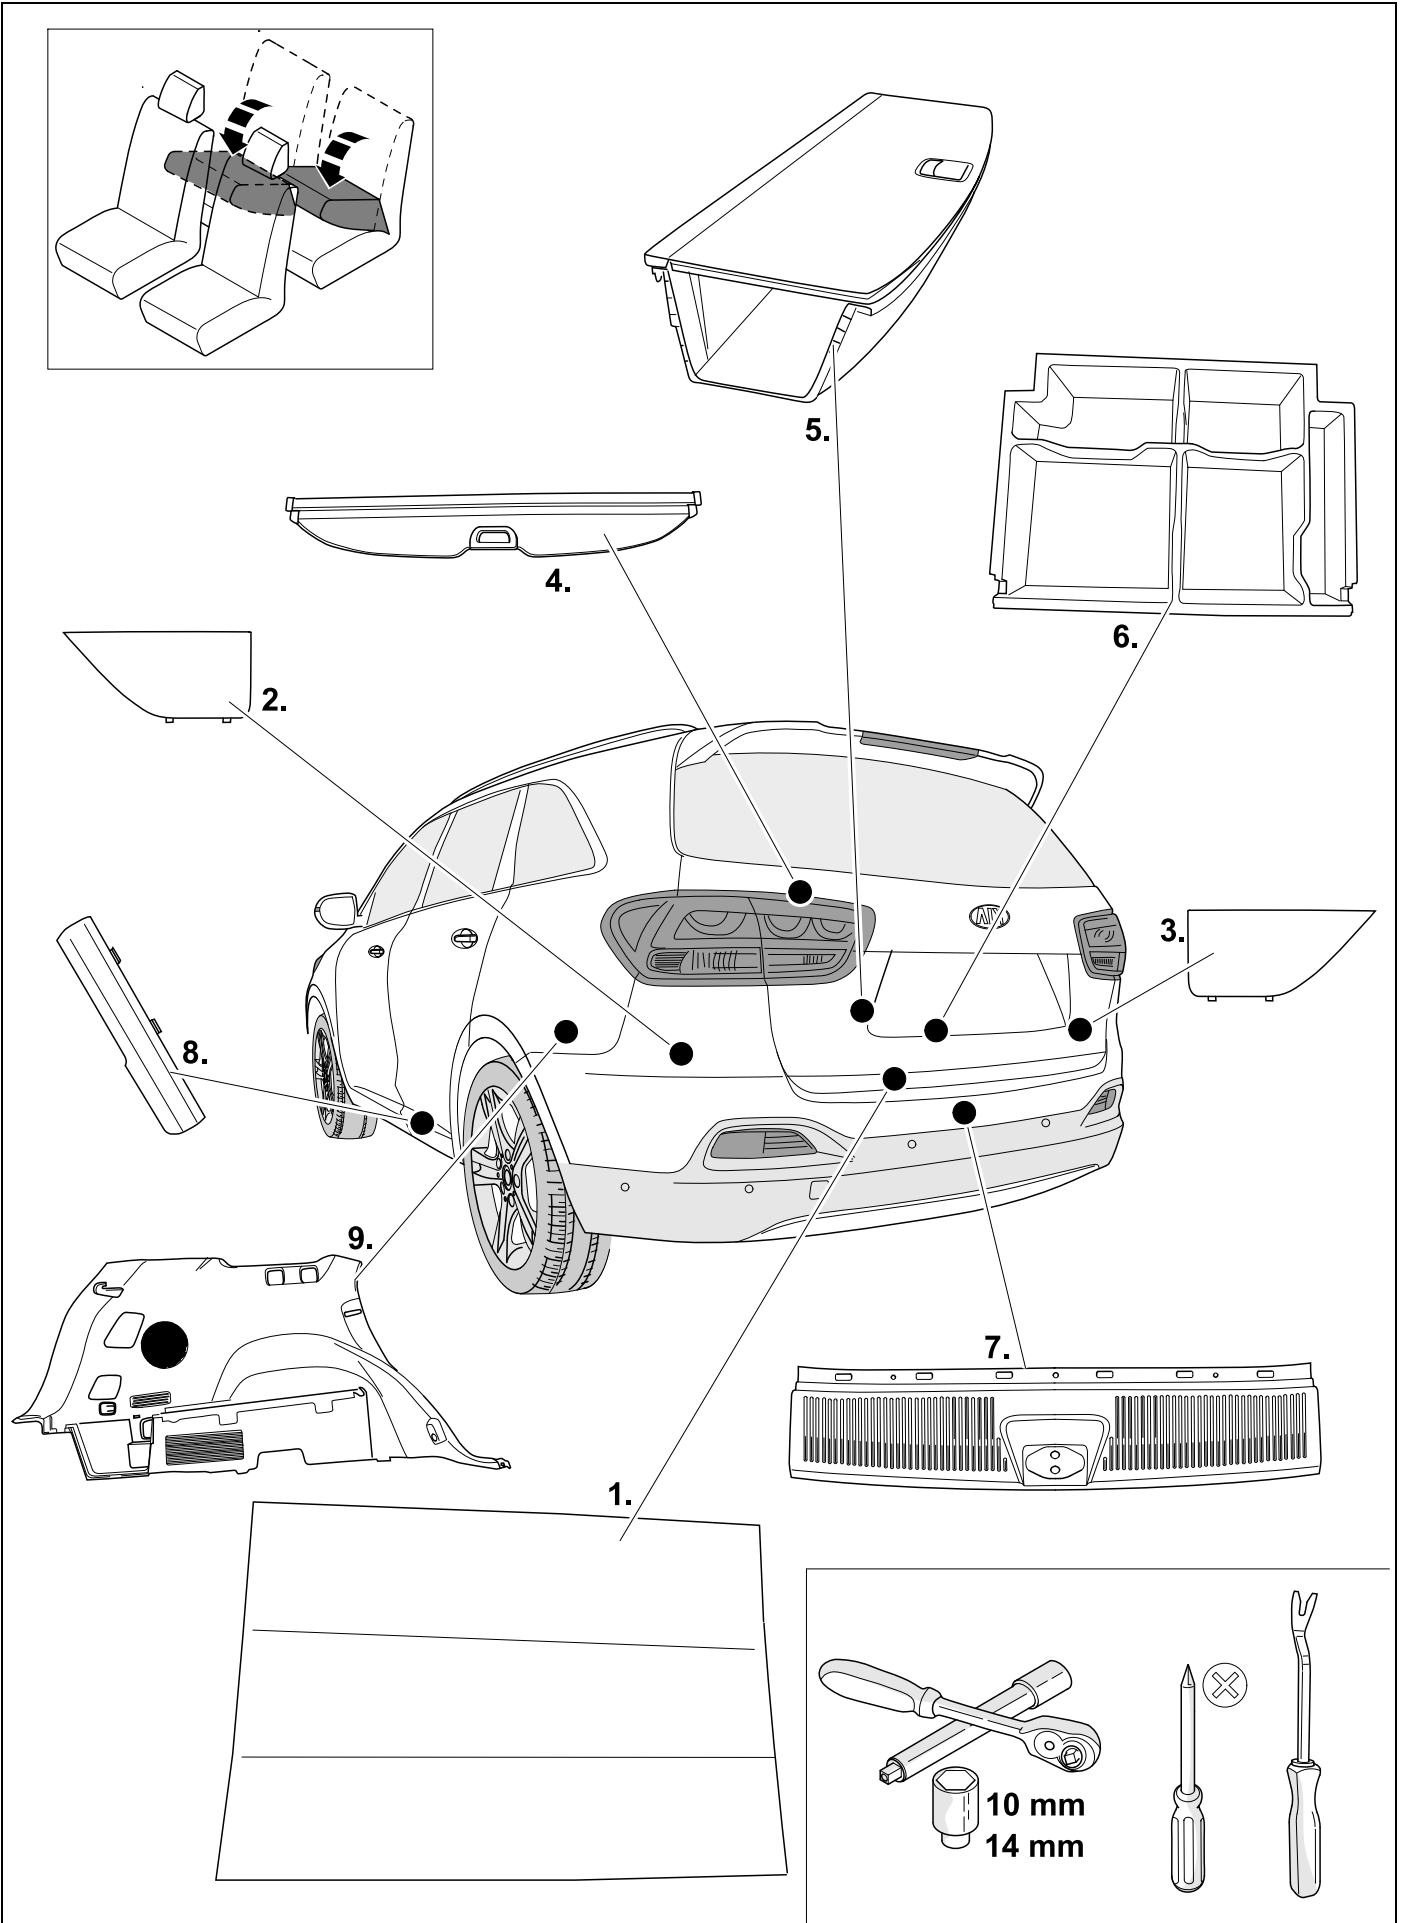


3 REMOVE

Kia Sportage

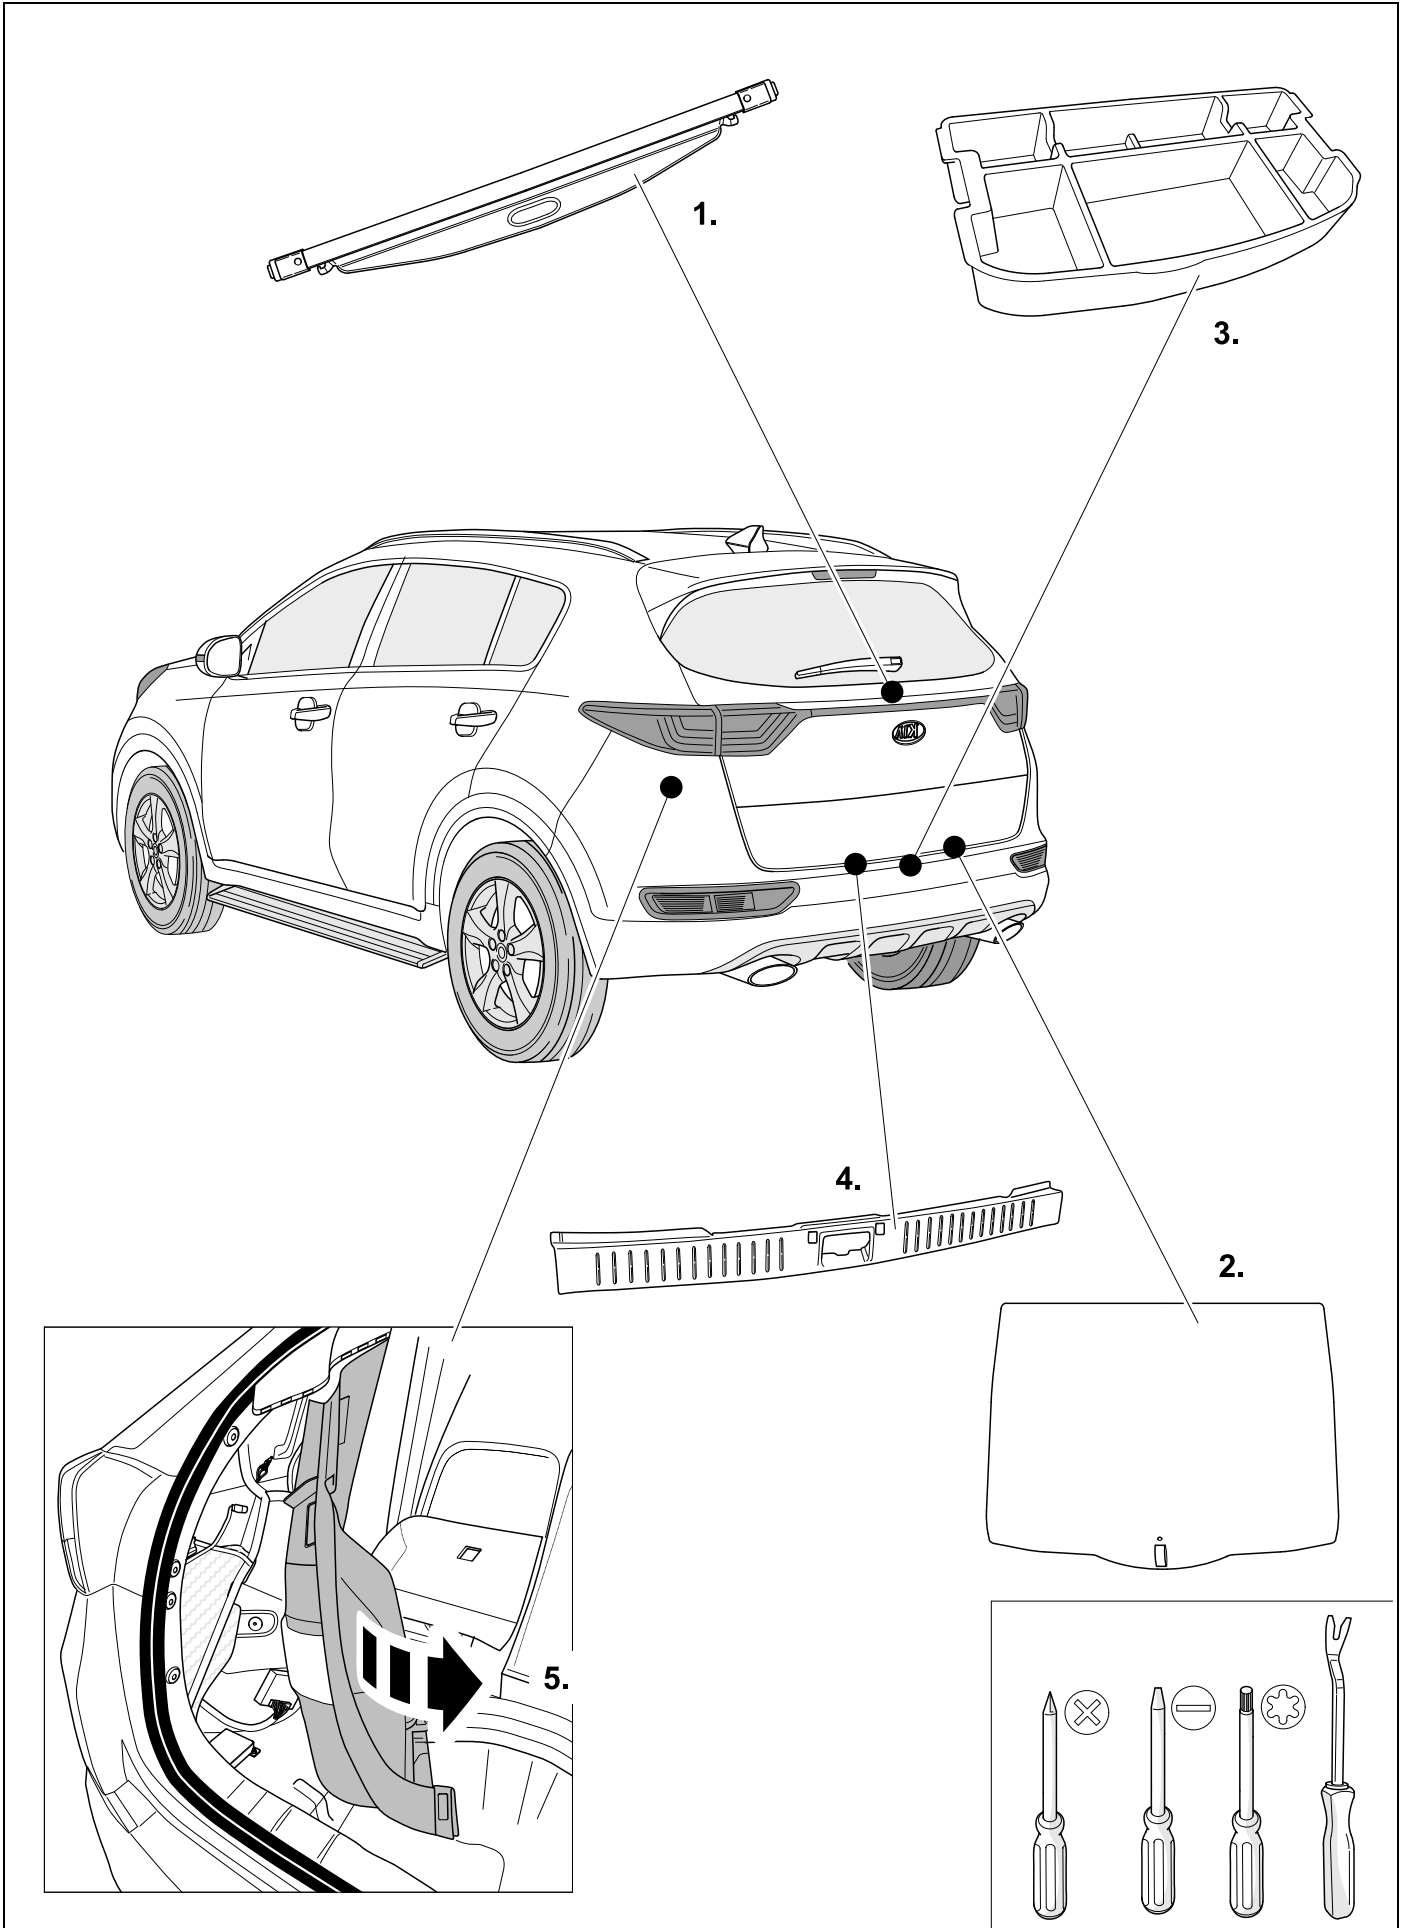


4 REMOVE

Hyundai Tucson

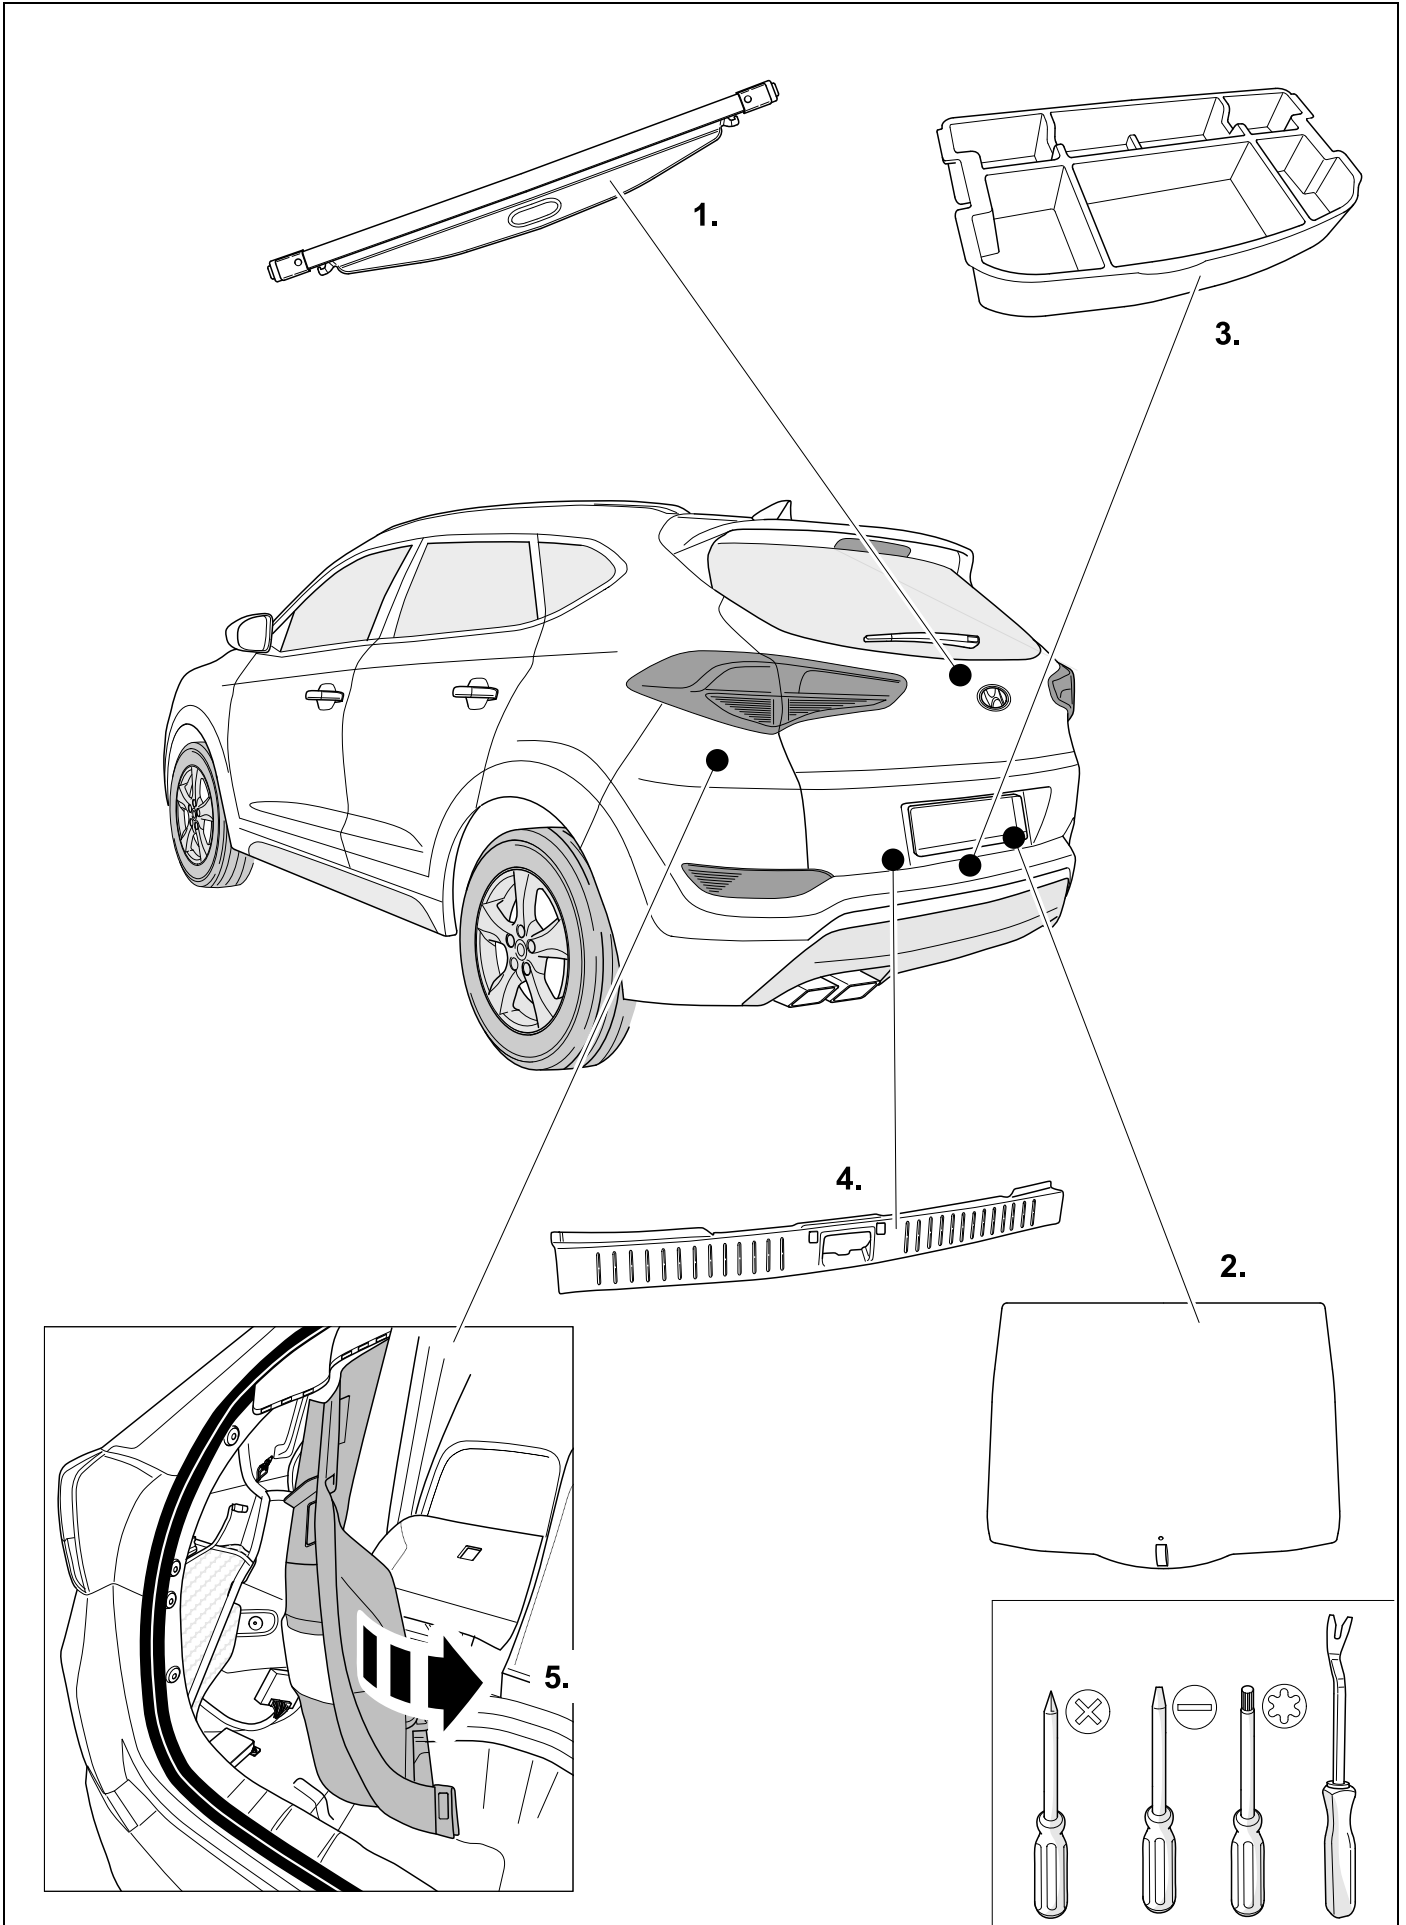


5

Kia Sorento

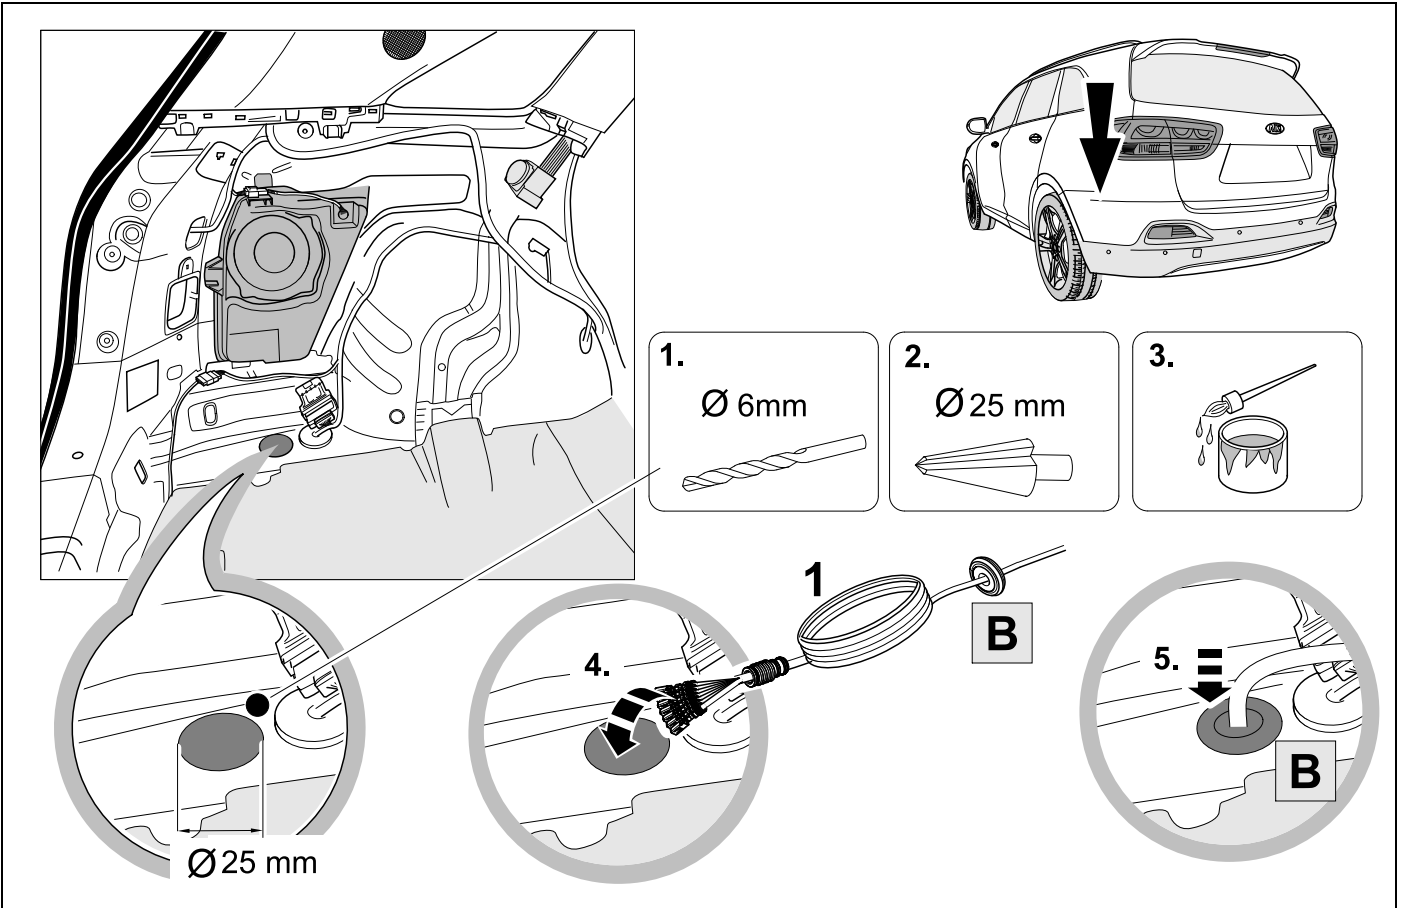





6

Kia Sportage / Hyundai Tucson



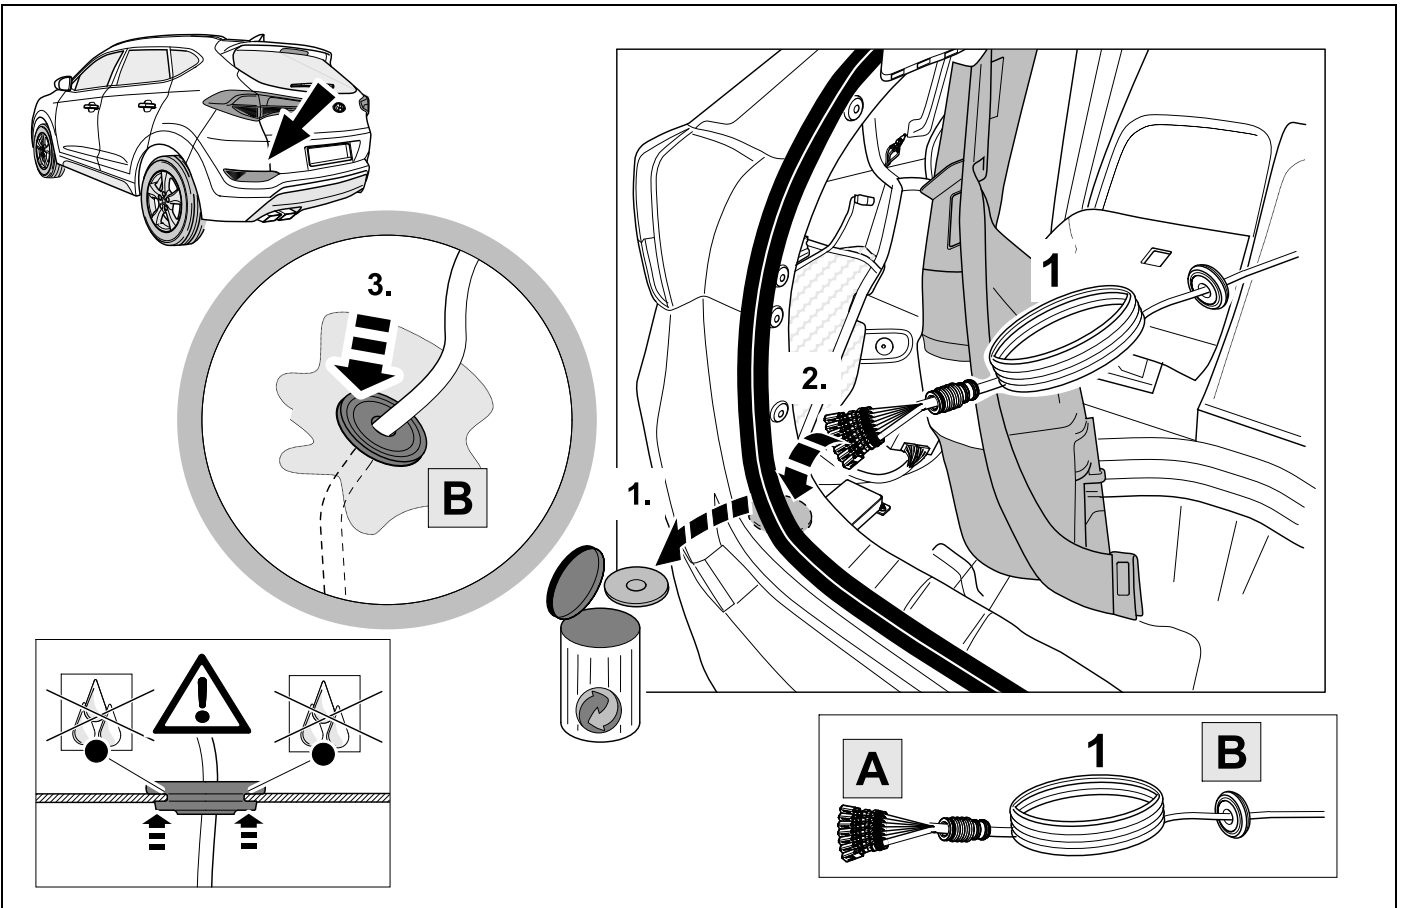


7




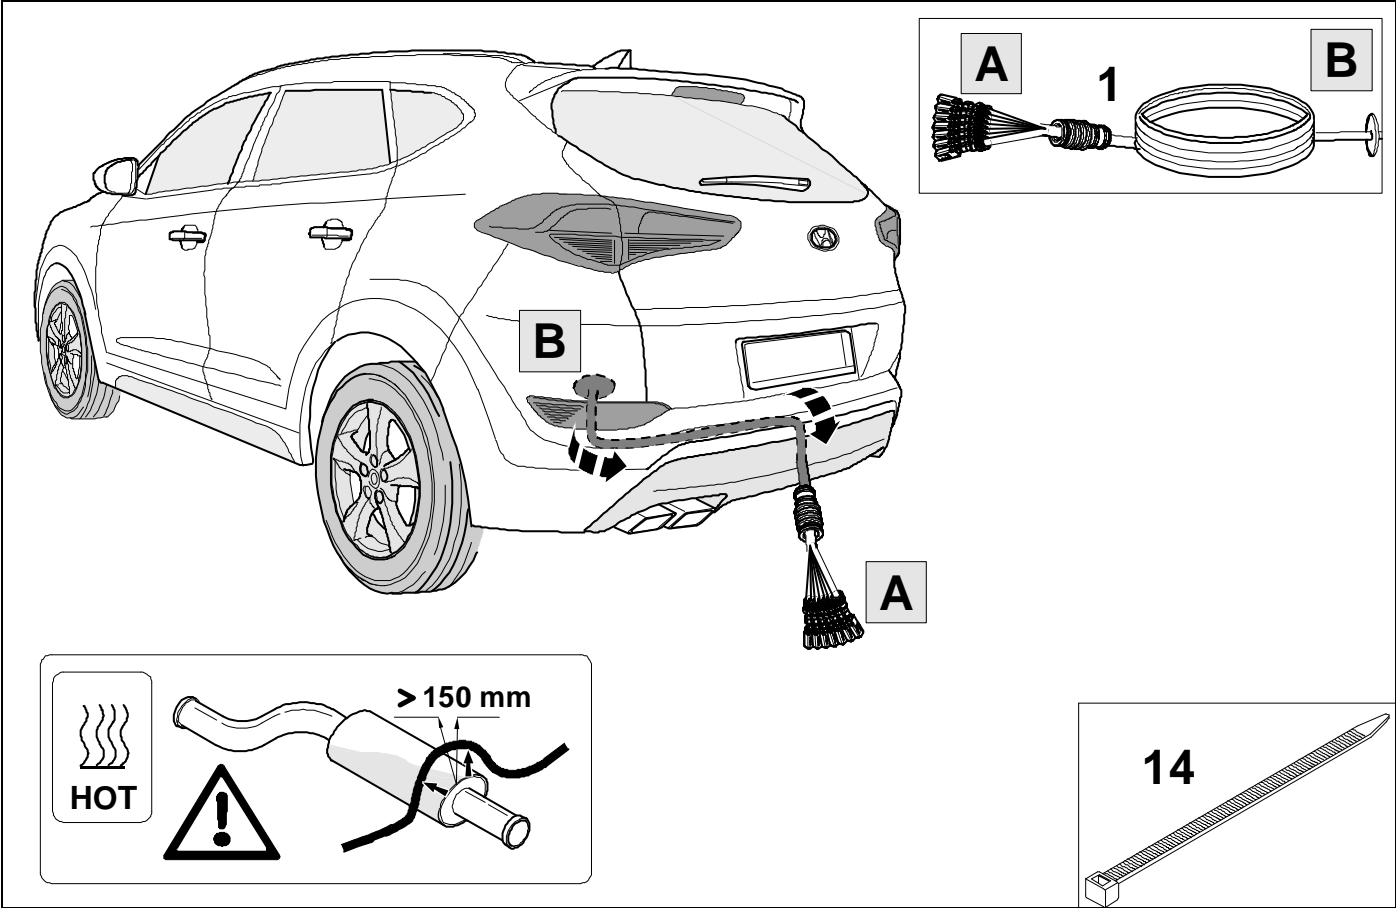


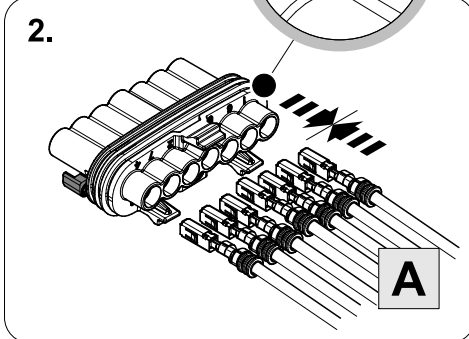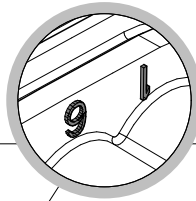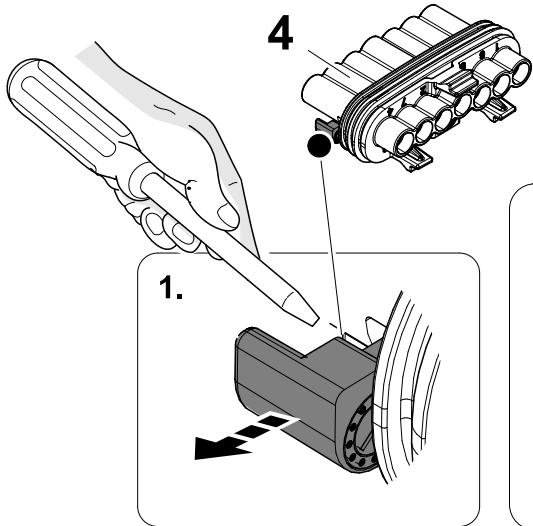







ye	1	
rd	6	
bu	5	
wh	3	
bk	2	
bn	7	
gn	4	

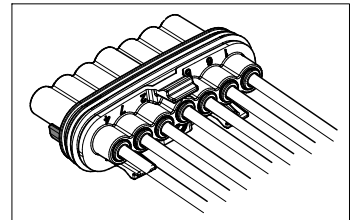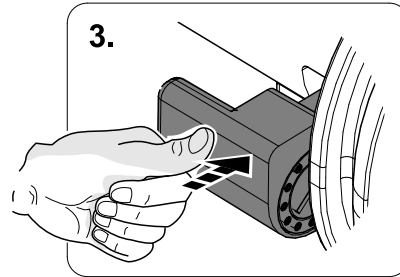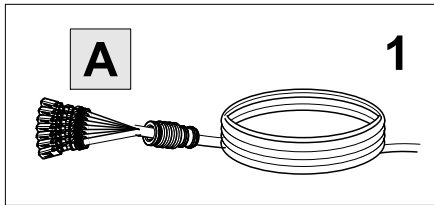


In case of wrong pin insert:

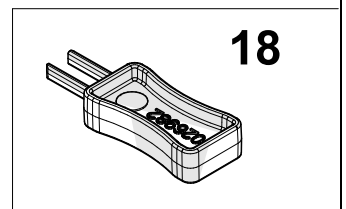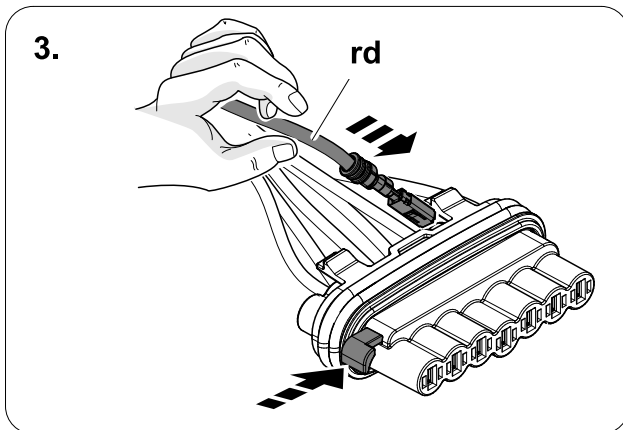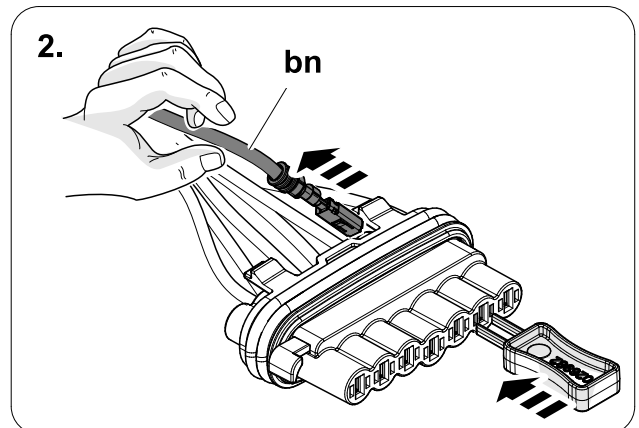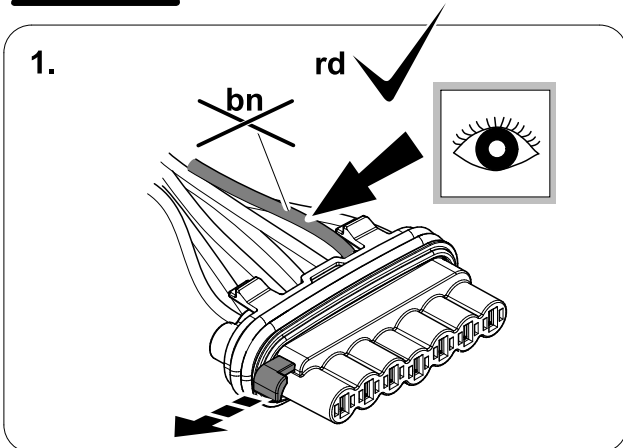

9

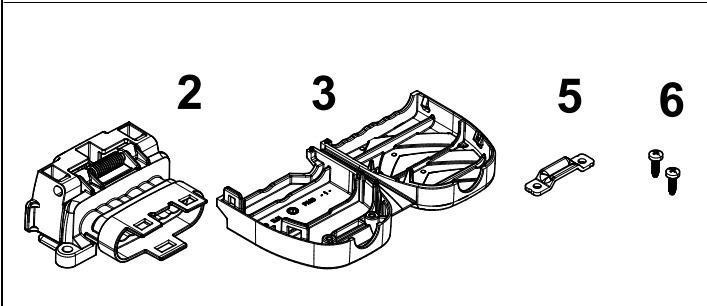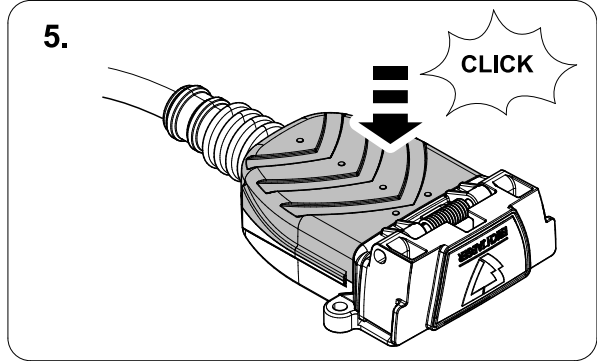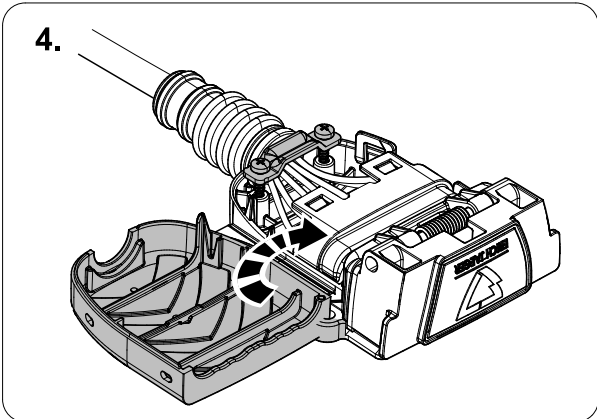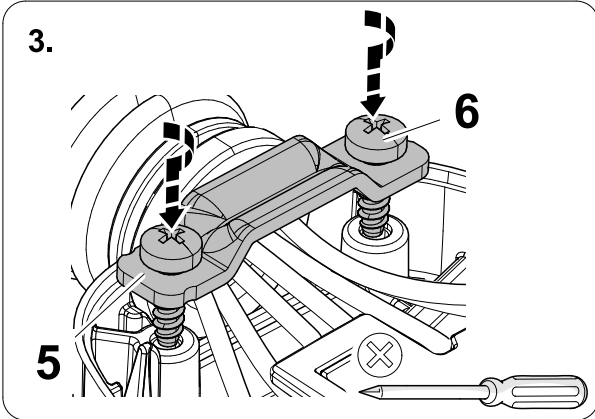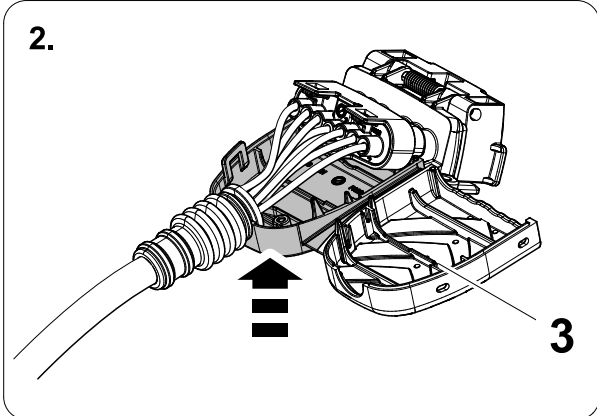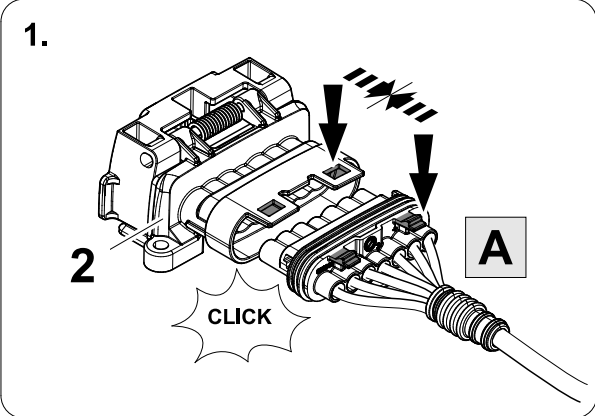

10

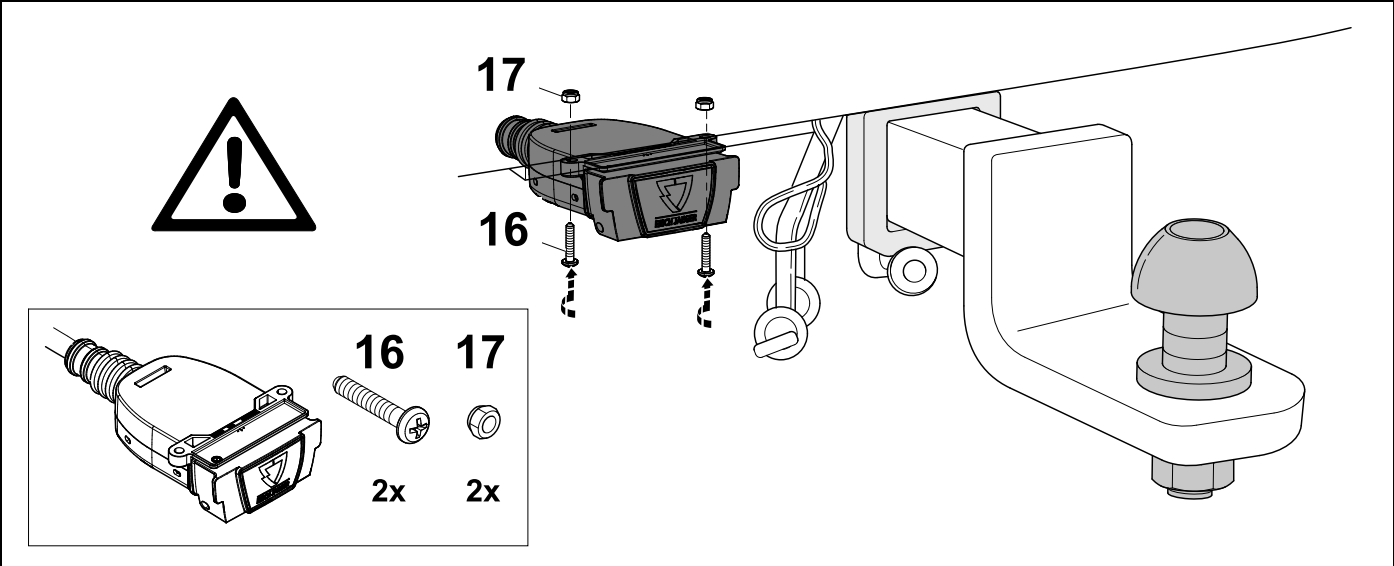

11









12

1	ye	
2	bk	
3	wh	
4	gn	
5	bu	
6	rd	
7	bn	


12	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
----	----	----	----	----	----	----	----	----	----	----	----

	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied
--	-------	-------	------	-------	-----	------	--------	-------	--------	--------	--------------

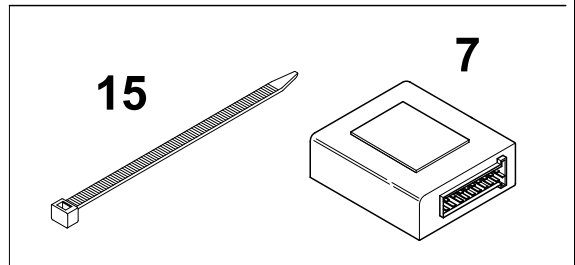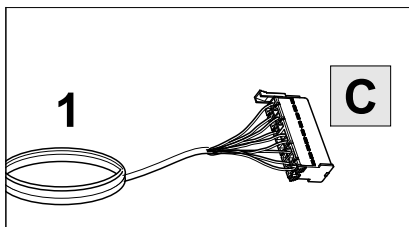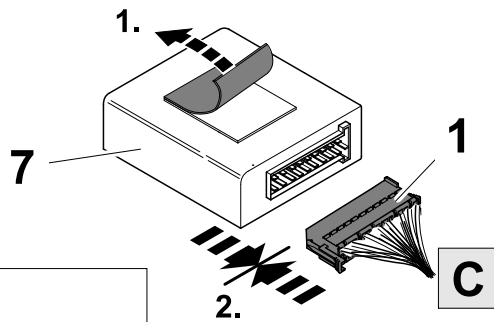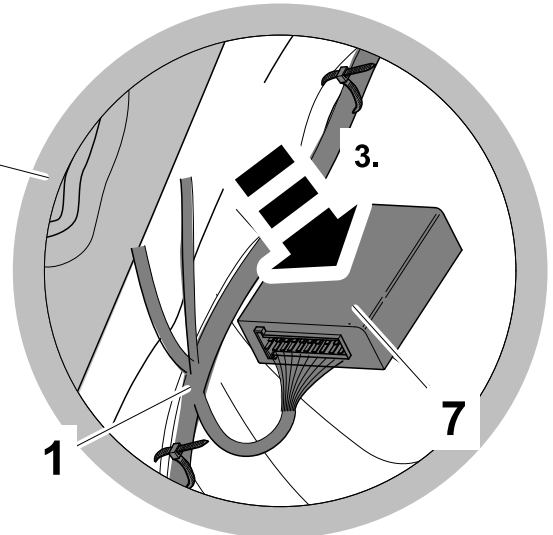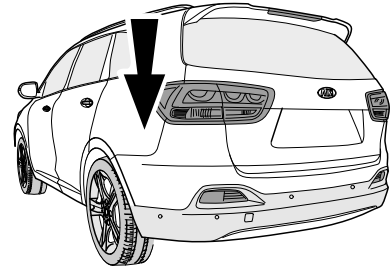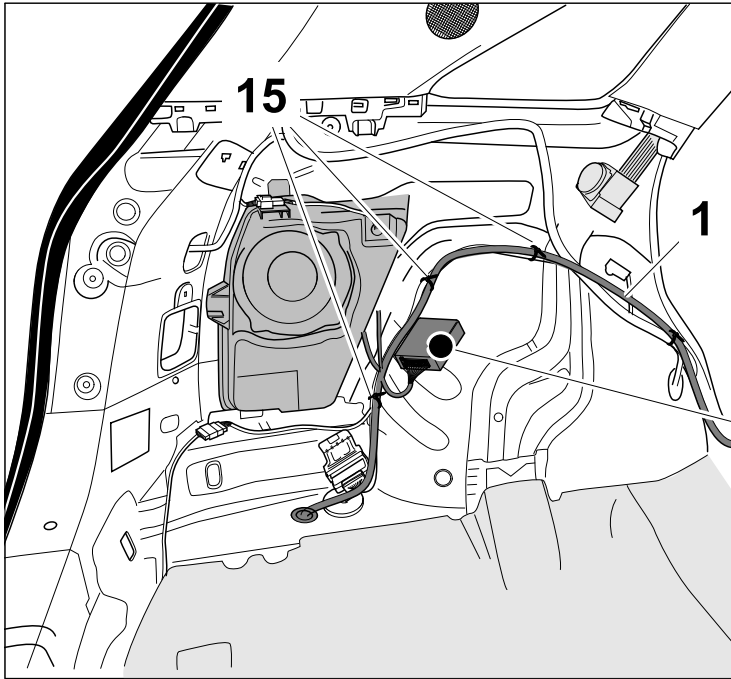


14


Kia Sportage / Hyundai Tucson









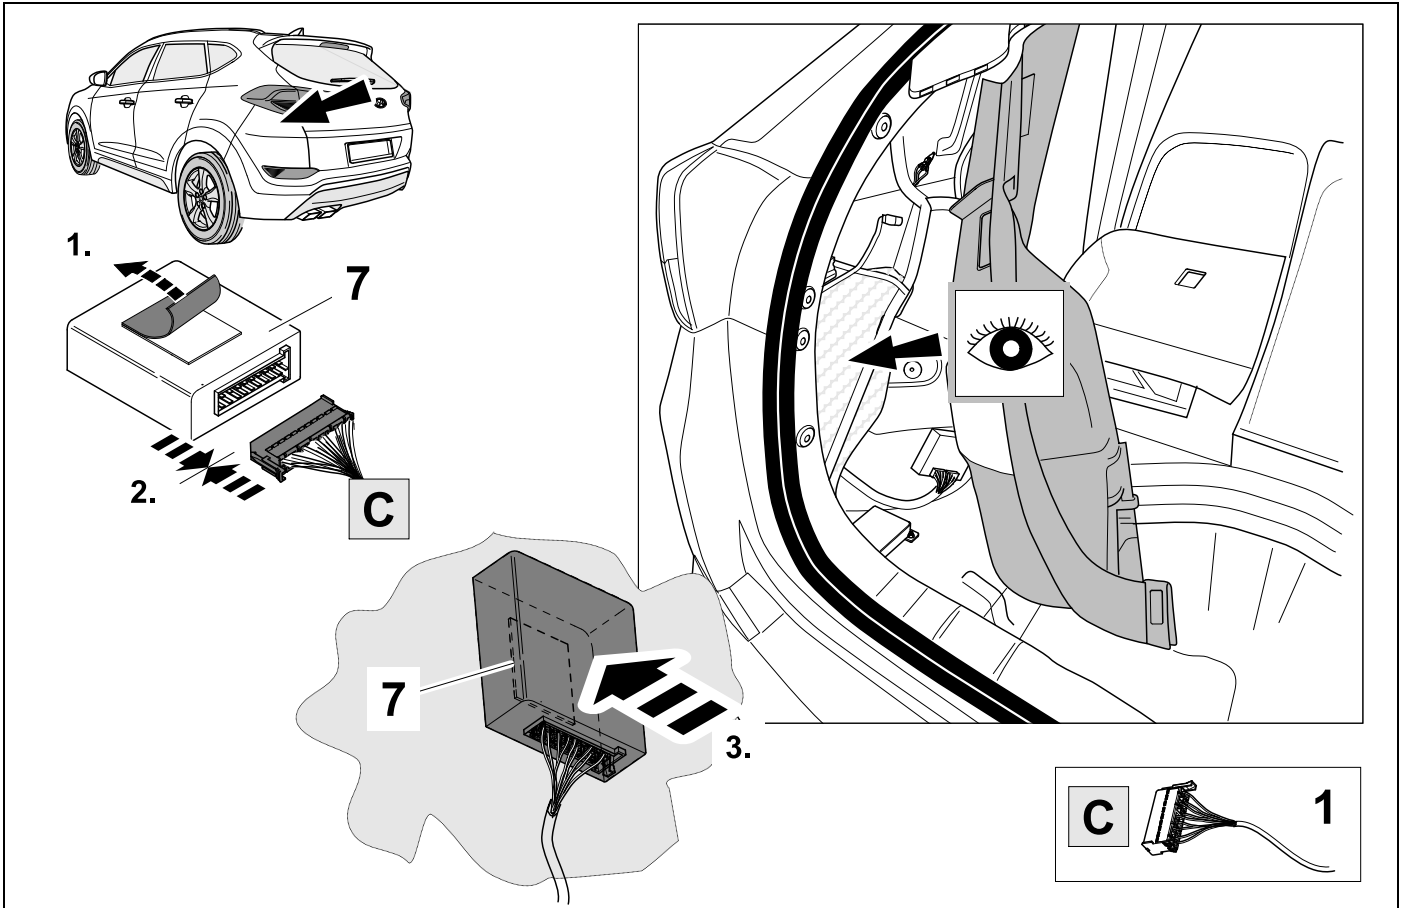




15

Kia Sorento

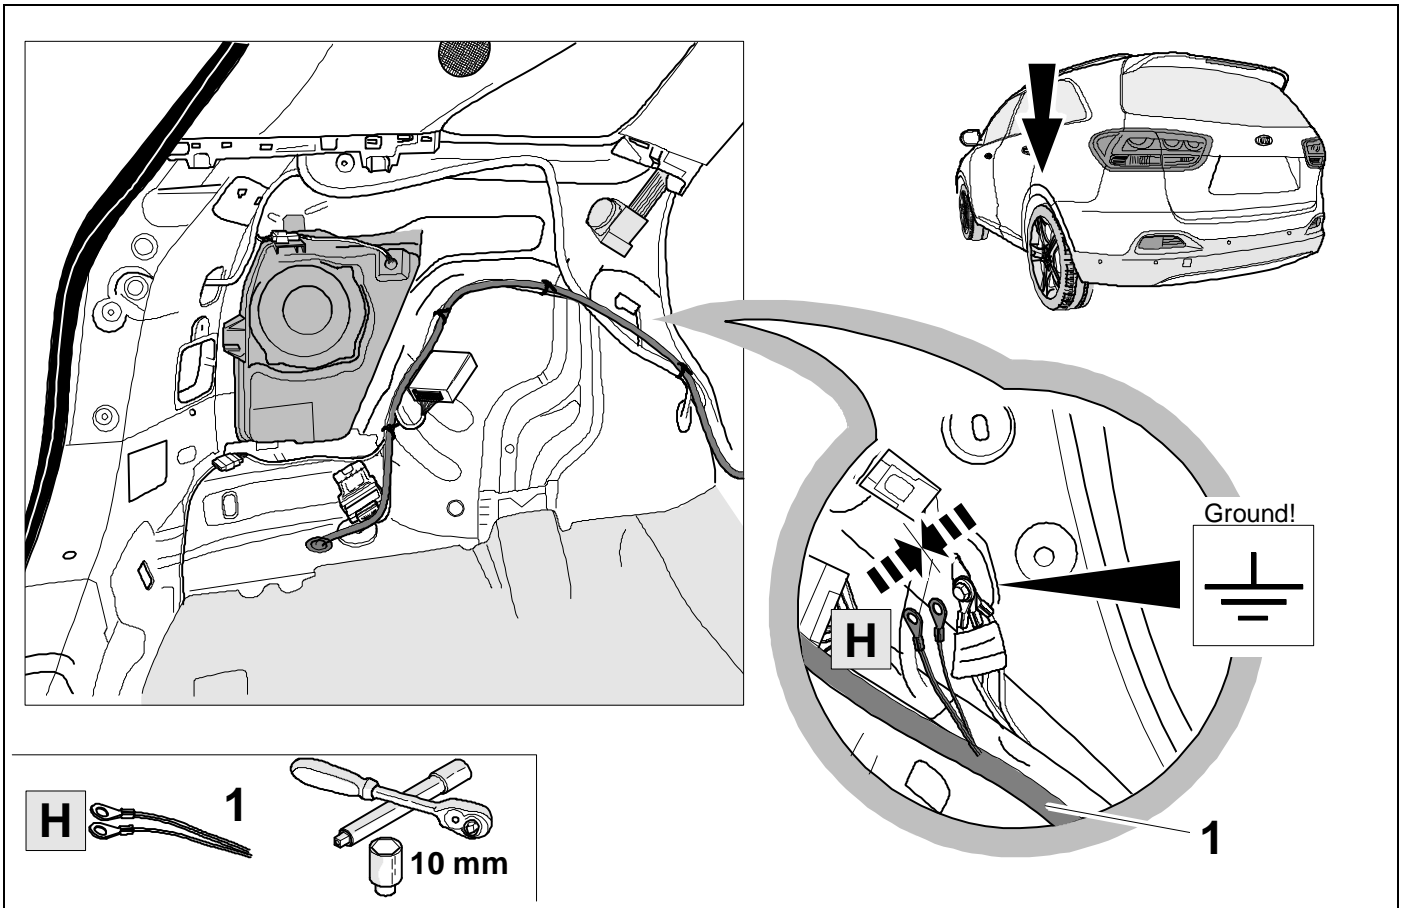

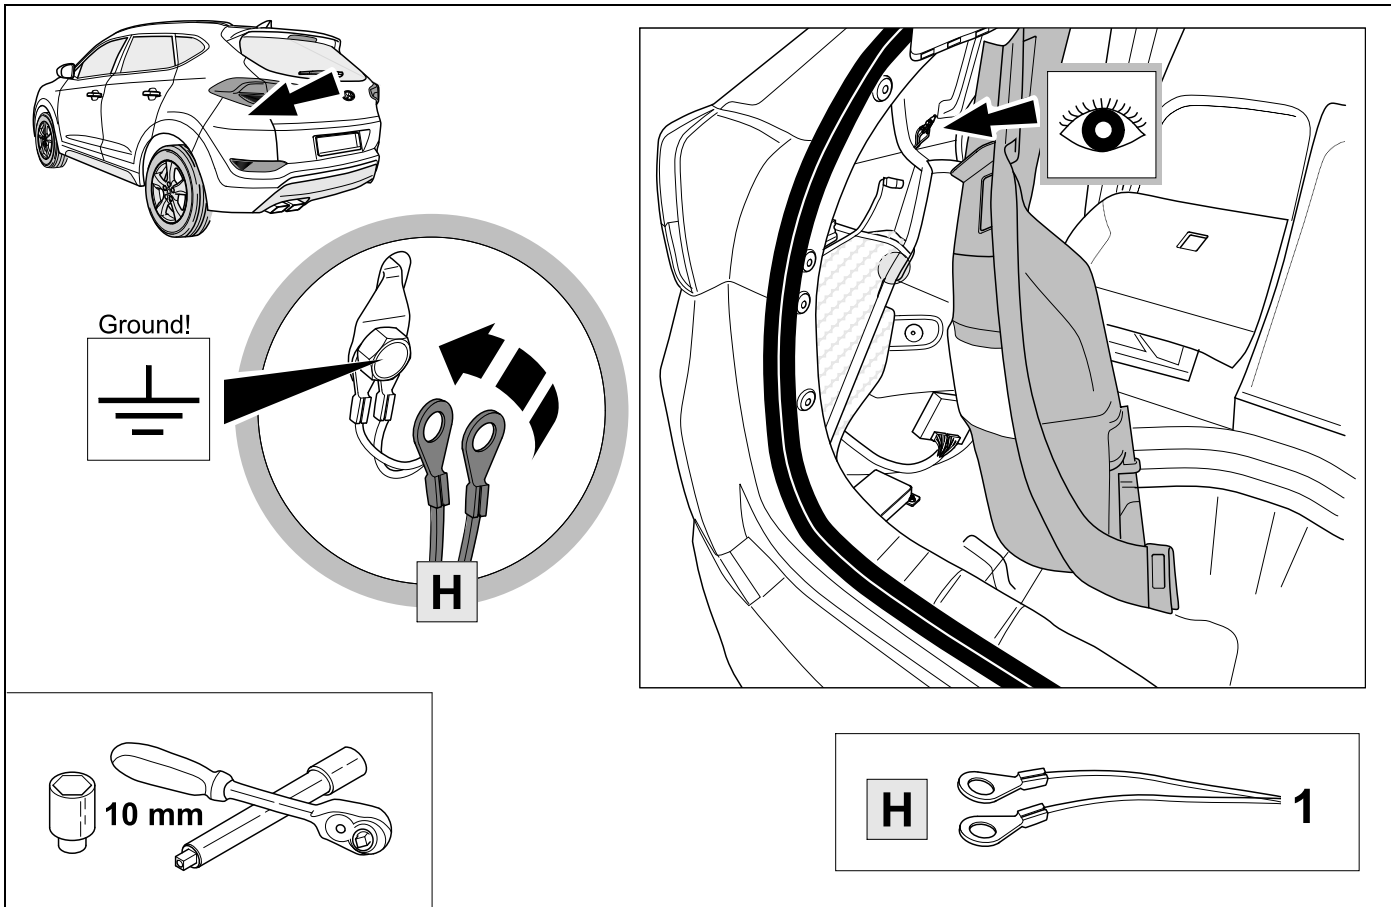

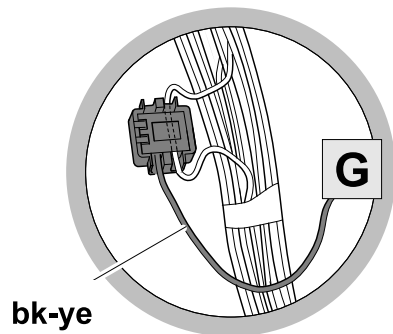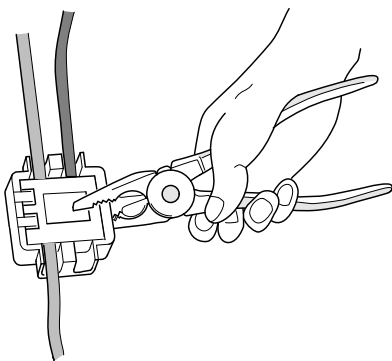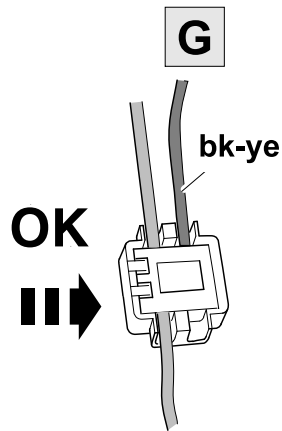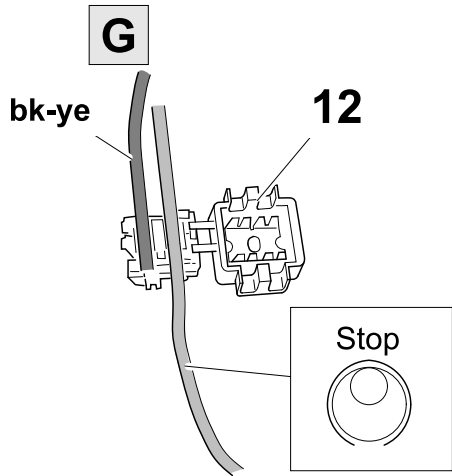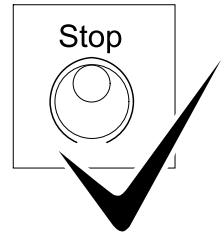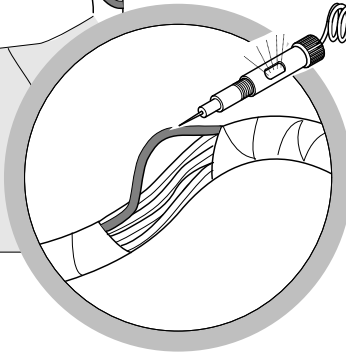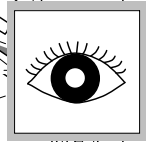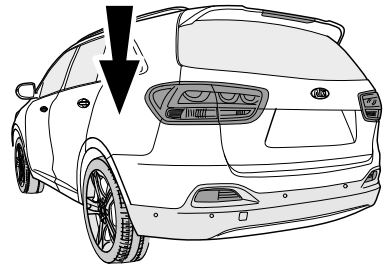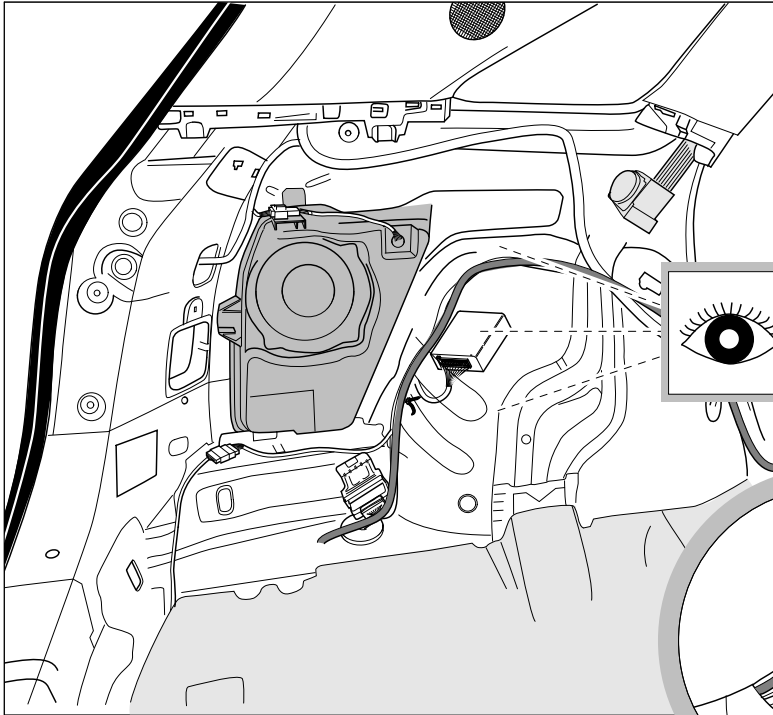

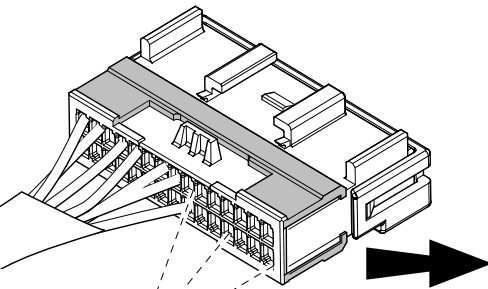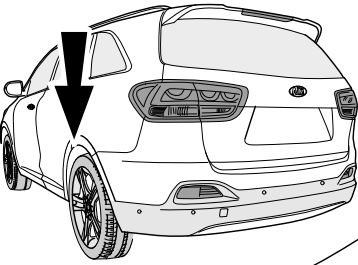

OPTION 1


19

+



33

-

46



>>12/2017

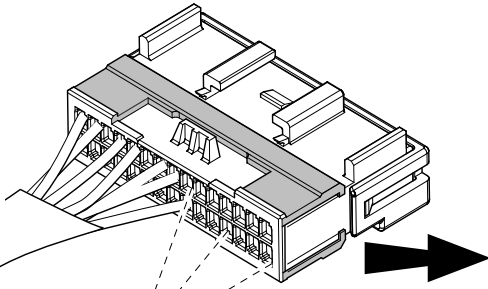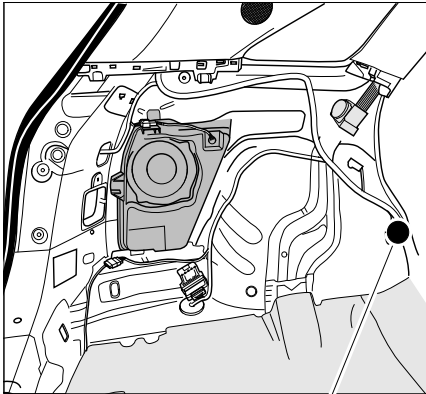

OPTION 2


20

+


33

-


46



01/2018 >>

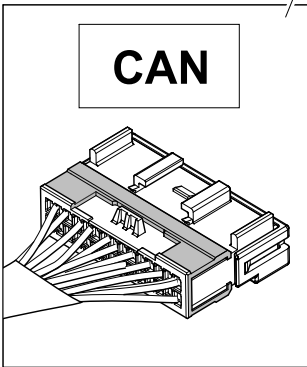

CAN

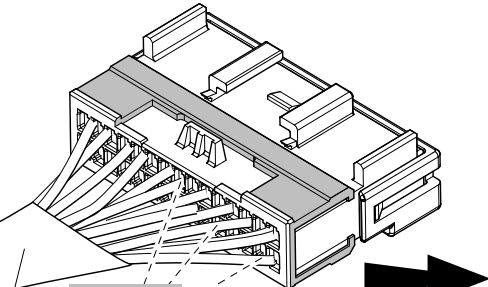

OPTION 3


21

+



33

-

46



>>12/2017

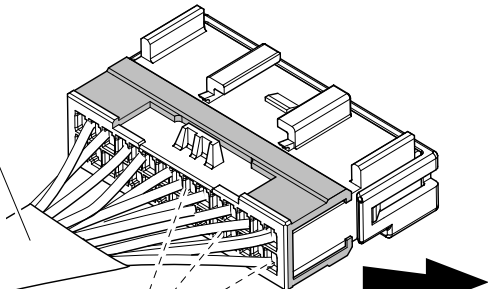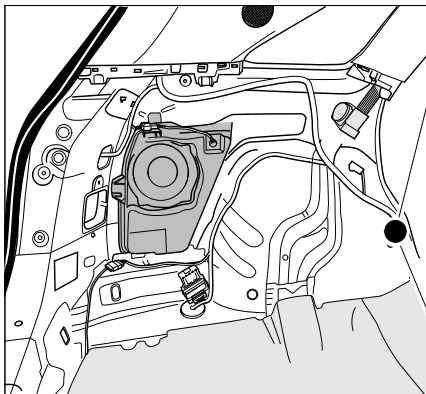

OPTION 4


22

+

33

-

46




01/2018 >>

19 Kia Sorento



11

OPTION 1

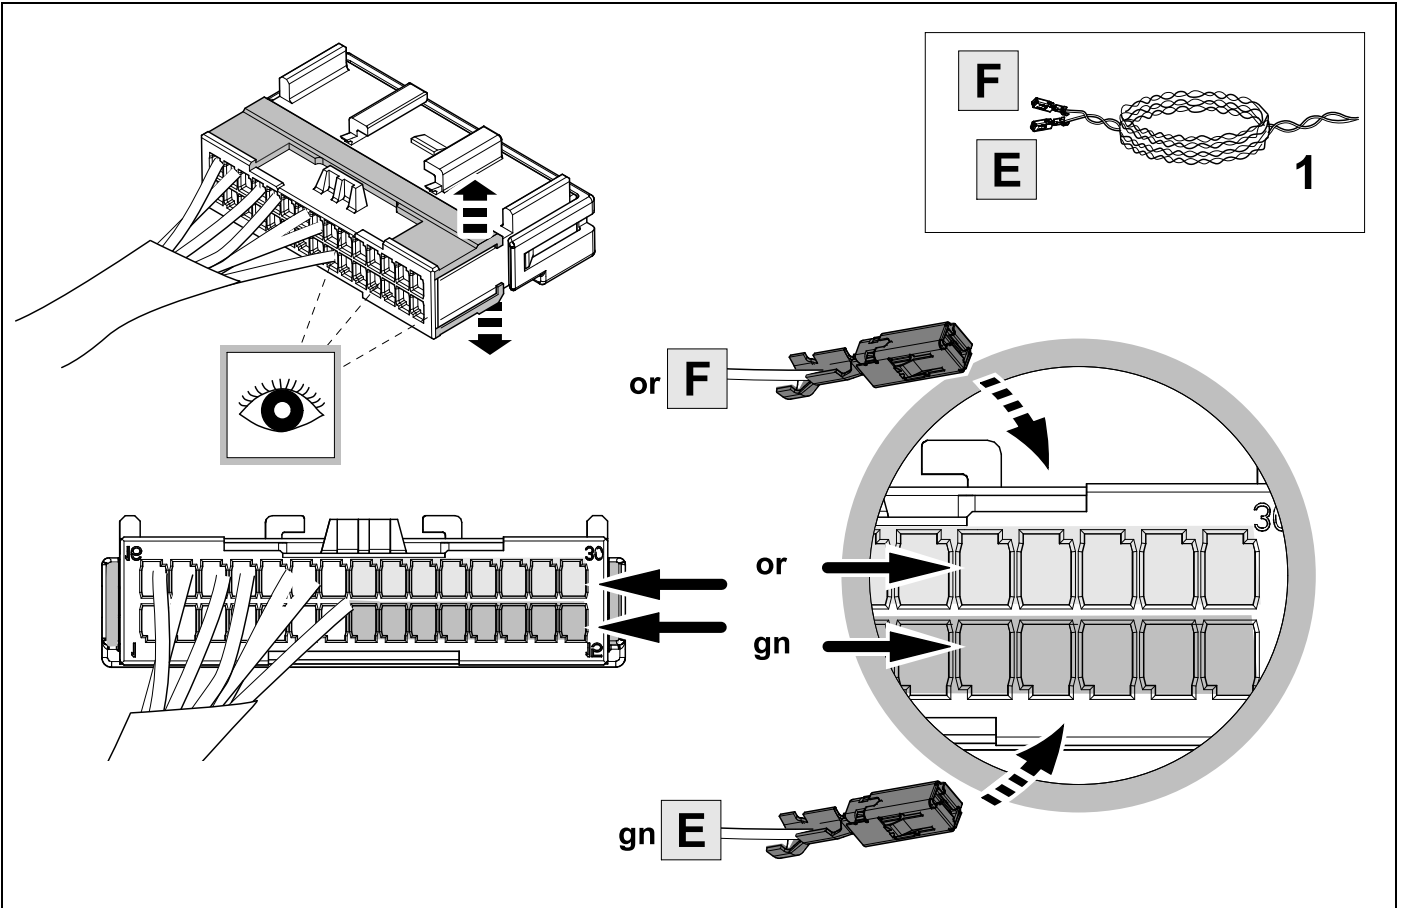


20 Kia Sorento



11

OPTION 2

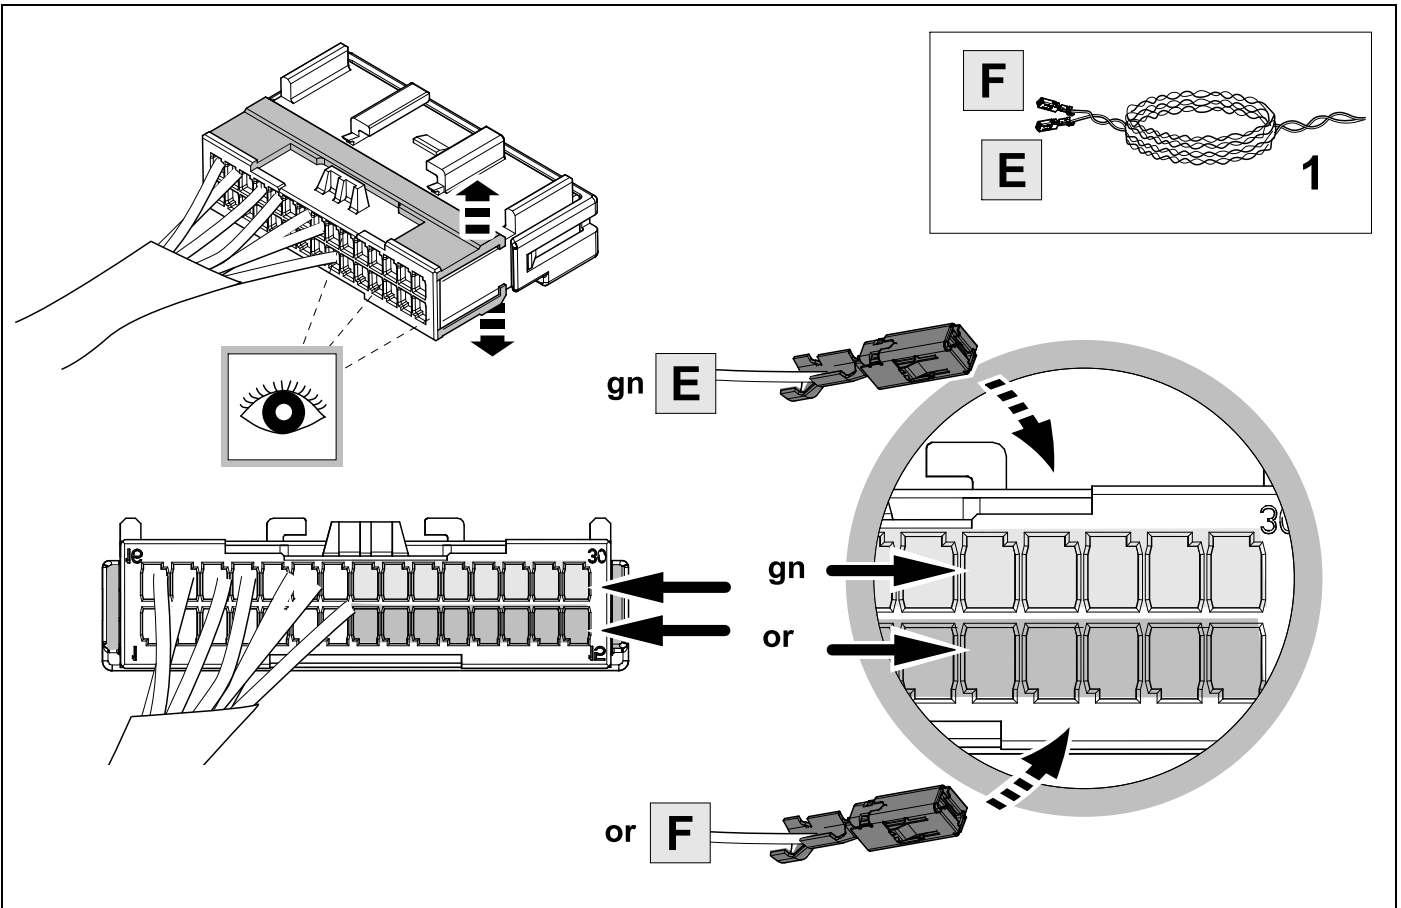


21 Kia Sorento



11

OPTION 3

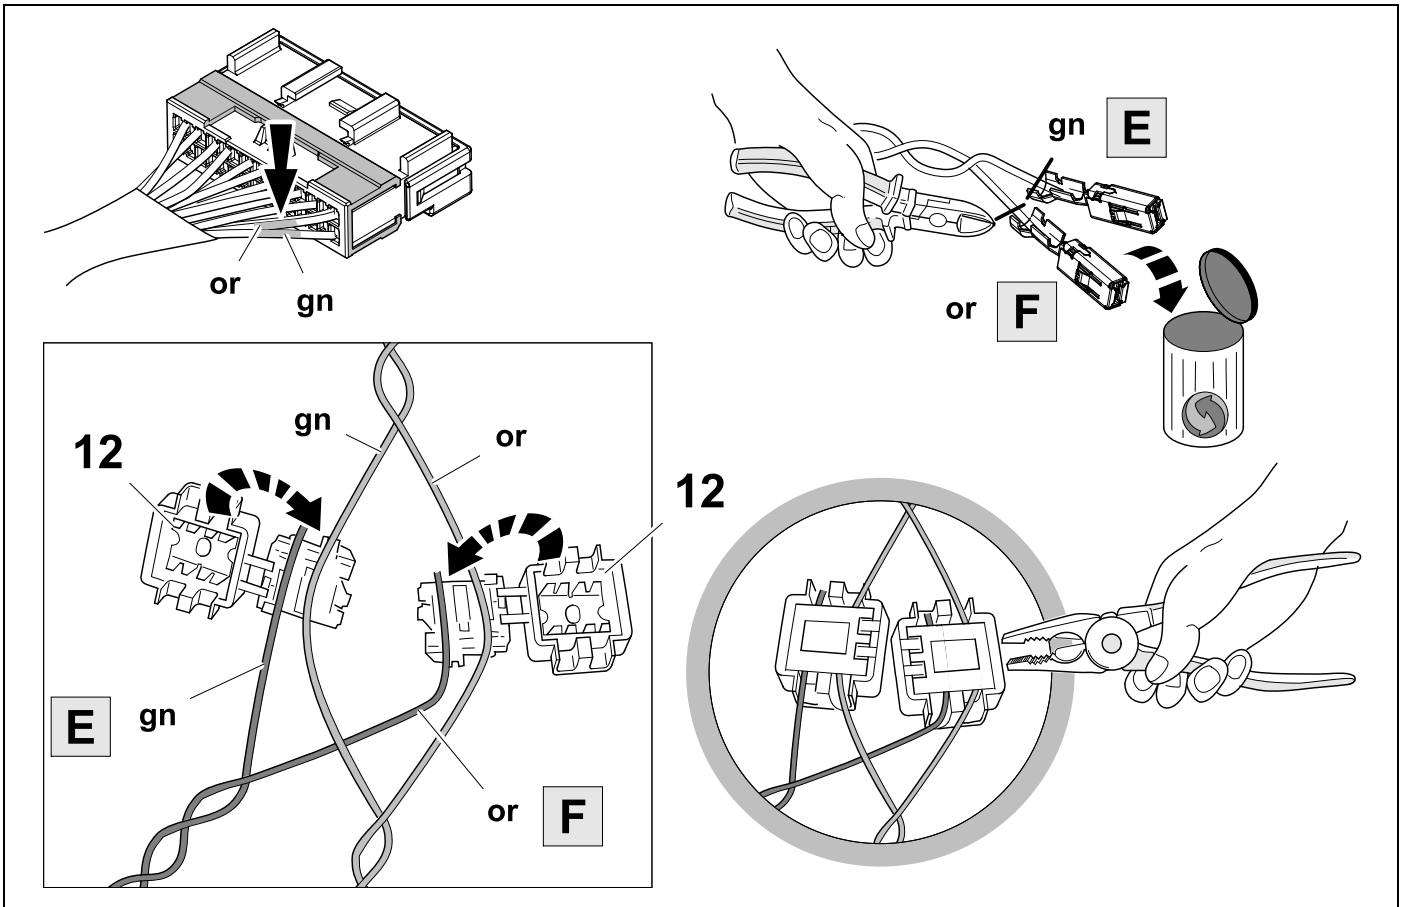


22 Kia Sorento






11


OPTION 4

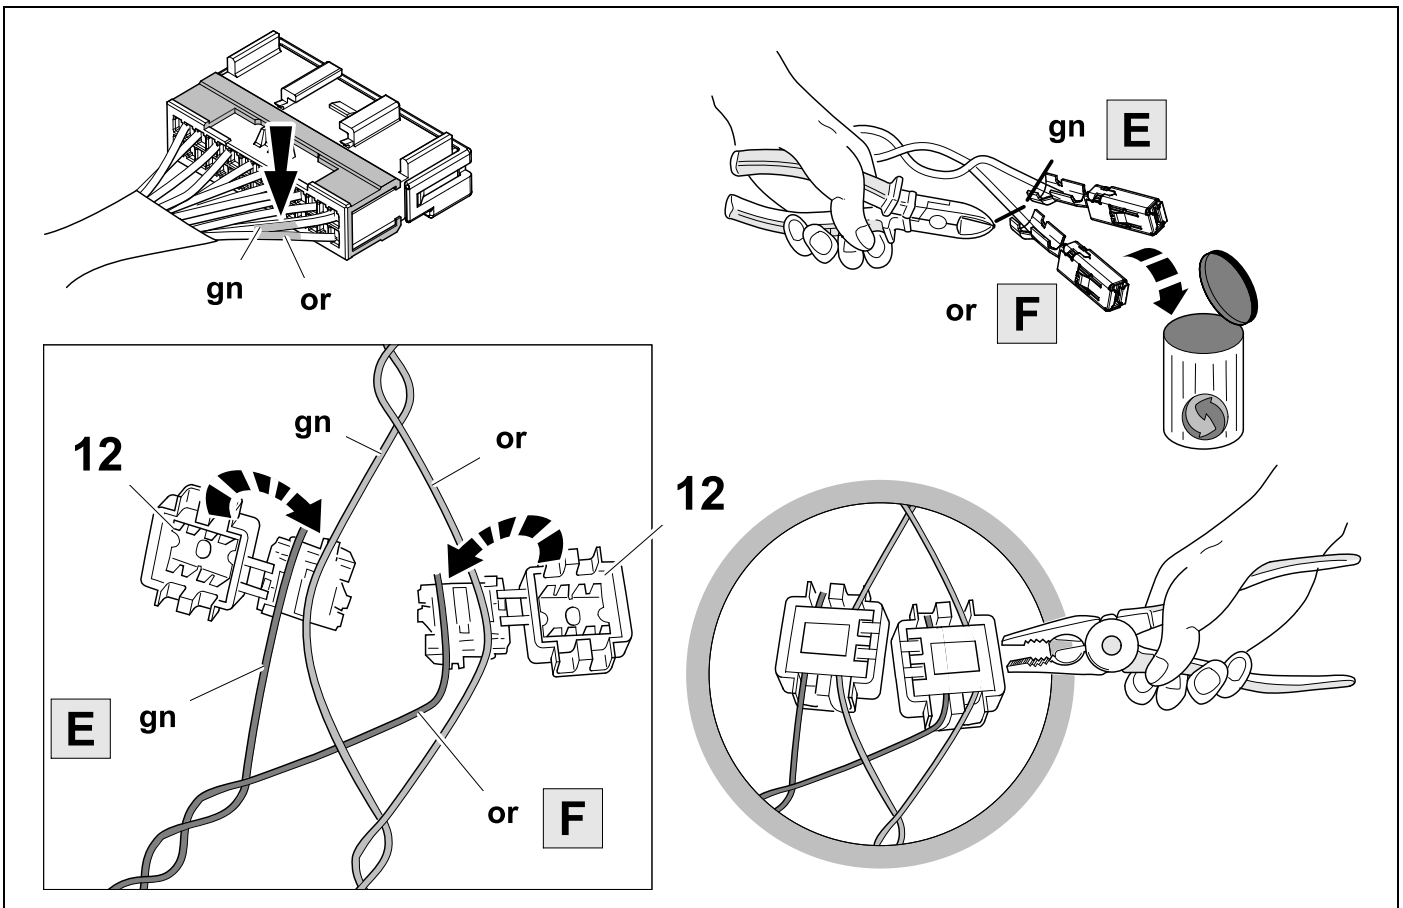



OPTION 1

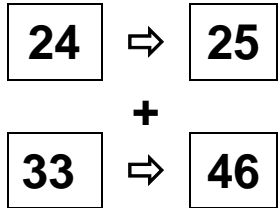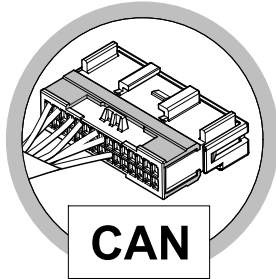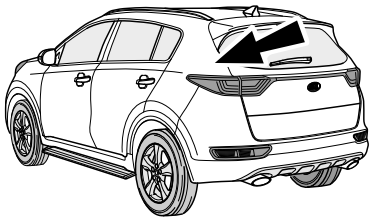

If you see a CAN hub with empty slots, use Option 1

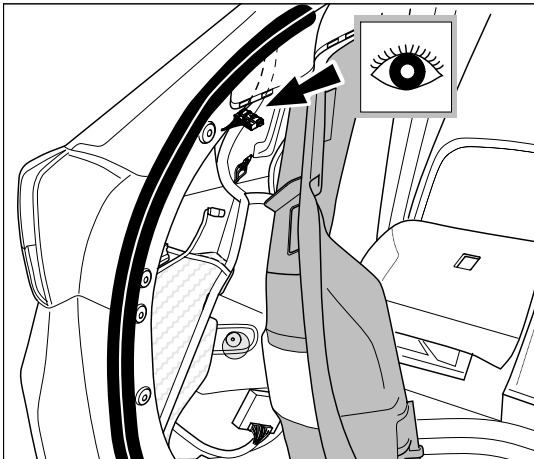


OPTION 2

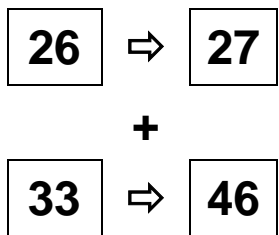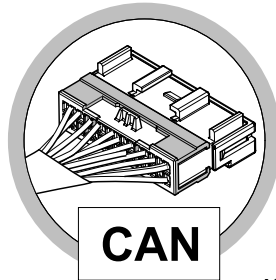





If you do not see a CAN hub with empty slots or not a CAN hub at all, use Option 2

24 Kia Sportage

OPTION 1

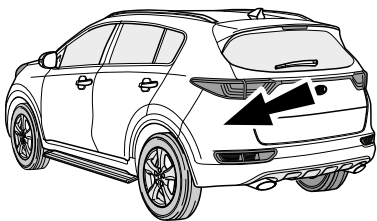

CAN

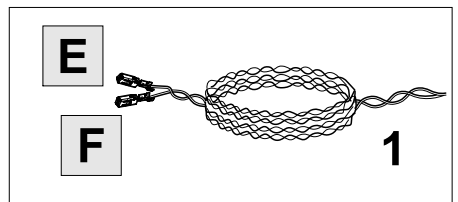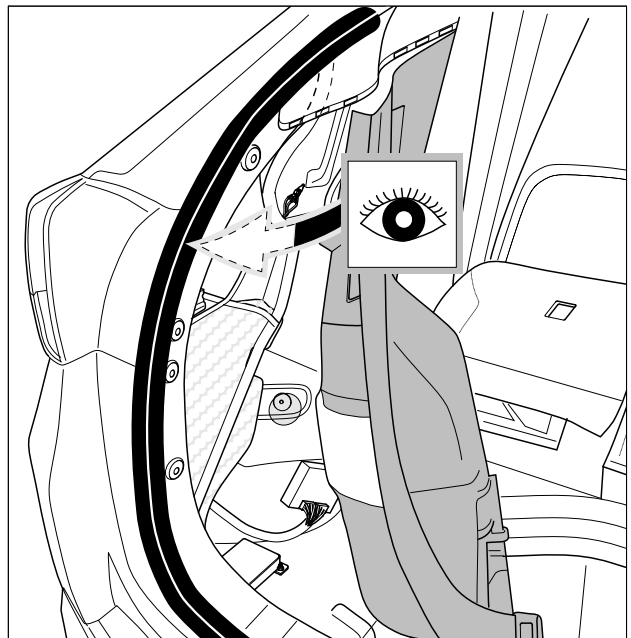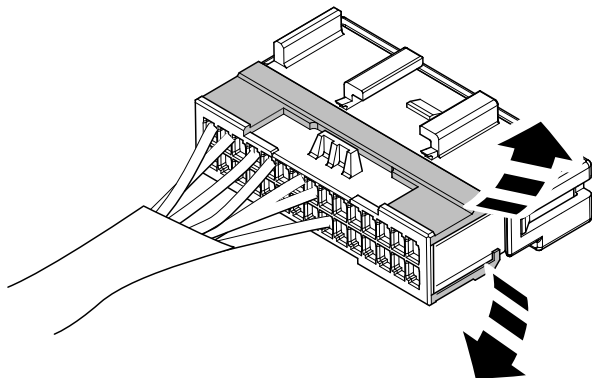


25 Kia Sportage




11


OPTION 1

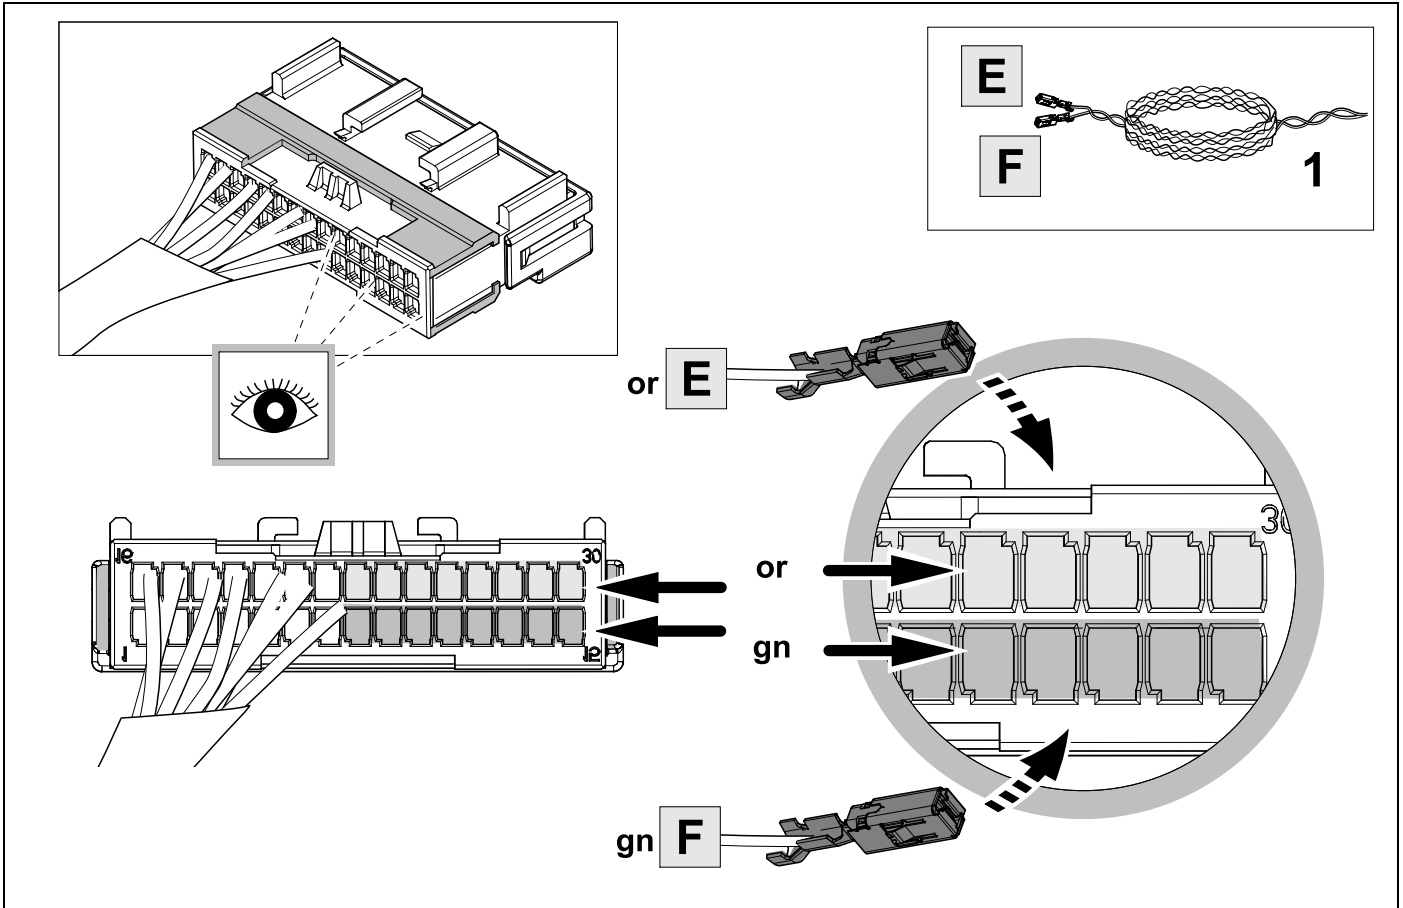


26 Kia Sportage

OPTION 2




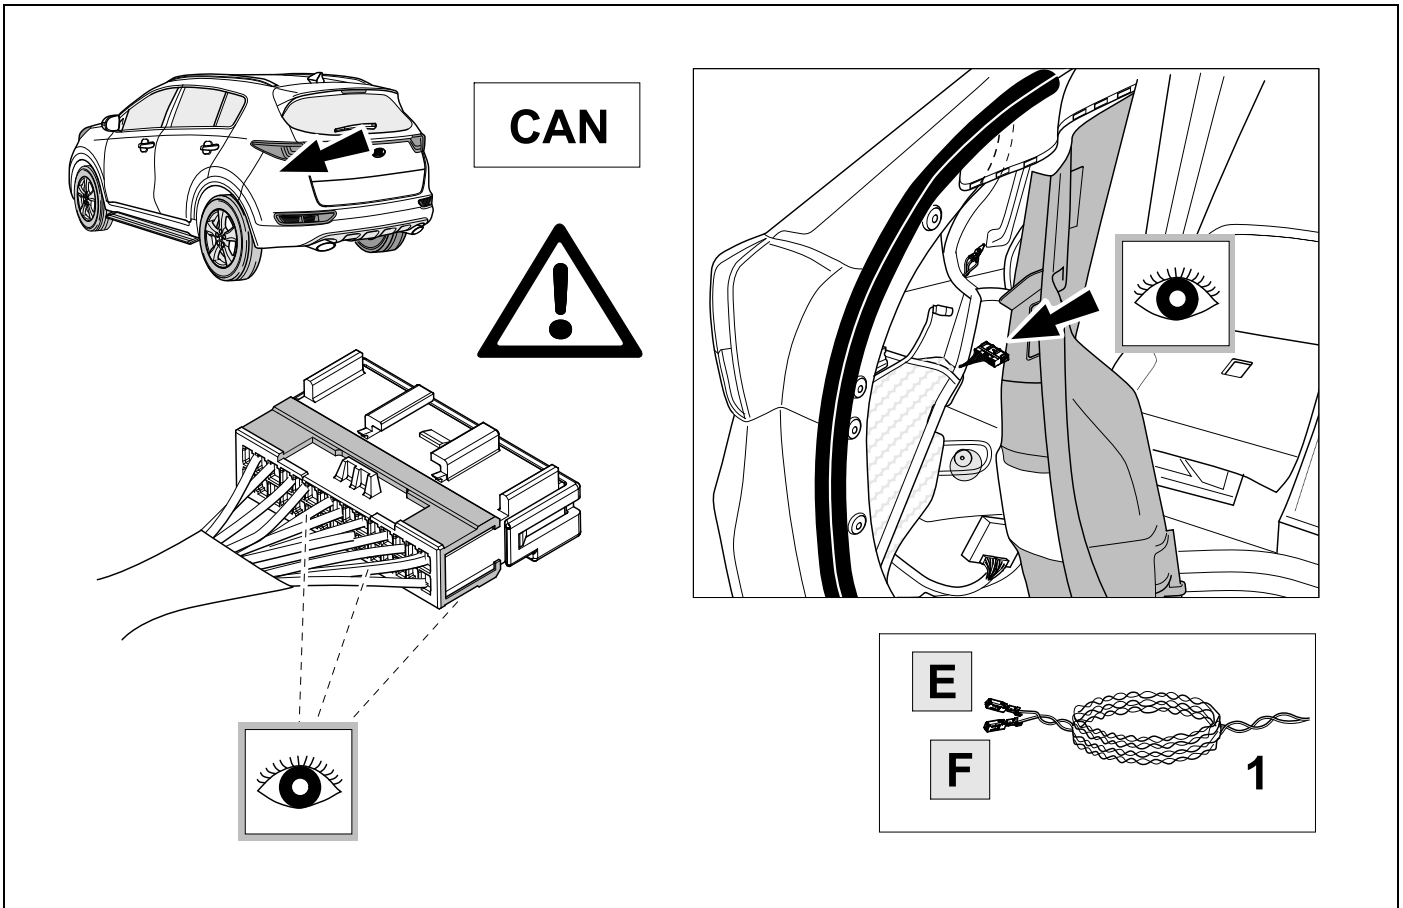


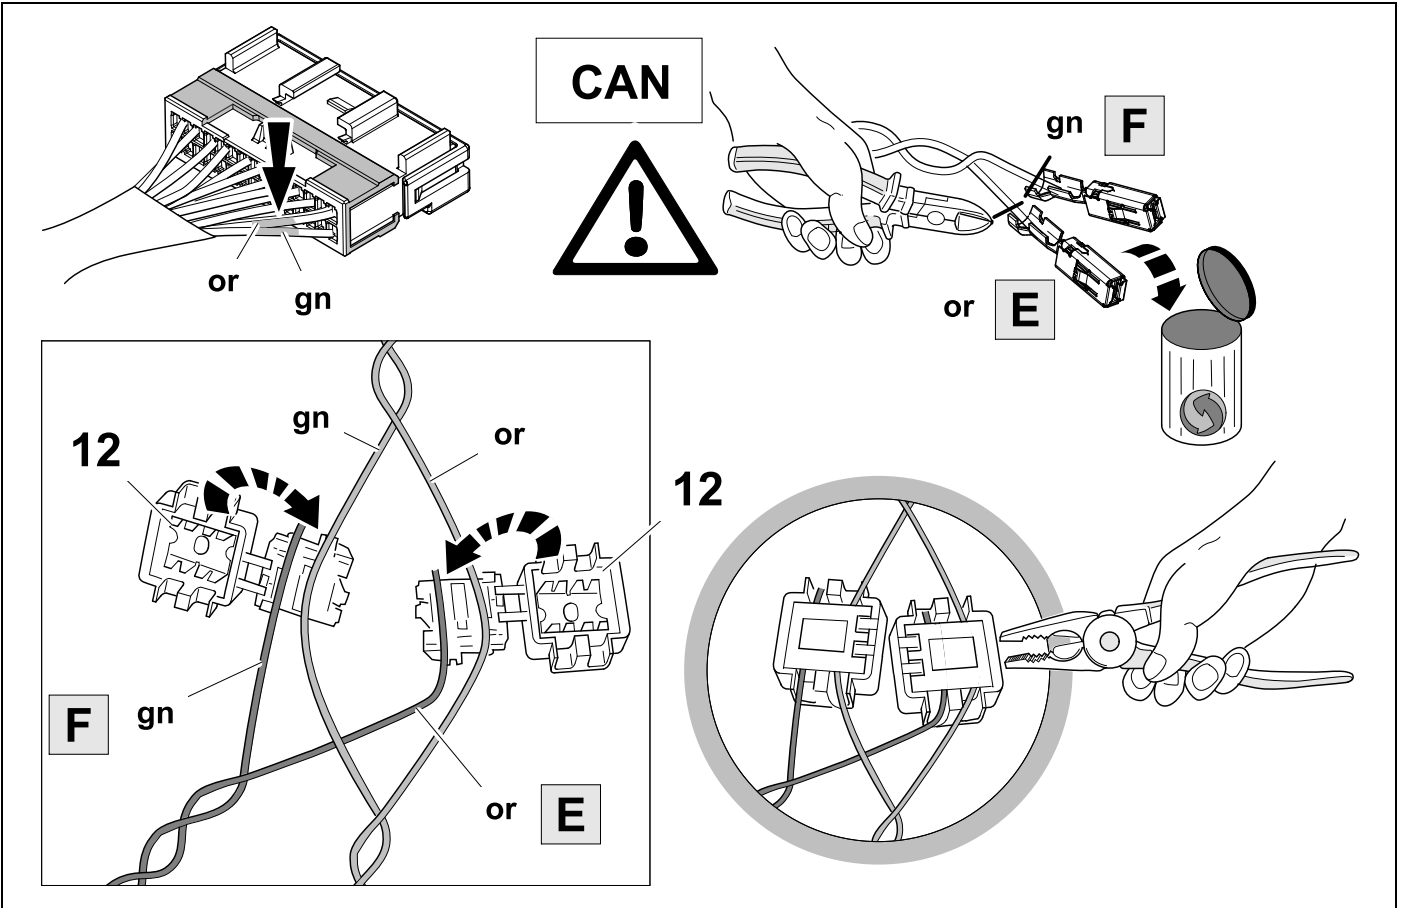



If you do not see a hub at all or no Green and Orange wires

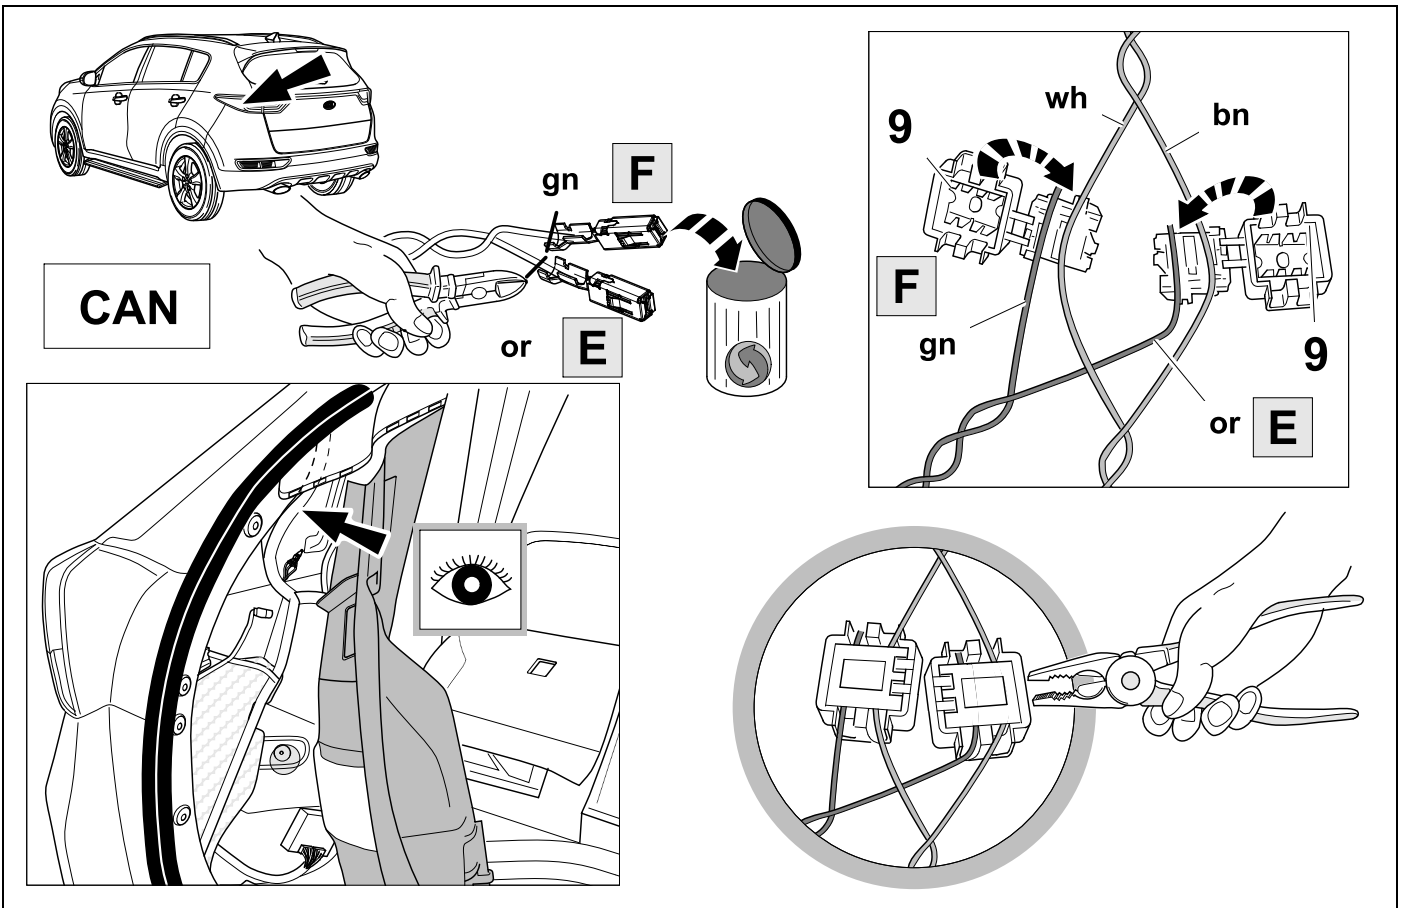

OPTION 1

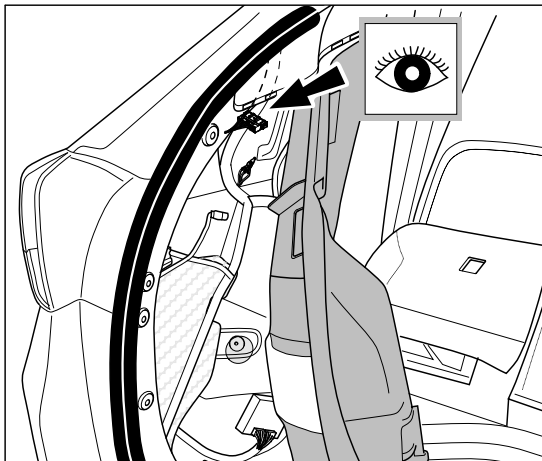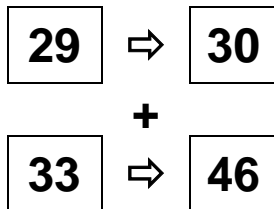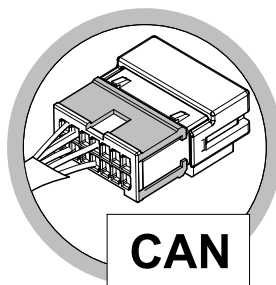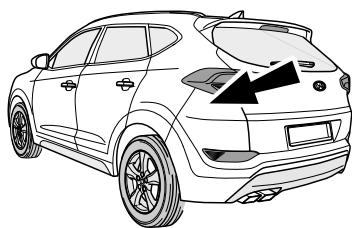


OPTION 2



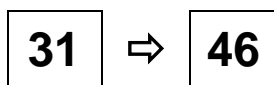
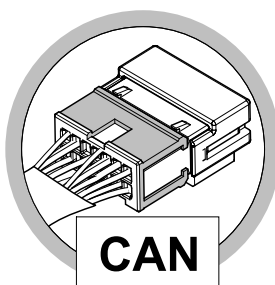


29 Hyundai Tucson

OPTION 1

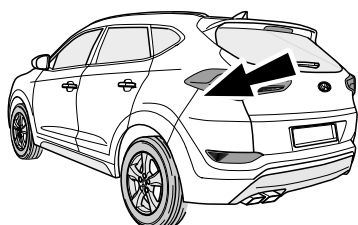

CAN

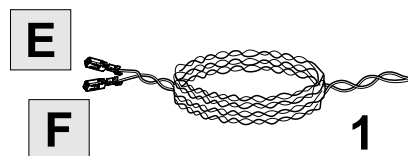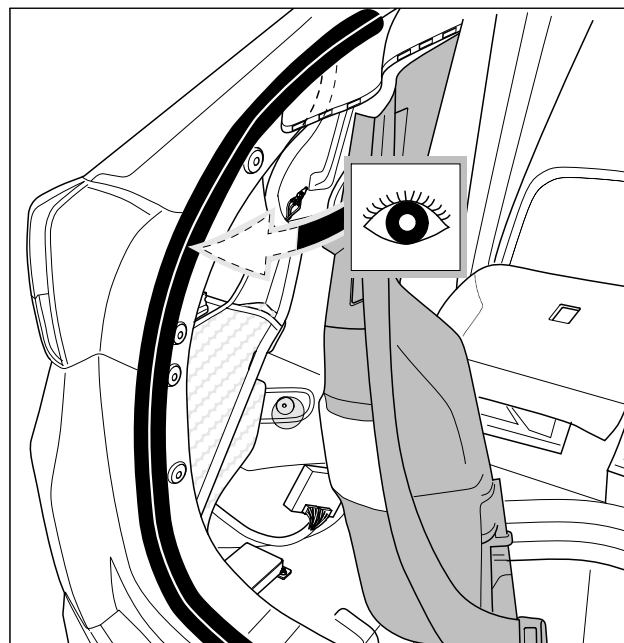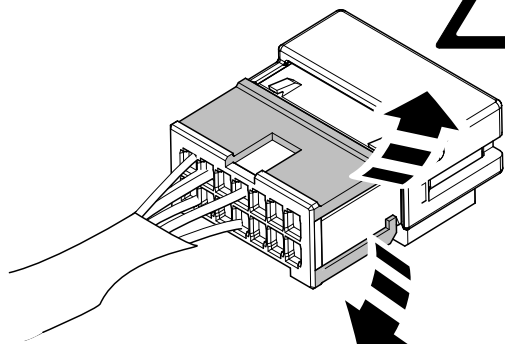


30 Hyundai Tucson




11



OPTION 1

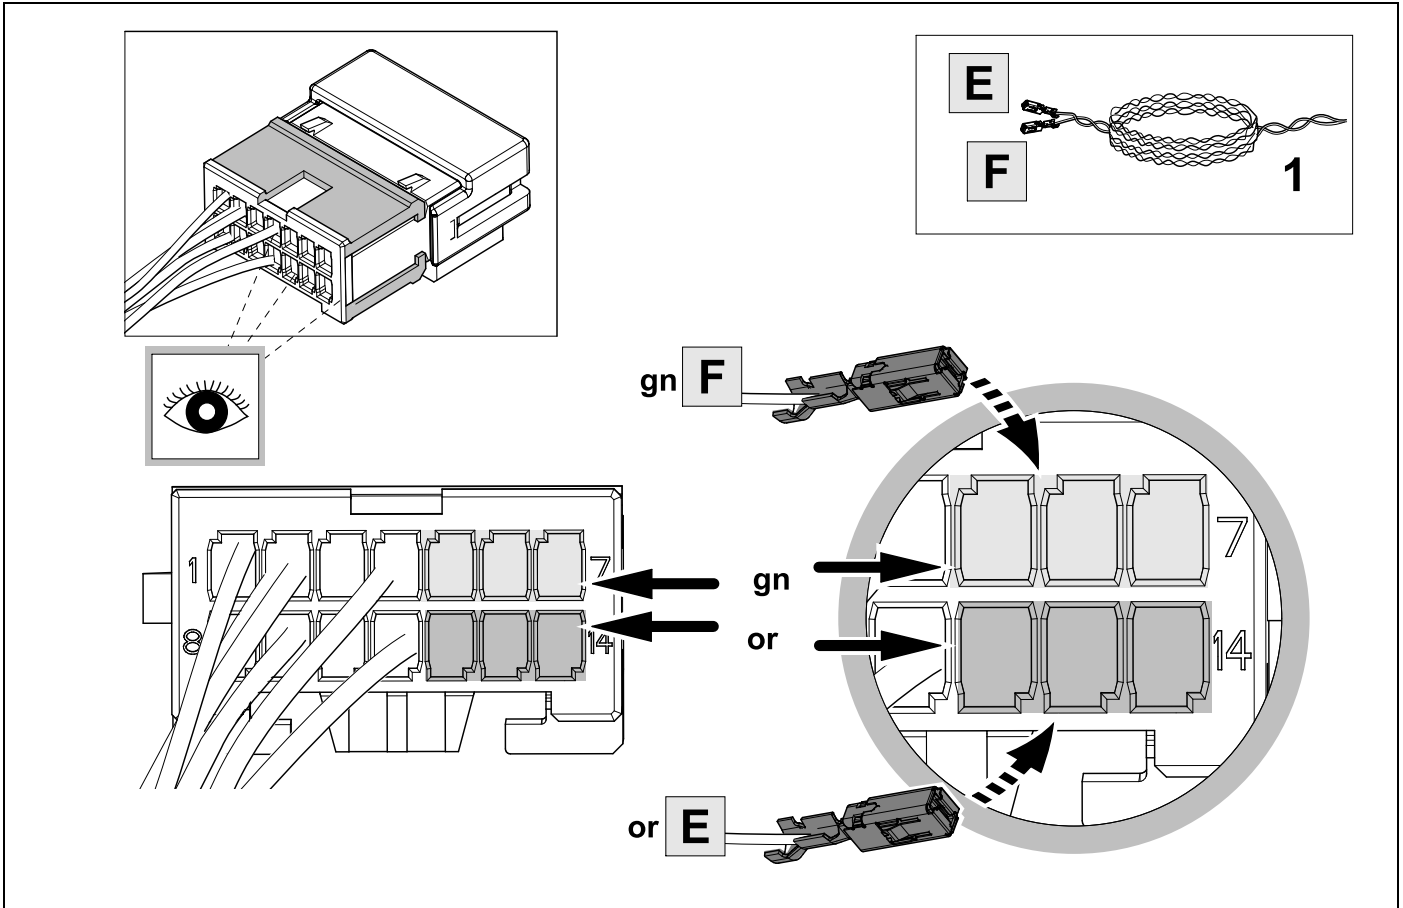


31 Hyundai Tucson



OPTION 2

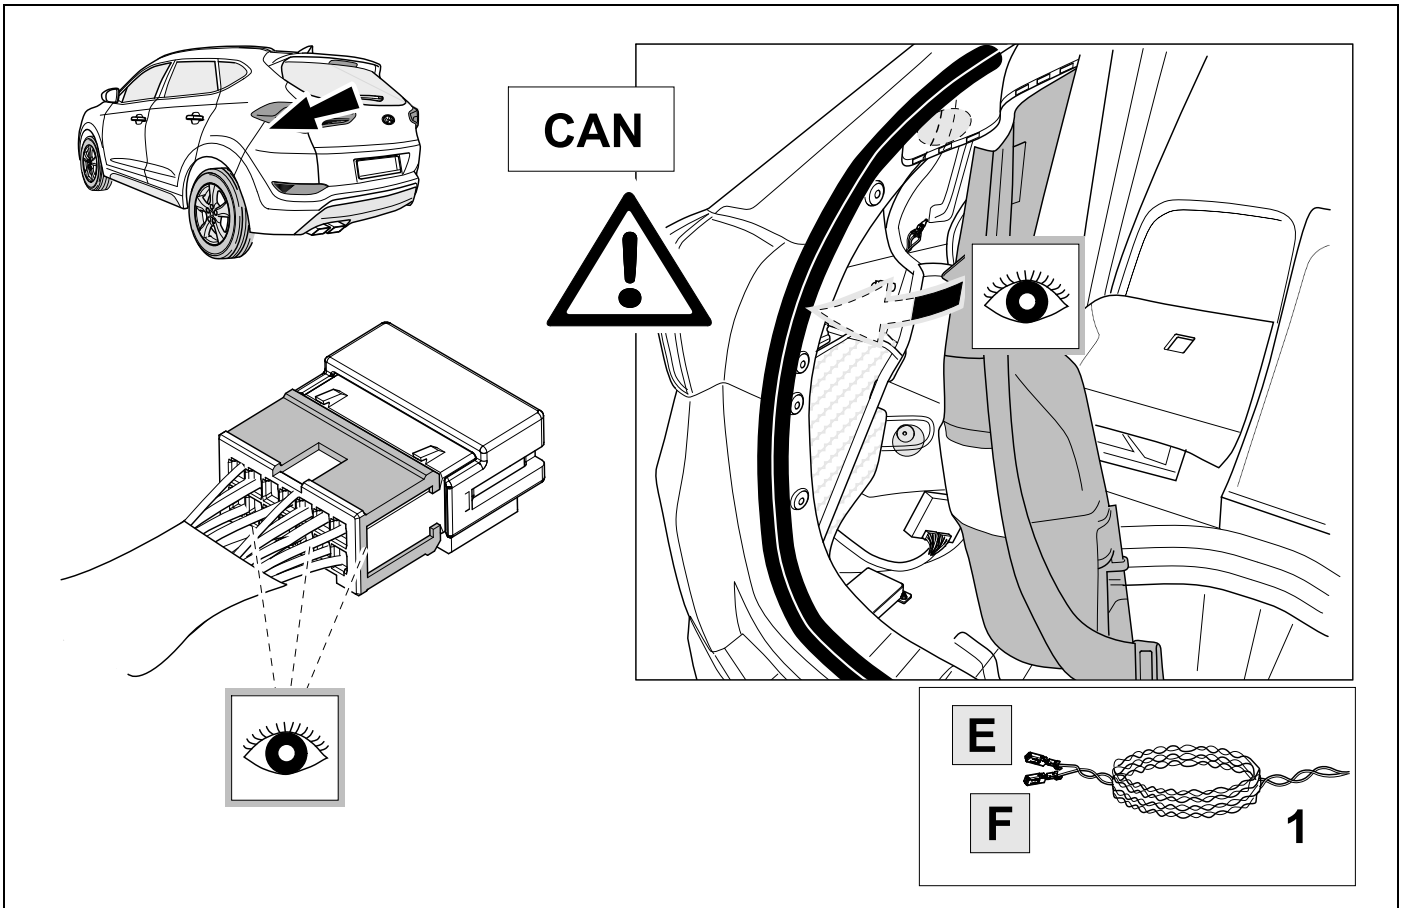

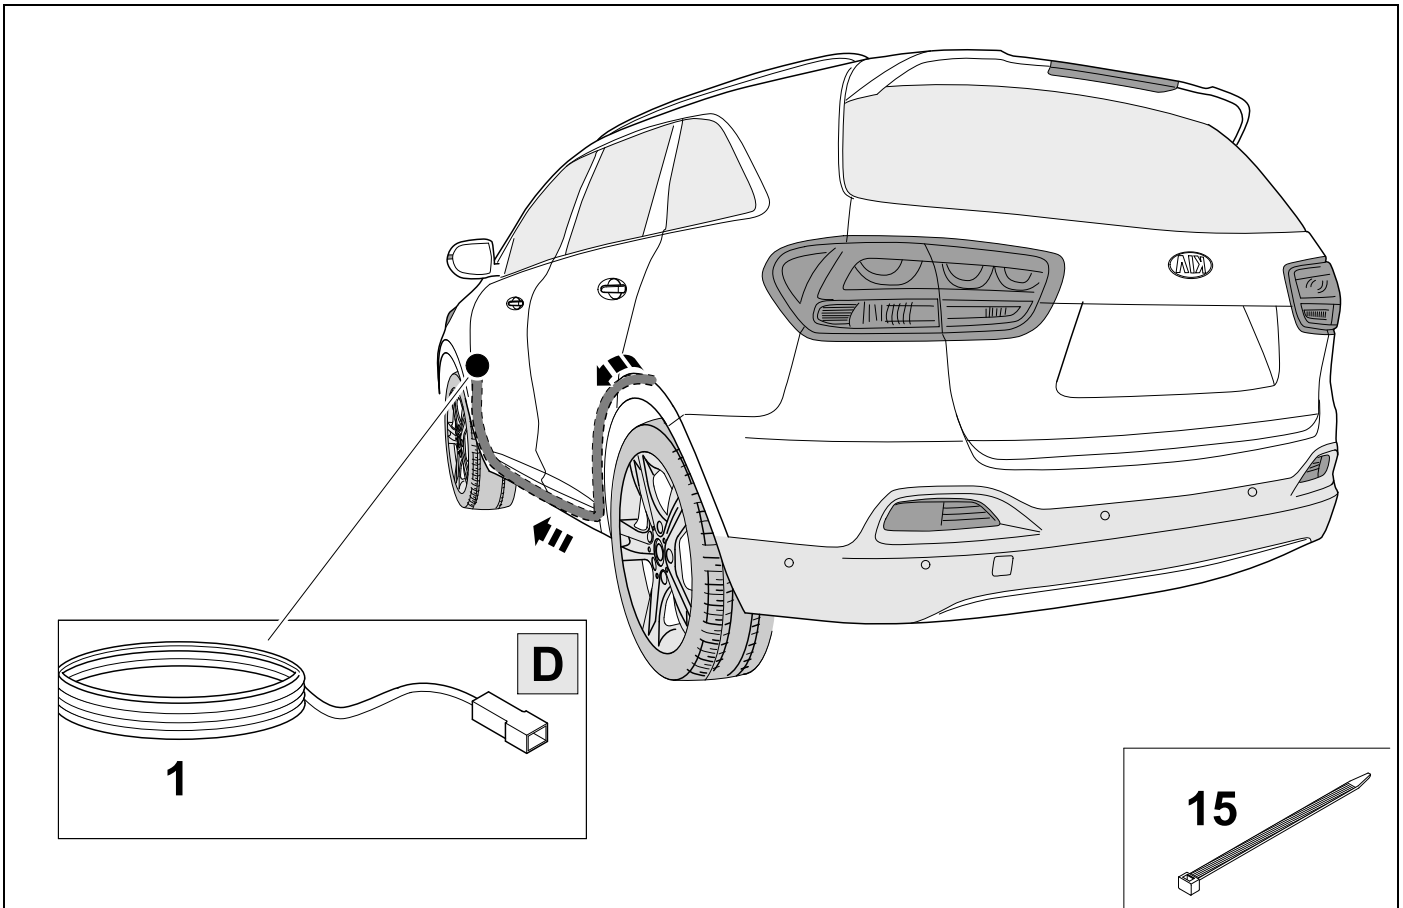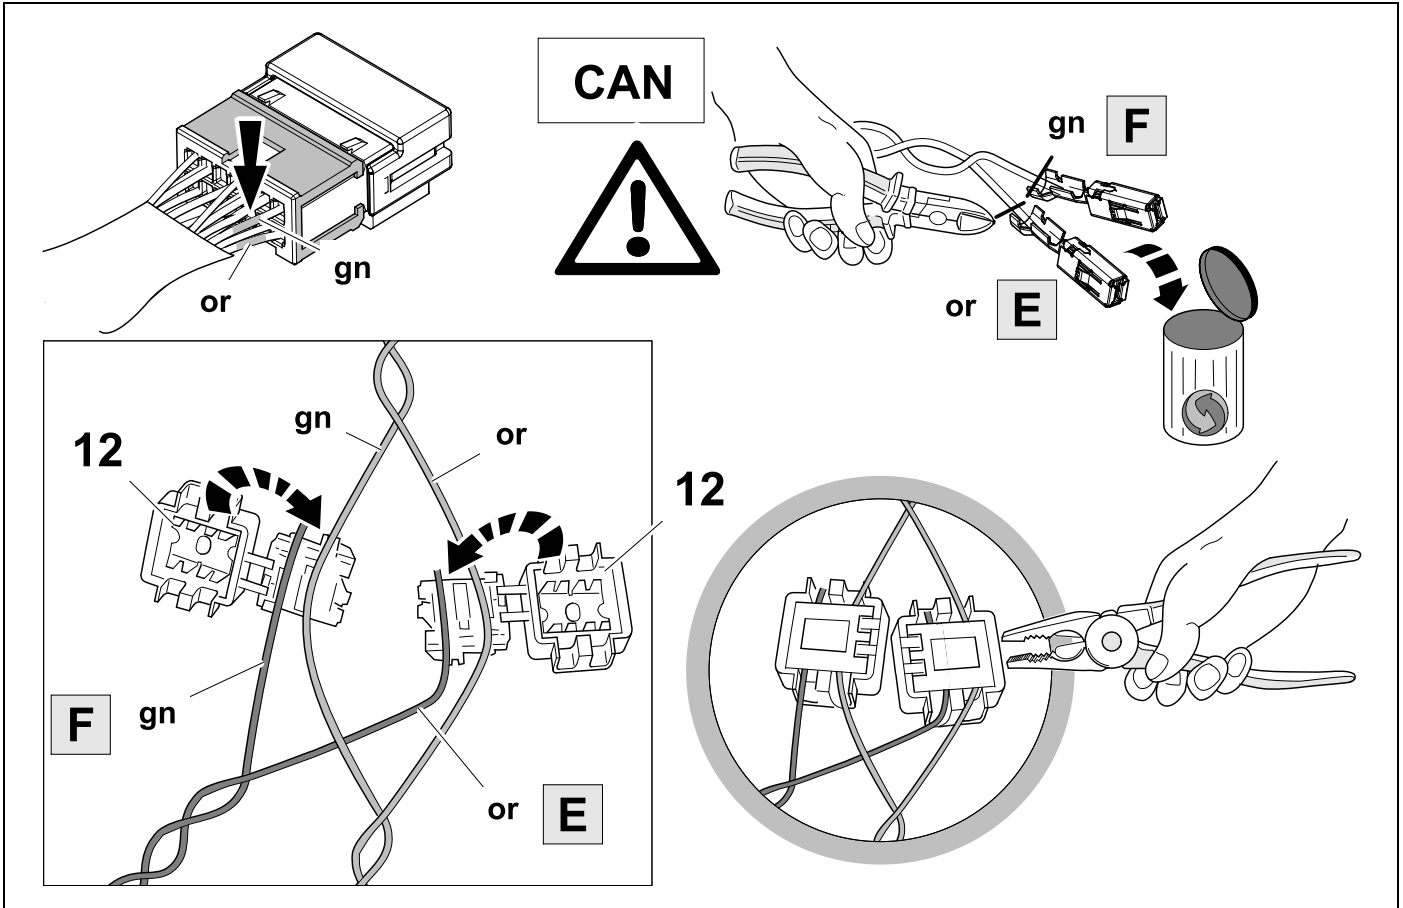

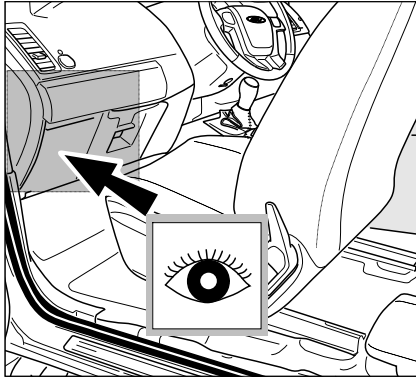


Hot all times!

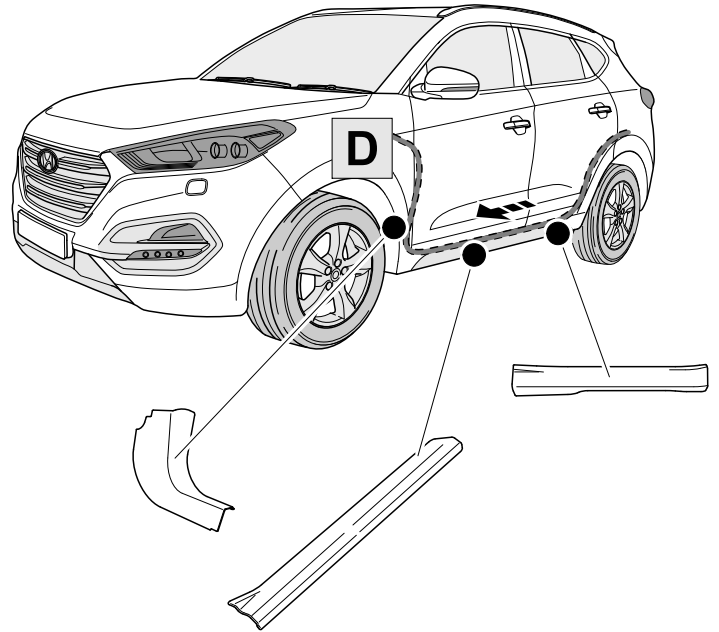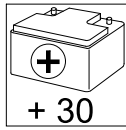


USE THE DESIGNATED FUSE ONLY
USE SOLO LOS FUSIBLES ESPECIFICADOS

7.5A	15A	MODULE	10A	15A	MODULE	7.5A	10A	MODULE	10A	10A	10A
MODULE	7.5A			15A	MODULE	7.5A	10A	MODULE	10A	10A	10A
SMART KEY	15A		20A	10A	15A	7.5A	10A	SMART KEY	7.5A	CLUSTER	7.5A
SMART KEY	10A	MULTIMEDIA	15A	10A	10A	15A	20A	10A	20A	POWER OUTLET	15A
7.5A	7.5A	10A	10A	10A	10A	20A	20A	20A	20A	20A	20A
10A	7.5A	7.5A	10A	10A	10A	30A	30A	25A	25A	25A	25A
10A	10A	10A	10A	10A	10A	25A	25A	25A	25A	25A	25A
10A	10A	10A	10A	10A	10A	25A	25A	25A	25A	25A	25A




91941-D7640



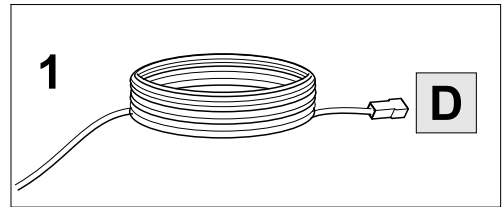


11


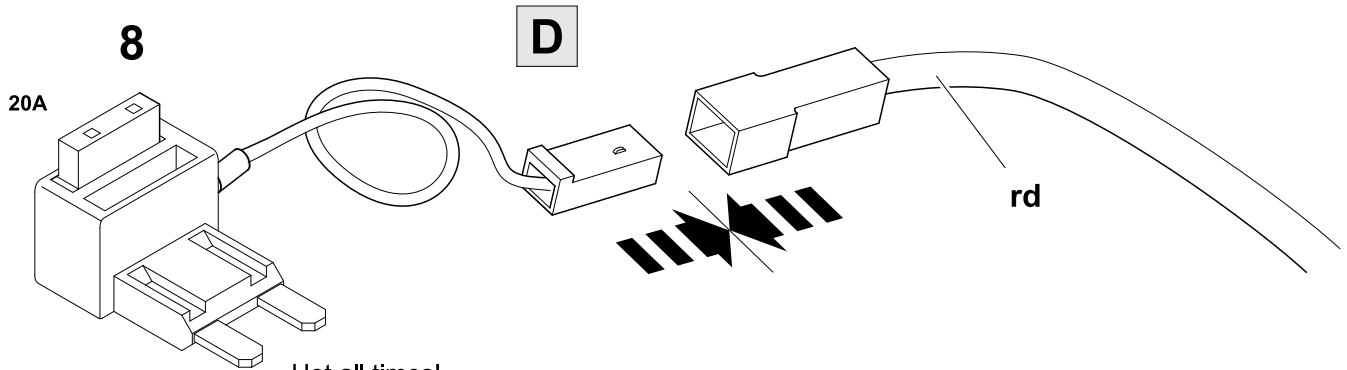


Hot all times!

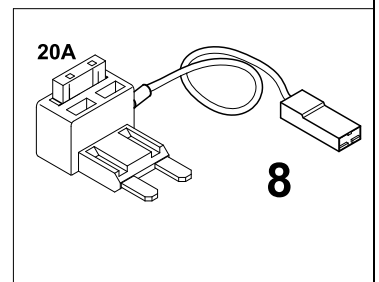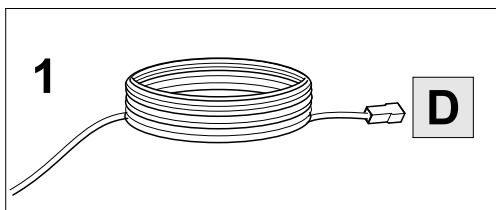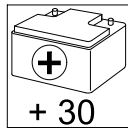

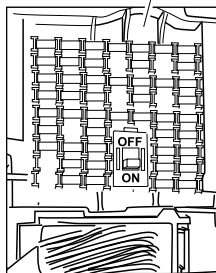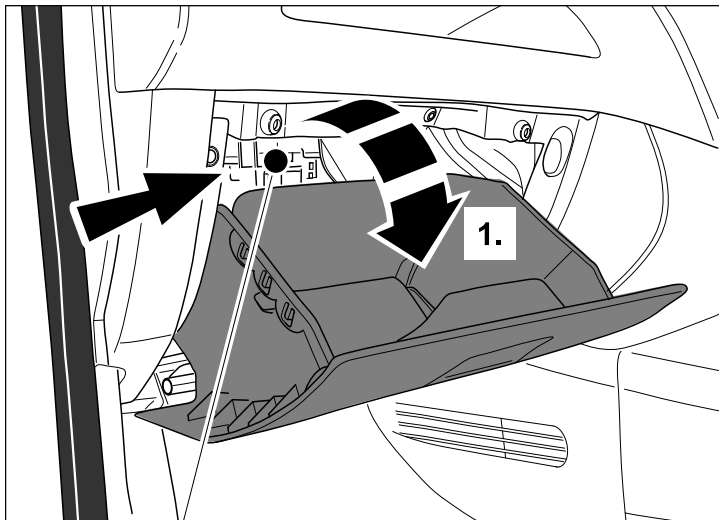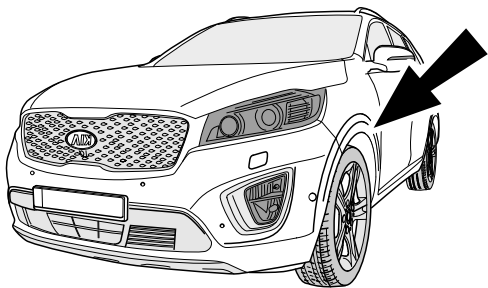



Hot all times!

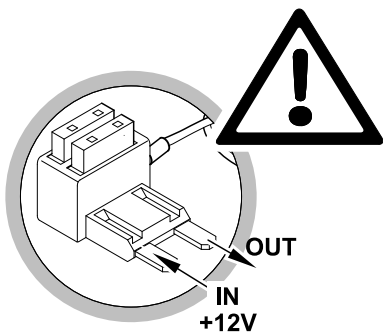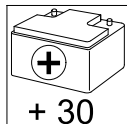


4		4	MODULE	CLUSTER	10A		15A		15A
2		30A	BRAKE SWITCH	GATEWAY	7.5A			CORNERING LAMP	10A
2		7.5A	3 MODULE		10A		7.5A		15A
		7.5A	1 MODULE	IG1	10A				7.5A
		10A	1 SMART KEY	MULTI MEDIA	15A	MEMORY	10A		10A
2	MODULE	10A		2 MEMORY	10A				
	ACC	RR			20A				
		10A	10A	20A	20A				
		10A	10A	20A	20A				
		10A	10A	20A	20A				

OFF
FUSE SWITCH
ON

91941 - C5640

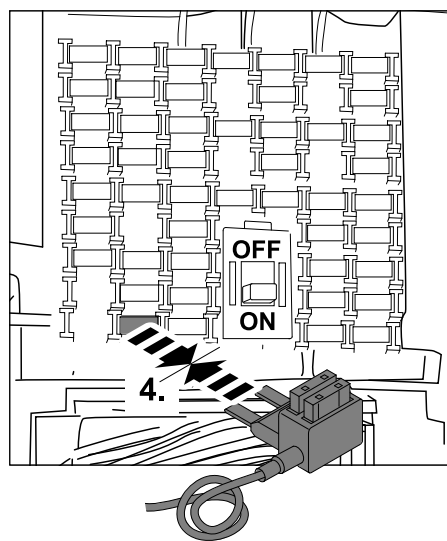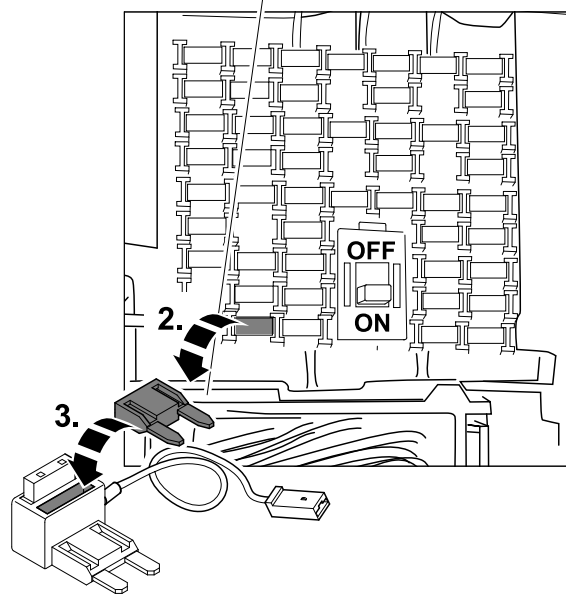

8



20A

37

👁️ ⇒ 43

Kia Sportage

Hot all times!
+ 30

IN +12V

OUT

8

FUSE SWITCH
10A

91941-D9030

USE THE DESIGNATED FUSE ONLY
USE SOLO LOS FUSIBLES ESPECIFICADOS

⚠️

8

38

👁️ ⇒ 43

Hyundai Tucson

Hot all times!
+ 30

IN +12V

OUT

8

FUSE SWITCH
20A


USE THE DESIGNATED FUSE ONLY
USE SOLO LOS FUSIBLES ESPECIFICADOS

⚠️


8




**BRAKE
CONTROLLER
PREPARED**

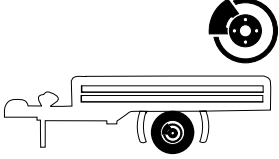


Trailer Brake Preparation

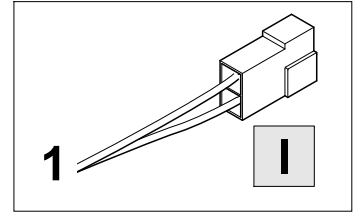


1.

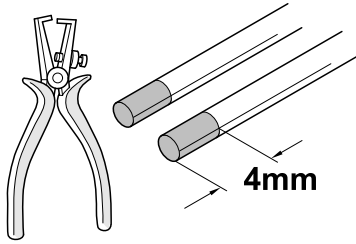


2.

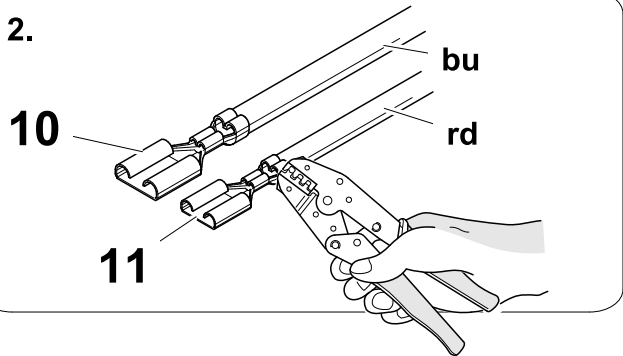

3.

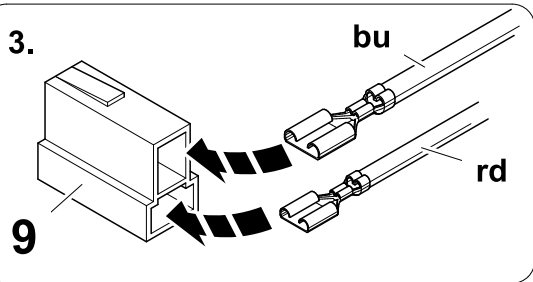





4.

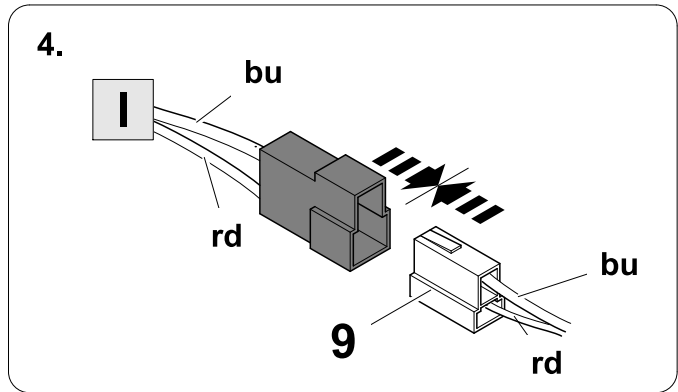

9


10

11

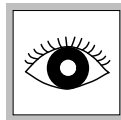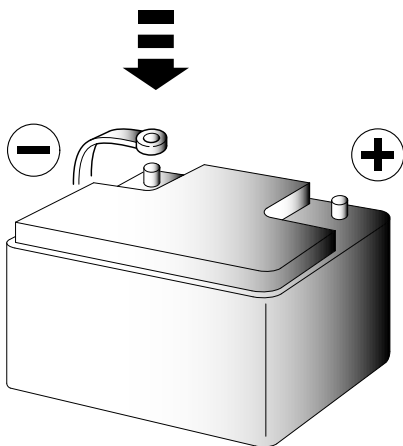


41

CHECK ALL LIGHTING FUNCTIONS

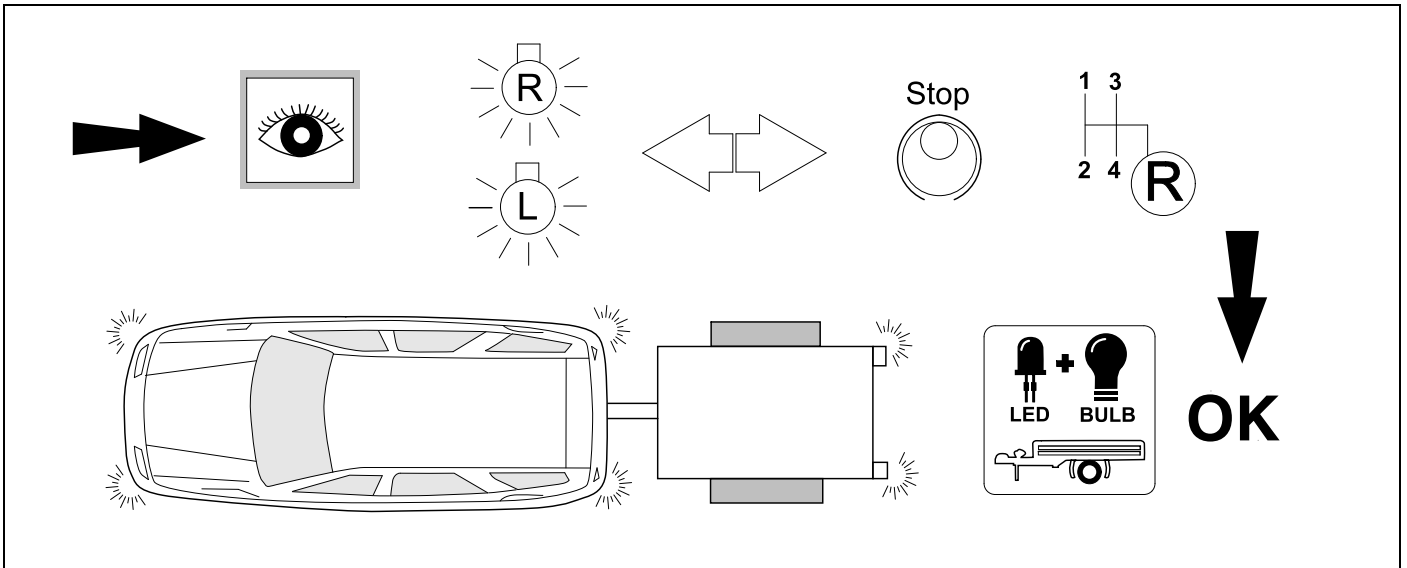


42

CHECK BULB OUT DETECTION

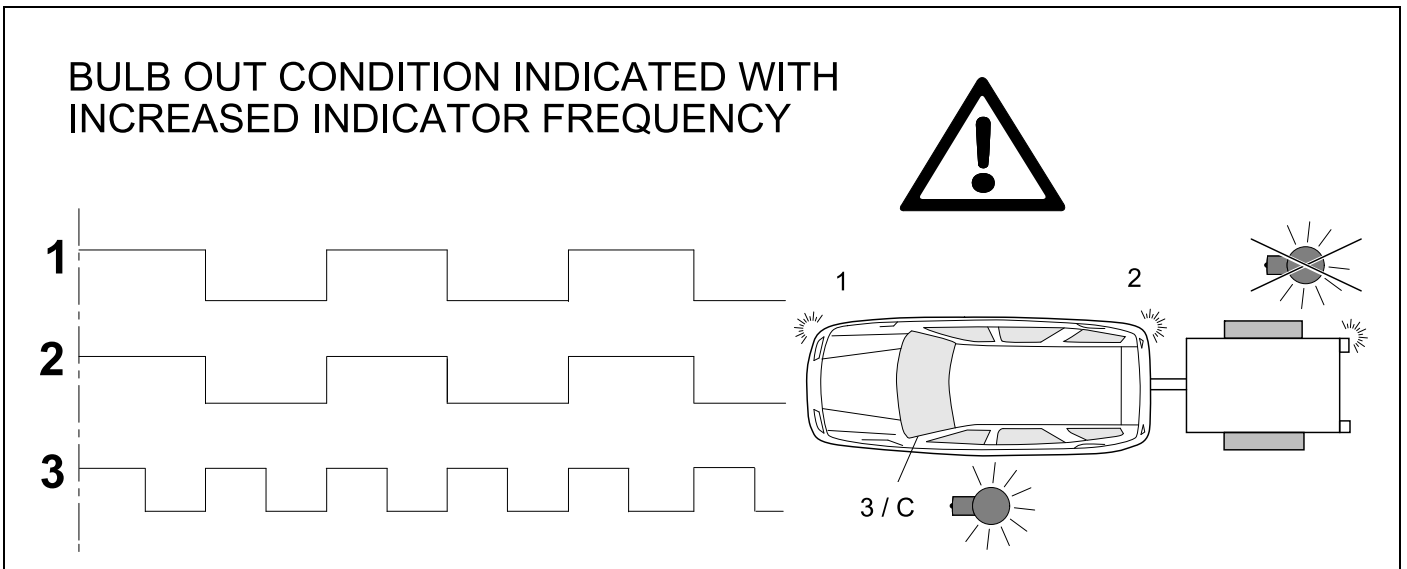


43

⇒ 36 + 37 + 38






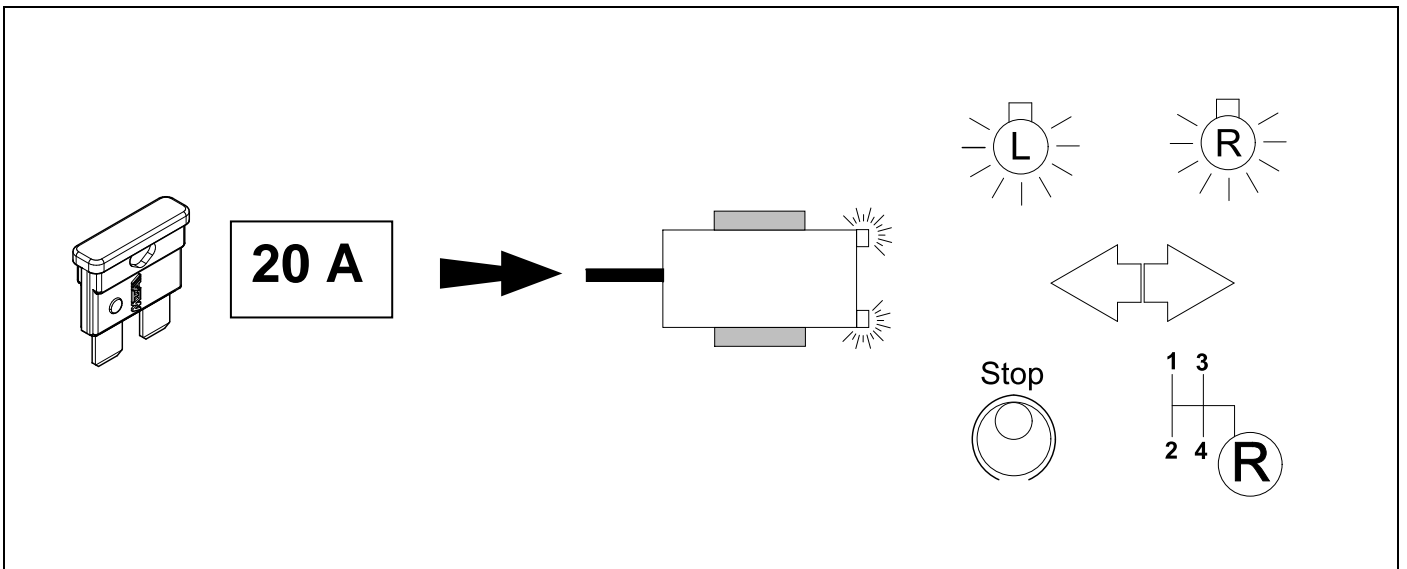



44 CHECK

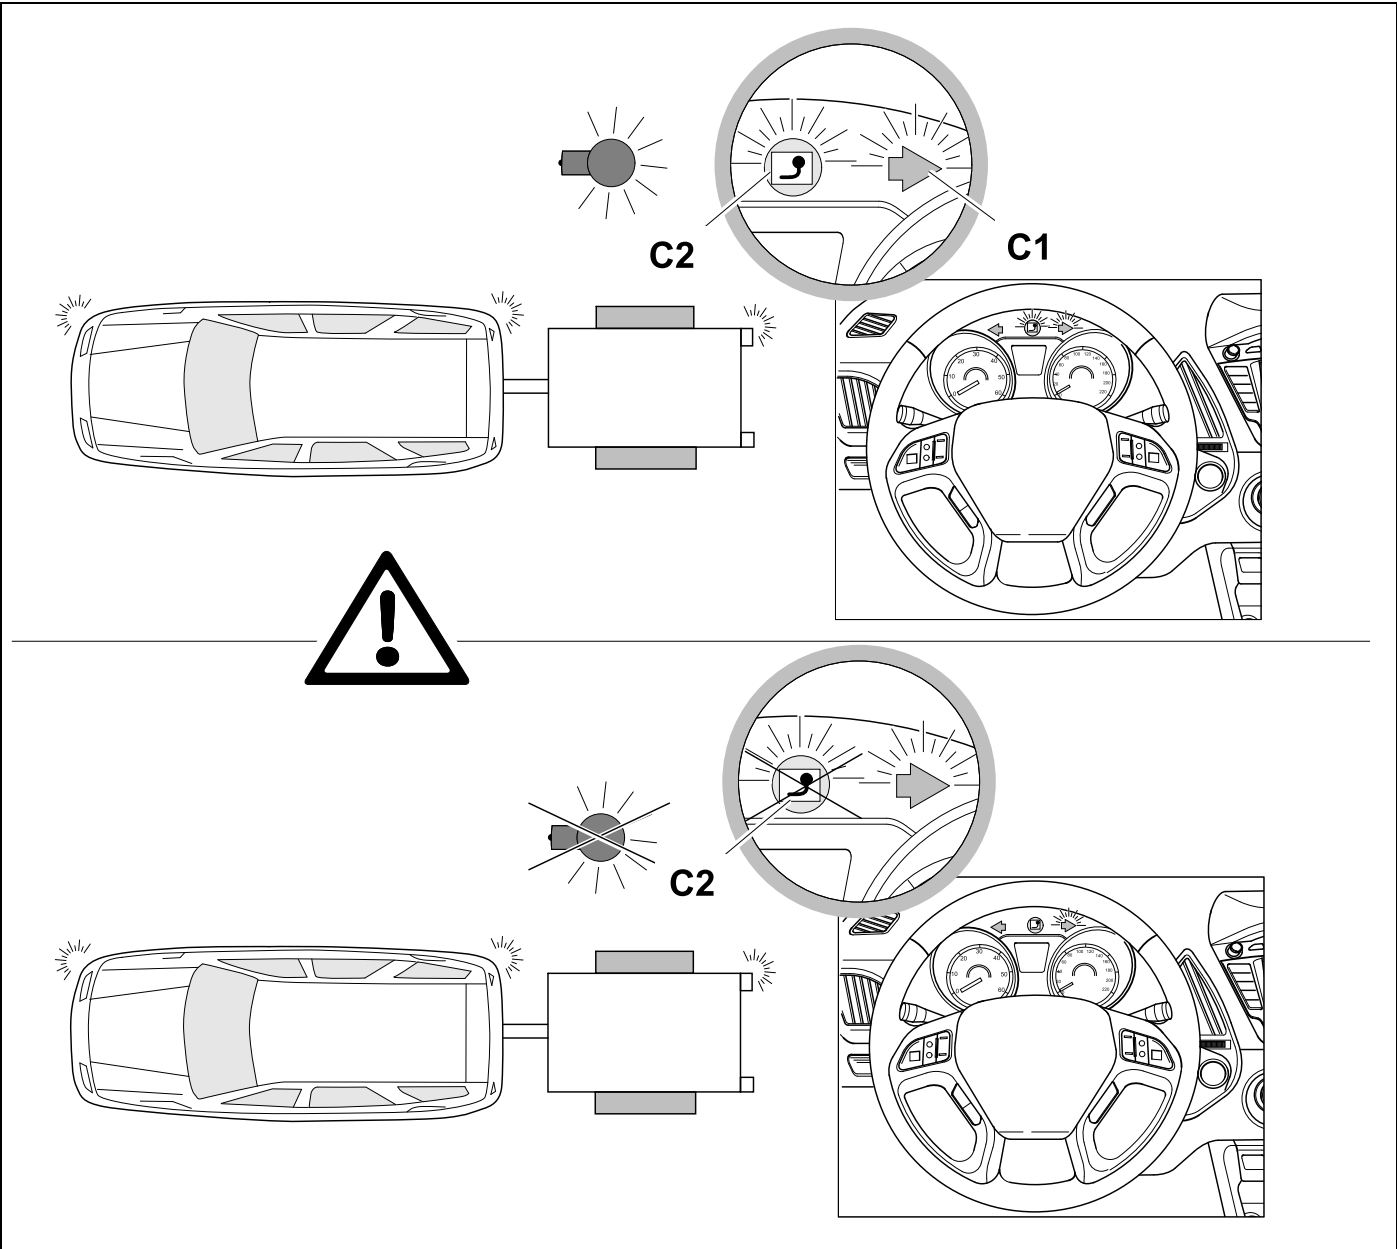

45 PDC INFORMATION

PDC

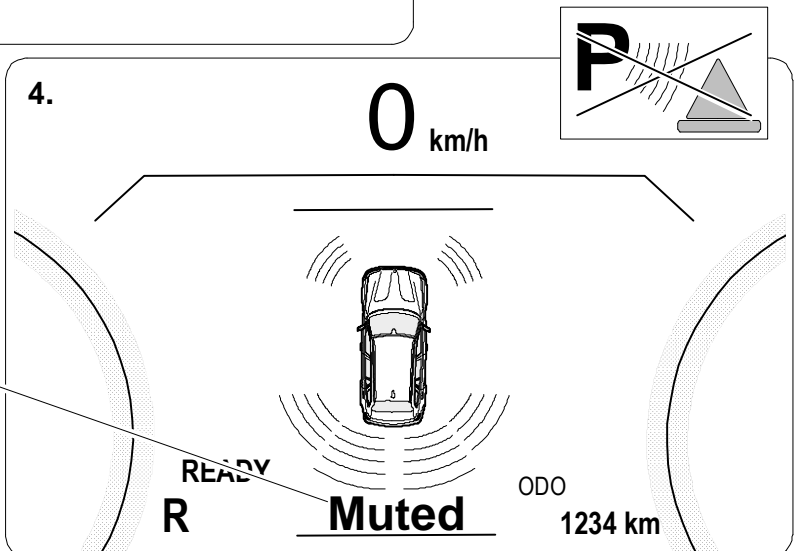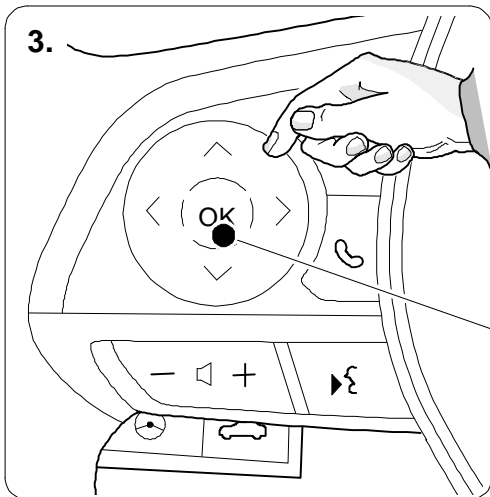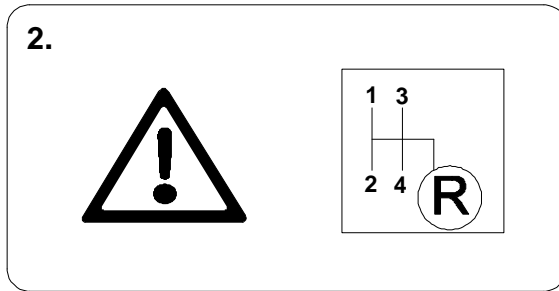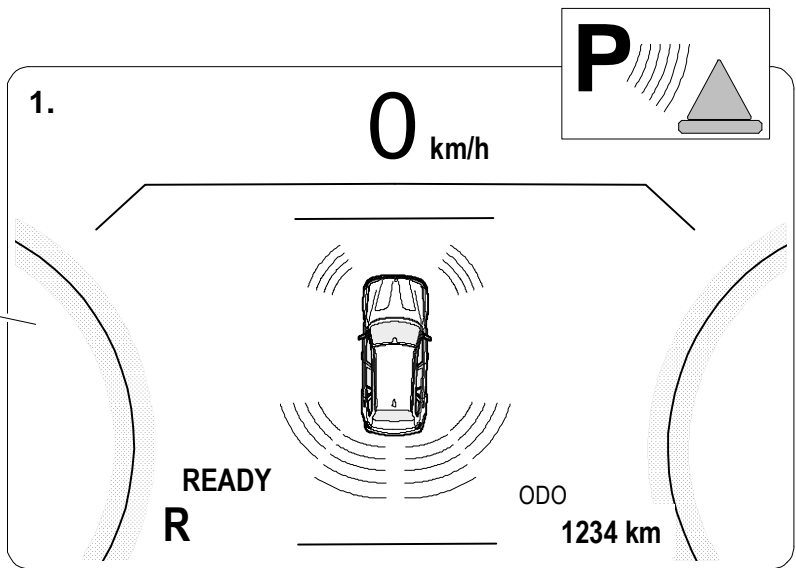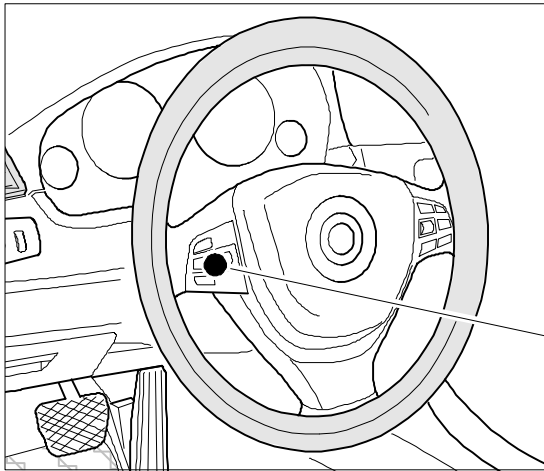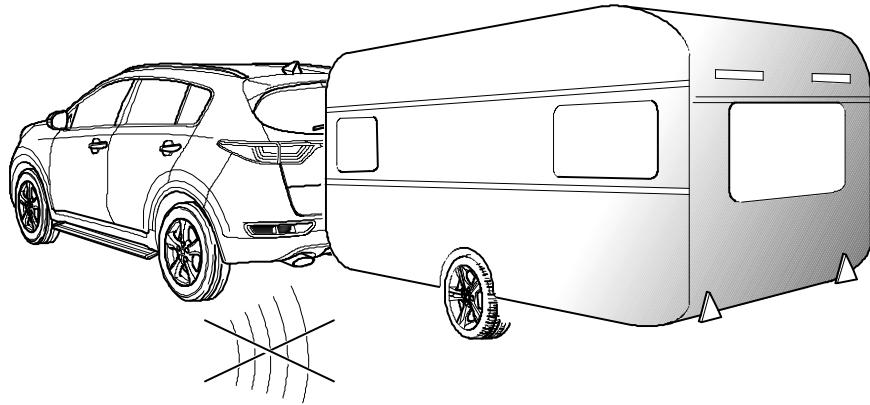

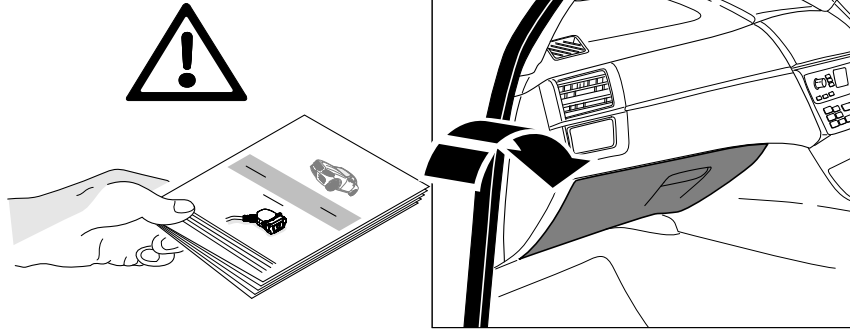

Subject to change in terms of construction, equipment and colour, and may contain errors.
The information and illustrations are non-binding.