


**BORONIA TOWBARS
1/12 EDINA RD
FERNTREE GULLY
VIC 3156
(03) 9752 2642**

**KIA3H / 6 FITTING INSTRUCTIONS:
GRAND CARNIVAL**

REMOVE SPARE WHEEL.
REMOVE PLASTIC PANEL (Fig1) BETWEEN REAR UNDERSIDE PANEL AND REAR BUMPER.
REMOVE PLASTIC BUMPER HOLDING BRACKETS.

Figure1

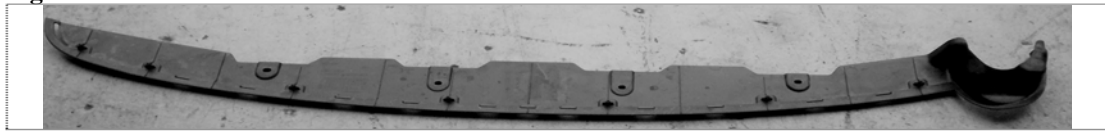

MOUNT TOWBAR TO EXISTING 12mm (4) HOLES IN BASE OF REAR CHASSIS USING 12 x 40 (4) BOLTS COMPLETE WITH SPRING & FLAT WASHERS. TIGHTEN.
DRILL (10mm) TWO HOLES VIA TOWBAR CENTRE SUPPORT ARMS INTO SPARE WHEEL AREA, FIT BOLTS SUPPLIED WITH PLATES THROUGH DRILLED HOLES THEN FIT NUTS COMPLETE WITH SPRING & FLAT WASHERS – TIGHTEN.
BEFORE REFITTING PLASTIC COVER PANEL, IT MUST BE CUT AS PER (Fig 2) BELOW.

Figure 2



FITTING KIT:

4 – 12 x 40 FINE THREAD BOLTS, SPRING & FLAT WASHERS.
2 – 11/2 x 3/8 BOLTS, NUTS SPRING & FLAT WASHERS.
2 – PLATES.
1 (2) – DEE SHACKLES

(2) = HITCH BAR