

**BORONIA TOWBARS  
1/12 EDINA ROAD  
FERNTREE GULLY  
VIC 3156  
(03) 9752 2642**

**MAZ 52 FITTING INSTRUCTIONS  
BA ASTINA HATCH 1994 - 1998  
TOWING CAPACITY 950KG**


REMOVE BOOT FLOOR MAT & INTERIOR PANELS REMOVE BUMPER BAR.  
EXISTING HOLES (2 ON EITHER SIDE OF SUBFRAME) IN VEHICLE WILL BE  
LOCATED BENEATH TAPE & BODY DEADENER.

ONCE HOLES FOUND, FEED TAPPED PLATES ON WIRE INTO SUBFRAME.  
(ONE EITHER SIDE SUBFRAME) & ALIGN WITH HOLES.

FIT TOWBAR UP TO SUBFRAME, ALIGN WITH HOLES & FIT BOLTS SPRING &  
FLAT WASHERS. TIGHTEN.

REFIT BUMPER BAR, INTERIOR PANELS & BOOT MAT. NOTE:

ASTINA MODEL HAS EXTRA BUMPER MOULDING. A SMALL SECTION HAS TO  
NEATLY CUT SO BUMPER CAN BE REFITTED. TEMPLATE BELOW IS EXACT  
CUT OUT MEASUREMENT.

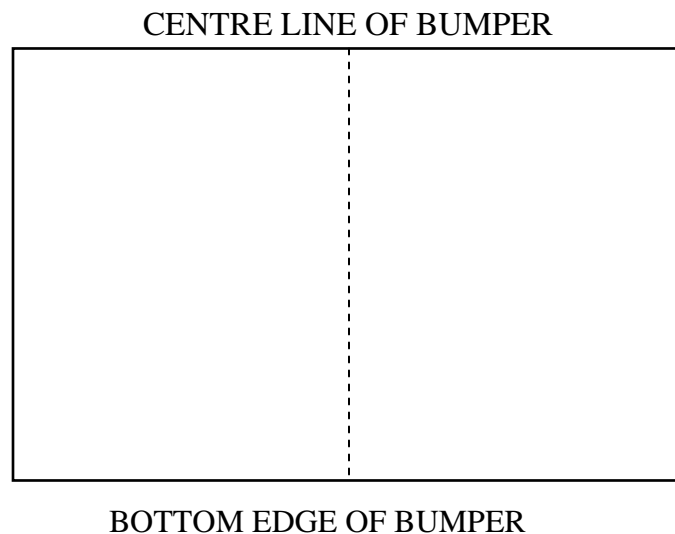

**FITTING KIT**

- 4 – 10 x 45mm BOLTS, SPRING & FLAT WASHERS
- 2 – TAPPED PLATES ON WIRE
- 2 – TAPPED PLATES
- 1 – DEE SHACKLE

**FITTING TIP: HOLE SAW (22mm) BASE OF CHASSIS APPROX 50mm FORWARD  
OF TOWBAR MOUNTING ARMS THEN FIT TAPPED PLATES – THUS BUMPER  
DOES NOT REQUIRE REMOVAL.**