

TRAILBOSS

Towbar Fitting Instructions
 To Suit Holden Rodeo
 Part Number QTHD300B
 Rating 1800 kg


1. Offer the towbar to the vehicle and secure to the outside of the chassis rails using 1/2" x 1 1/2" unc bolts, flat washers, flat washers, spring washers and nuts. (Items 1, 3, 3, 2 and 4).
2. Using the forward lower mounting hole on either side of towbar as a guide, drill a 13mm hole through the chassis and secure with 1/2" x 1 1/2" unc bolts, flat washers, flat washers, spring washers and nuts. (Items 1, 3, 3, 2 and 4).
3. Tighten all bolts to the correct torque settings as listed below.
4. After fitting the towbar to the vehicle, attach the hitchbox collar (Item 5) with the logo at the top, by applying even pressure. Attach the tongue, Hitch pin and "R" pin. (Items 6, 7 and 8).
5. Refer to the diagram below for the location of the load rating sticker (Item 9).

COMPONENT KIT

ITEM	DESCRIPTION	QTY	TORQUE Nm
1	1/2" x 1 1/2" unc bolt	6	125
2	1/2" spring washer	6	
3	1/2" flat washer	12	
4	1/2" unc nut	6	
5	Trailboss Hitchbox collar	1	
6	Tongue, 5000	1	
7	Hitch pin	1*	
8	"R" pin	1*	
9	Load rating sticker	1	

NOTE: Items 7 and 8 are used to secure tongue to towbar for transit packaging.

WIRE LOOM		CODE	
Signal	Wiring Harness	RHS of Vehicle	LHS of Vehicle
RH Turn	Green	GREEN/WHITE	
LH Turn	Yellow	GREEN/BLACK	
Stop	Red	RED	
Tail Light	Brown	GREEN/RED	
Earth	White	BLACK	

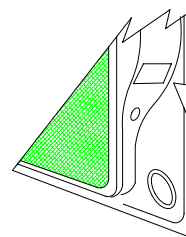

Place load rating sticker (item 9) inside drivers door here

TRAILBOSS

Towbar Fitting Instructions
To Suit Holden Rodeo
Part Number QTHD300B
Rating 1800 kg

