

# TRAILBOSS


## Towbar Fitting Instructions To Suit JEEP CHEROKEE KK 03-08 on RATED AT 2270/227KG Part Number QTJP2L

### **WARNING:**

1. Do not, drill, cut, weld or otherwise modify the tow bar.
2. If you are using electric welding on a motor vehicle, **always** check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could **destroy** any onboard computers. If in doubt, check with the vehicle's manufacturer.

### **General:**

1. Ensure all hardware items have been included.
2. It is recommended that the instructions are read through and completely understood before making any attempt to fit this product.
3. Be wary of any changes to vehicle designs or other accessories that may conflict with the installation of this product.
4. The high tensile fasteners supplied with this product were used to achieve the specified rating. If replacement is required ensure that fasteners of the same rating & quality are used
5. Ensure that all hardware is fastened to torque list below & check fasteners on regular basis.
6. This towbar can be fitted without removing the bumper
7. Remove the towing hook on the passenger side of the chassis as shown in figure1 & discard.
8. Also remove the reinforcement bracket as shown in figure 2 & 4, on the passenger side. The tag on the bracket needs to be cut-off for it to go back on again after fitment of the towbar.
9. Lower the spare wheel of the vehicle.
10. Lift towbar into position so that the holes on the side arm align with mounting points on the chassis.
11. Use M12 bolts to mount the towbar & tighten all bolts to torque listing.
12. Refit the bracket removed on step 8, butting against the sidearm of the towbar as in figure 4.
13. Lift the spare wheel back into position, the spare wheel would butt against the towbar as it is a tight fit. Refer figure 3.
14. Towbar load rating sticker provided with this product shall be conspicuously located on inside rear end of the driver's door. **(See diagram below)**.
15. **PLEASE NOTE:** It is advised to remove your lug or TBM when not actually towing so as to produce a clear view of the vehicles registration plate if obscured, and to also provide maximum available departure angle.

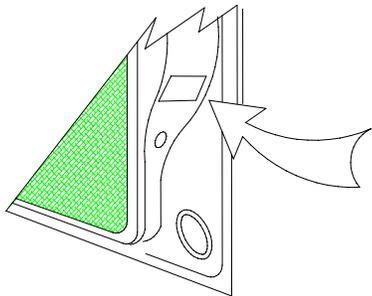

Place load rating sticker  
inside driver's door here

### *RECOMMENDED ASSEMBLY TORQUE LISTING*

#### Diameter Grade 8.8 Bolt

|     |          |
|-----|----------|
| M6  | 9.5 Nm   |
| M8  | 21.7 Nm  |
| M10 | 43.4 Nm  |
| M12 | 77.3 Nm  |
| M16 | 189.8 Nm |

### FOR TOWING PURPOSES ONLY

For towing capacity details please refer to vehicle owner's  
manual or to the manufacturer. Overloading can void your


# TRAILBOSS

## Towbar Fitting Instructions To Suit JEEP CHEROKEE KK 03-08 on RATED AT 2270/227KG Part Number QTJP2L

**FIG 1:** Shows towing hook that needs to be removed from the passenger side & discarded.




**FIG 2:** Shows Bracket that needs to be removed from the passenger side & tab needs to be cut off.

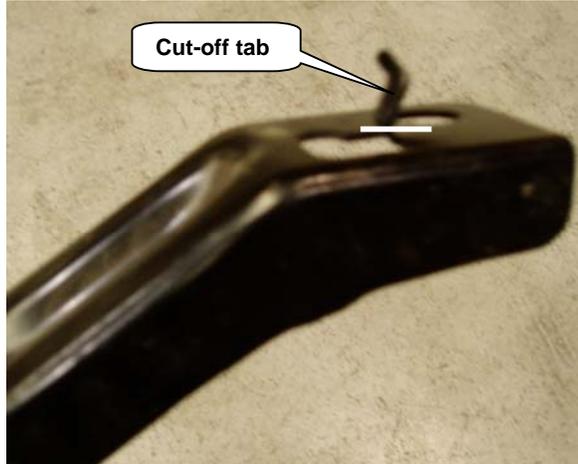

**FIG 3:** Shows towbar being mounted on the vehicle & the spare wheel being lifted back into position.




**FIG 4:** Shows the removed bracket being mounted back onto the vehicle on top of the towbar sidearm.

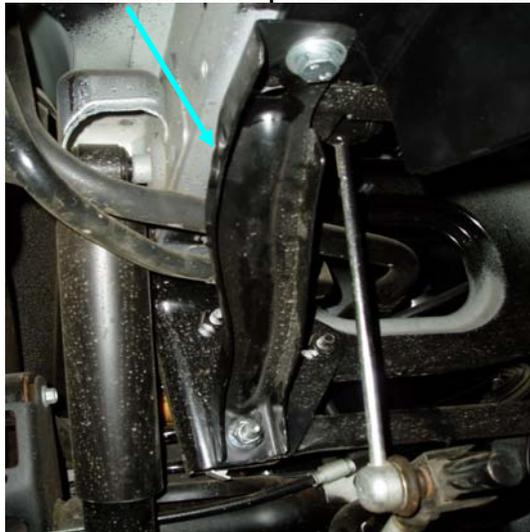

Towbar Fitting Instructions  
To Suit JEEP CHEROKEE KK 03-08 on  
RATED AT 2270/227KG  
Part Number QTJP2L

QTJP2L HITCH ASSEMBLY

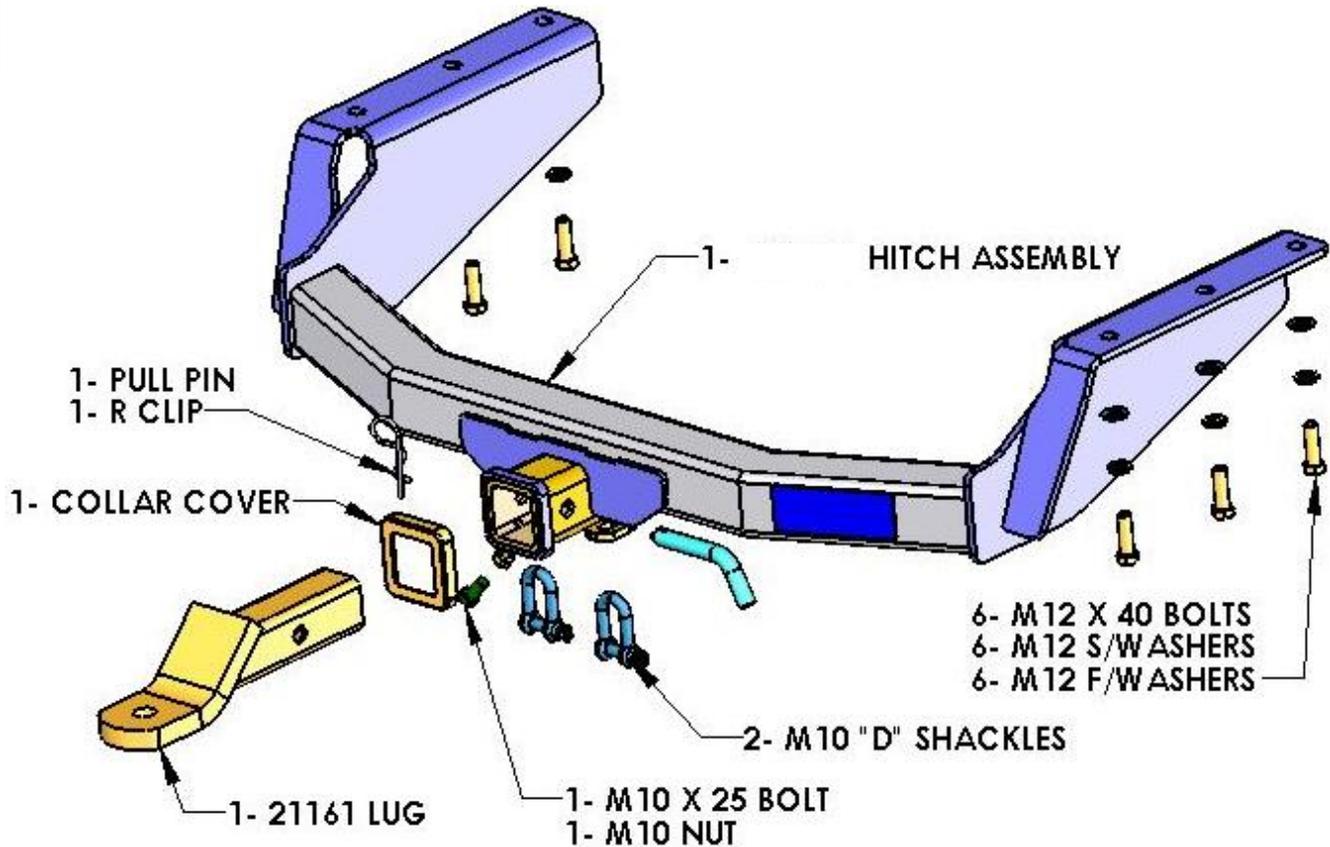

Tow bar Maintenance and Care.

Trailboss recommends that bolt torque's, as listed below, are routinely and regularly inspected and checked for correct tension. Replace any worn or defective parts.

We recommended to remove Tow Ball Mounts (TBM's, tongues or lugs) when not being used for any considerable length of time.

So as to avoid injury, when not towing it is suggested that the tongue, Pull Pin and R-clip are removed then stored in a safe, clean and dry place, away from excessive moisture.

Hitch Pull Pins and spring "R" clips are regularly checked for proper installation. Replace any worn or defective parts.



Wiring Loom Fitting Instructions  
To Suit KK Jeep  
Part Number 100253-WL

Wiring Loom Installation Instructions

KK Jeep  
Part No: 100253-WL

Tail Harness Length Require: 1200mm  
RPA Override Switch Part No: 04848 (If Fitted)

Wiring Loom Installation Time: Approx 30 Mins



Wiring Loom Fitting Instructions  
To Suit KK Jeep  
Part Number 100253-WL

1. Remove the LHS rear tail light by removing its fasteners. Repeat for the RHS
2. Secure the tail harness (tail length: 1200mm) trailer socket onto the towbar mounting bracket using M4 fasteners (not supplied).
3. From underneath the vehicle, connect the tail harness connector to the trailer patch harness (P/No: 100253-WL) tail connector. Waterproof the back of the connectors using silicone or electrical grease.
4. Route the trailer patch harness connector branches to the tail light cavity areas (RHS branch has the ground ring terminal).
5. At the LHS tail light cavity area, retrieve the trailer patch harness connectors. Connect the trailer patch connector to the vehicle tail light connector.
6. At the RHS tail light cavity area, retrieve the trailer patch harness connectors. Connect the trailer patch connector to the vehicle tail light connector.
7. Using a tech screw (not supplied), secure the trailer patch harness ground ring terminal to the vehicle sheet metal at a safe, secure and suitable location.
8. Connect the LHS trailer patch connector into the tail light assembly connector. Repeat for RHS.
9. Refit the tail light assemblies.
10. Test the Trailer socket using a light board or multi-meter.
11. Secure the all harnesses using cables ties (not supplied).
12. Refit all removed parts and secure all fasteners.
13. Place instructions in glove box after fitment.