

Fitting Instructions



SKU

PRODUCT

T4D638

TAG Heavy Duty Towbar to suit Nissan Navara (03/2015 - 12/2020)



Scan for latest
version of these
instructions

SPECIFICATIONS

- Towbar Class: Heavy Duty
- Towing Capacity: 3500kg

IN THIS GUIDE

- Fitment Instructions
- Torque Settings
- Warranty Info

Towbar Fitting Instructions



Step-By-Step Instructions

Warning:

Safety First: Always use correct safety equipment.

This towbar is NOT to be drilled, cut, welded or modified in any way.

Check the surrounding area before drilling into chassis or body panels for fuel lines, wiring harnesses and other components that may be a hazard.

General:

Before fitting this towbar read fitting instructions and check installation hardware is correct.

Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.


After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.

If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change.

If you are not sure then ask your towbar supplier.

Tighten all bolts as specified on the last page.

Towbar Fitting Instructions

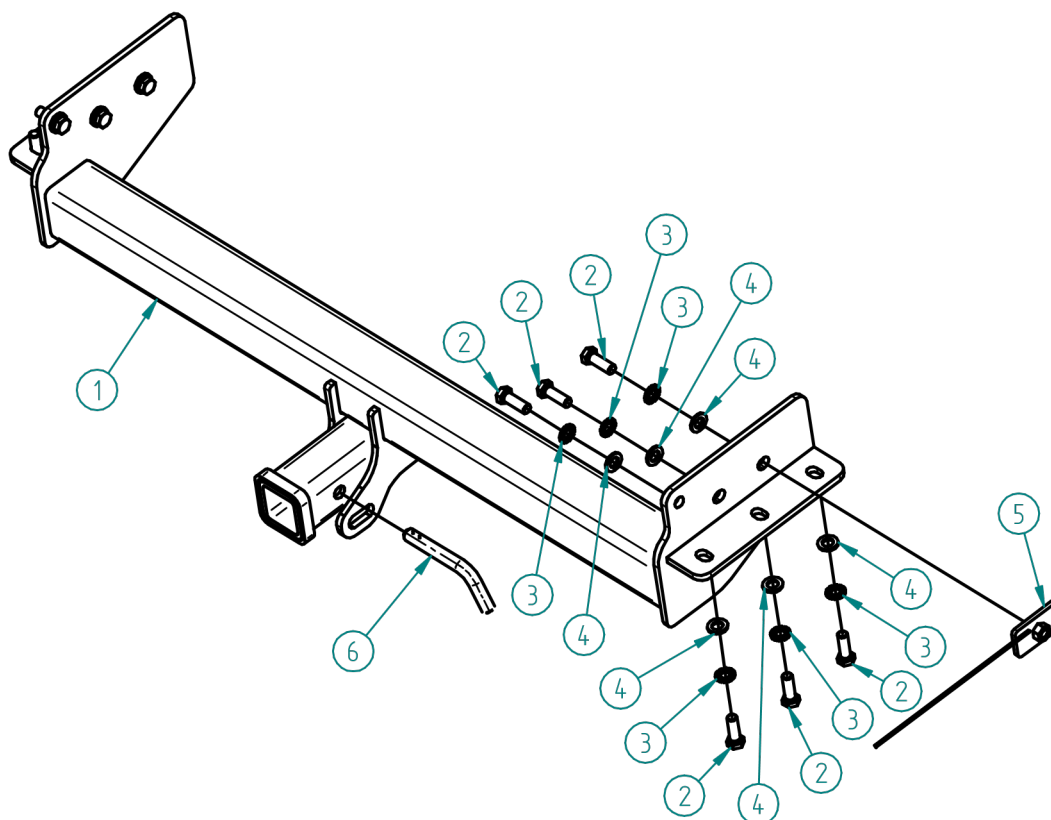

NB! Discard supplied nuts

Scheme 1

T4D638 Hardware KIT	
Item	Quantity
1. Towbar	1
2. M12 x 35 x 1.25 pitch bolt	12
3. M12 shake proof washer	12
4. M12 flat washer	12
5. Nut plate	1
6. Class 4 pin	1
7. Clip for Class 4 pin	1
8. L4045 ballmount	1
9. Compliance plate	1
10. Door sticker	1

Towbar Fitting Instructions



1.



Pic.1.1



Pic.1.2

1.1 Remove and discard towing loop as shown on Pic.1.1 and Pic.1.2

2.



Pic.2.1



Pic.2.2

2.1 Lift towbar between the chassis rails and insert fasteners as shown on Pic.2.1 , Pic.2.2 and Scheme 1

2.2 Tighten all bolts loosely

Towbar Fitting Instructions



3.



Pic.3

3.1 Slide the Nut plate (Item 5. In Hardware KIT list) into the driver side chassis rail as shown on Pic.3 3.2

Tighten all bolts as specified on the torque table

4.

4.1 Fit door sticker inside of the driver's door pillar.

4.2 Fit L4045 ball mount

Torque table for bolt tightening

Metric GRADE 8.8	UNC GRADE 8
M6 – 12.5 Nm	3/8 – 50 Nm
M8 – 30 Nm	1/2 – 125 Nm
M10 – 60 Nm	5/8 – 245 Nm
M12 – 103 Nm	
M14 – 167 Nm	
M16 – 270 Nm	

TAG Warranty Statement

SWD warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 1300 669122 or visit www.swd.com.au