

# Fitting Instructions



SKU

PRODUCT

**T4G522**

**TAG Tail Light Protector to suit Mitsubishi Outlander (11/2006 - 11/2012), Peugeot 4007 (02/2007 - 03/2013)**



Scan for latest version of these instructions

## SPECIFICATIONS

- Towbar Class: Standard Duty
- Towing Capacity: 1050kg

## IN THIS GUIDE

- Fitment Instructions
- Torque Settings
- Warranty Info

# Towbar Fitting Instructions



## Step-By-Step Instructions

### Warning:

Safety First: Always use correct safety equipment.

This towbar is NOT to be drilled, cut, welded or modified in any way.

Check the surrounding area before drilling into chassis or body panels for fuel lines, wiring harnesses and other components that may be a hazard.

### General:

Before fitting this towbar read fitting instructions and check installation hardware is correct.

Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.


After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.

If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change.

If you are not sure then ask your towbar supplier.

Tighten all bolts as specified on the last page.

1. Remove tow hook on passenger side of car.
2. Remove two clips under rear of bumper and bend metal braces lightly to put bar through.
3. To do the cut out on the bumper, find the centre at the bottom of the bumper, and then mark a 100mm x 65mm cut out as shown and cut out.

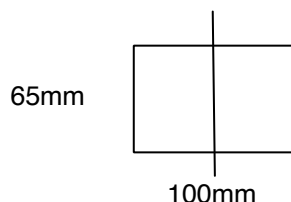

4. Then place bar up in place and fit 2 x 110mm M12 bolts through sides using washers & nuts on both sides, then put in the two M10 bolts in captive threads.
5. Push metal brackets back and replace clips.
6. Fit tongue with pin & clip supplied.
7. Fit door sticker supplied to door.

# Towbar Fitting Instructions



**ECU MUST BE FITTED WITH THIS TOW BAR**  
**ECU SOLD SEPARATELY**

## Torque table for bolt tightening

<b>Metric GRADE 8.8</b>
M6 – 9.5 Nm
M8 – 21.7 Nm
M10 – 43.4 Nm
M12 – 77.3 Nm
M16 – 189.8 Nm

## TAG Warranty Statement

SWD warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 1300 669122 or visit [www.swd.com.au](http://www.swd.com.au)